H620 User Manual

Dear customer,

Thank you for purchasing the Bluetooth Speaker H620. To ensure correct operation, please read this user manual carefully before operation.

Important Safety Instructions

- ◆ Do not use the speaker in special cold, hot, dusty or humid environments.
- ◆ Please avoid the speaker dropping or hitting with a hard object, it may cause other hardware damage.
- ◆ Keep speaker away from any source of heat/fire.

Features

1.Bluetooth Music and Mobile Hands-free Function

Bluetooth 4.2 stereo music playing, support mobile hands-free function.

2.Aux-in mode

Work as the external speaker by connecting to the audio source of computer, mobile, PSP/MP3/MP4 etc.

3.Support FM radio

Technical Data

Bluetooth 4.2 Output: 4W*2

Working distance: 10M Speaker drivers: 45mm*2


DC 5V,1A


Size:191.6X85.5X139.2mm


Package Contents

Speaker, Aux in cable, User Manual, 9V 2A adaptor

Slot and Keys

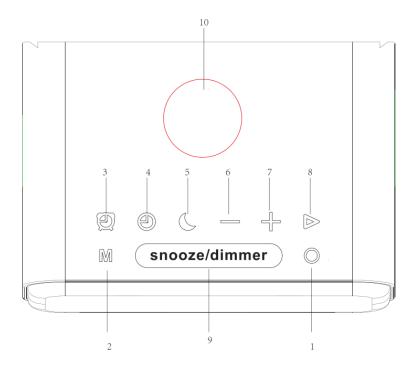

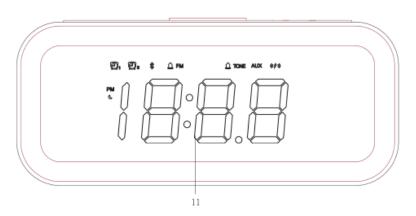

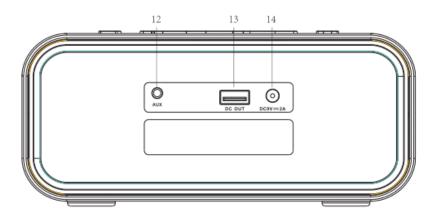

- 1.Power on/off
- 2. Mode
- 3. Alarm setting
- 4. Clock setting
- 5. Turn off setting
- 6. Vol-/previous track
- 7. Vol+/next track
- 8. Play/pause
- 9. snooze/dimmer
- 10. LOGO area
- 11. LED display
- 12. Aux In
- 13. DC OUT (Power bank)
- 14. DC IN

Instructions

1. Power on/off

Long press button for 2 seconds to power on/off the speaker

Tips: Power off speaker just cut the bluetooth music playing and FM radio, speaker still can set Clock, Alarm and can support Wireless charging& power bank function.

2. Brightness adjustment

Short press button "snooze-dimmer" button to switch different brightness of display, 30%-70%-100%-OFF. Default brightness is 70%, and 30% when speaker off.

3.Bluetooth mode

(1) Bluetooth paired

Power on speaker, short press button to choose Bluetooth Mode, indicator will flicker on screen. Turn on Bluetooth of mobile phone, then search device name "VAVA"

VOOM 27", choose it to connect, indicator light will keep on when connected successfully.

(2) Bluetooth Music

Please turn on the mobile or other devices' music player, and speaker will play the selected music. And **short press** button to increase/decrease volume,

long press +/ button switch next/previous song. Short press button to pause/play.

(3) Mobile Hands-free Communication

Answer/Reject the call

Short press button to answer the call

Long press button to reject the call

End the call

Short press button again to end the call

Redial the call

Double press button can dial back the last phone call

Private call

Short press 🖖 = button to adjust volume

Long press +/ button to switch the call between the speaker and cellphone

(4) Disconnect the Current Bluetooth Connection

Long press button to disconnect current Bluetooth connection;

Long press button to disconnect current Bluetooth and clear Bluetooth devices list.

5.FM Radio

Short press button to the FM mode

Long press button to auto-search radio channels and save them.

Speaker will play first radio channel after finished auto-search.

Short press +/ button to next/previous channel

Long press button to increase /decrease the volume

Short press button to pause/mute

6.Aux In

Use the 3.5mm audio cable included to connect the speaker to an audio

source(PC,MP3/MP4, Mobile phone). Short press button to enter "AUX IN" mode.

The speaker will play the music from the audio source. And short press to increase/decrease volume, long press to increase/decrease volume

continuously. Short press button to mute/play.

7.Clock setting

Short press button, the hour display will flicker, short press / to set hour, then short press button to confirm hour, and minutes display will flicker at the same time, short press / button to set minute, then short press button to confirm it.

Tips: (1) The mark PM light up means p.m., if not, it means a.m.

(2) Speaker will keep time synchronous update with IOS system phone when Bluetooth connected, but not for Android system.

(3) The speaker can set clock at any mode

8.Alarm setting

(1)Time of alarm setting

Short press button, the mark for on the screen will light up and flicker. Then short press button to choose Alarm1 setting. (If need switch to Alarm2 setting, short press to choose). When alarm 1/2 setting selected, short press button to choose hour setting, hour display will flicker. Then short press to set hour, and short press button to confirm hour, meanwhile the minute display will flicker to enter setting mode, short press button to set minute, then short press button to confirm it, now finished alarm1 setting.

Alarm ringtones setting, after alarm time confirmed, the mark of on screen will flicker, at the step, short press button to choose the ringtone you like. It is alarm ringtones built-in speaker, on means use the saved FM channel as ringtone, then press button to confirm alarm ringtone.

Tips (1) Pay attention to the mark PM, to set the right time you need.

- (2) Alarm ringtone only can be set the same one both alarm 1 and alarm 2.
- (3) When FM radio as ringtone, it's the latest channel you've played.

(2)snooze

When the alarm rings, short press "snooze" button, alarm will stop, the alarm will rings again after nine minutes. An alarm clock can perform three snoozes.

Tips: (1)The volume of the alarm is 50% of max volume.

(2) Defaut alarm rings as below: Alarm rings for 3 minutes-Pause for 5 minutes- Alarm

rings for 3 minutes-Pause for 5 minutes-Alarm rings for 3 minutes-Alarm off

- (3) Short press any button to stop alarm ringing except snooze/dimmer button
- (4) The speaker can set Alarm at any mode

(3)Alarm off

This alarm clock is a daily cycle alarm. Please do following to cancel the Alarm setting:

Long press button, the or 2 on the display will light up and flicker, short press / to choose you wanted to cancel Alarm(1 or 2), the display will show OFF, then short press button, the or Alarm 2 symbol and "OFF" will disappear, it means alarm cancelled.

9.Timed power off

At bluetooth Mode or FM radio mode, short press the button button to choose time for power off, screen will display 30/60/90/120 and flicker orderly, it means speaker will be power off automatically after 30/60/90/120 minutes. Wait for 10 seconds or short press button to confirm you choosed power off time, then you choosed time number will stop flicker and disappear, the screen return to clock display interface and the mark on the screen light up. The button will automatically extinguished after the timed power off

- Tips: (1) No voice prompt when timed power off.
 - (2) Timed power off only work once, without memory after power on again.

Troubleshooting

What should I do if the speaker can not pair with the Bluetooth device and play music accordingly?

- (1) Please check the specification/ the manual of the Bluetooth device (your mobile or computer), and check if the device can support the A2DP stereo audio transmission. If yes, please turn on the A2DP stereo mode.
- (2) Ensure the speaker at the Bluetooth status, if there are many bluetooth devices around you, it may be hard to scan, then please turn off other devices.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.