

iSound[®]

ISOUND-6770

User guide
Guide de l'utilisateur
Guía de usuario


FCC ID:2ADORBASSONIX

www.isound.com

ENGLISH

Includes

Bassonix, remote, charge cable, audio cable, and user guide

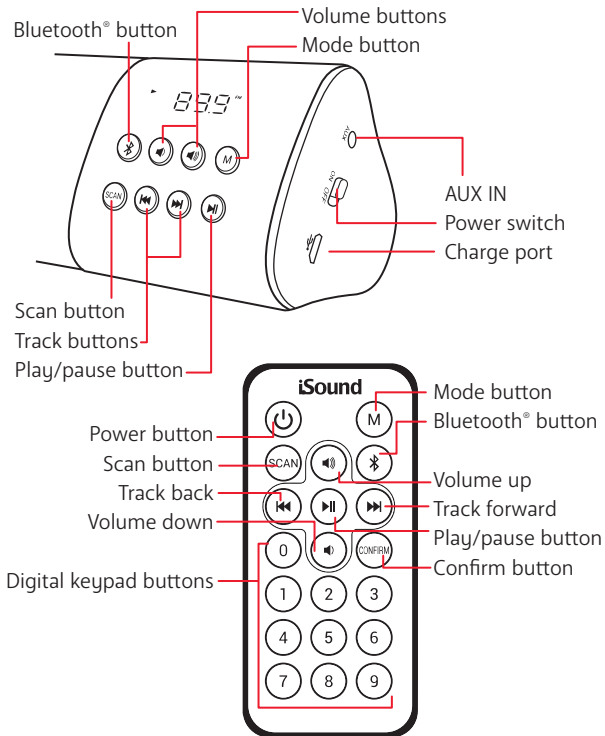

Specifications

Driver size: 52mm x 2

Output power: 8W (4W x 2)

Bluetooth® v4.0, up to 30 foot transmission range

Battery: 2,600mAh

Play time: Up to 8 hours at 70% volume

Charge time: 4 hours

Frequency response: 100 Hz - 20 kHz

Impedance: 4Ω

Speaker button functions

Bluetooth button

- Press and release to go into Bluetooth mode.
- Press and hold for 3 seconds to disconnect from Bluetooth pairing (to allow another user to connect).

NOTE: You can only disconnect a device from Bluetooth while in Bluetooth mode.

Mode button

- Press and release to cycle through the different modes.

Modes include:

- Bluetooth mode – To play wireless via Bluetooth
The screen panel will display “bL” when connected.
- AUX IN mode – To play via audio cable
The screen panel will display volume level and “AUX”.
- PC/speaker mode – To play music from your PC
(when plugged into a PC)
The screen panel will display “PC”.
- FM mode – To play music from FM radio
The screen panel will display the current FM radio station.

Scan button

- Press and hold for 3 seconds to enable the scan/channel save function.

NOTE: The scan button only functions while in FM mode.

Track buttons

In Bluetooth/AUX IN mode:

- Press and release the track forward button to go to the next track.
- Press and release the track back button to go to the beginning of the current track.
- Press and release the track back button twice to go to the previous song.

In PC/speaker mode:

- Press and release the track forward button to go to the next track.
- Press and release the track back button to go to the beginning of the current track.

In FM mode:

- Press and release/hold the track forward/previous track buttons to search through FM radio stations.

Play/pause button

In Bluetooth/PC/speaker mode:

- Press and release to pause the current track.
- Press and release to play the current track.

In AUX IN/FM mode:

- Press and release to mute the current track.
- Press and release to play the current track.

NOTE: When listening to the radio in FM mode or playing music via audio cable in AUX IN mode the play/pause button only serves as a mute button. The track will still continue to play but will remain muted until the play/pause button is pressed again.

Remote button functions

Power button

- Press and hold for 3 seconds to turn on the speaker.
- Press and hold for 3 seconds to turn off the speaker.

NOTE: The power button only sets the speaker to standby mode. You must still use the power switch to completely turn off the speaker.

Mode button

- Press and release to cycle through the different modes. Modes include:

- Bluetooth mode – To play wireless via Bluetooth
The screen panel will display “bL” when connected.
- AUX IN mode – To play via audio cable
The screen panel will display volume level and “AUX”.
- PC/speaker mode – To play music from your PC (when plugged into a PC)
The screen panel will display “PC”.
- FM mode – To play music from FM radio
The screen panel will display the current FM radio station.

Scan button

- Press and hold for 3 seconds to enable the scan/channel save function.

NOTE: The scan button only functions while in FM Mode.

Volume buttons

- Press and release/hold the volume up button to raise the volume.
- Press and release/hold the volume down button to lower the volume.

NOTE: The volume buttons only control the volume of the Bassonix. Device volume should be adjusted separately.

Bluetooth button

- Press and release to go into Bluetooth mode.
- Press and hold for 3 seconds to disconnect from Bluetooth pairing (to allow another user to connect).

NOTE: You can only disconnect a device from Bluetooth while in Bluetooth mode.

Track buttons

In Bluetooth/AUX IN mode:

- Press and release the track forward button to go to the next track.
- Press and release the track back button to go to the beginning of the current track.
- Press and release the track back button twice to go to the previous song.

In PC/speaker mode:

- Press and release the track forward button to go to the next track.
- Press and release the track back button to go to the beginning of the current track.

In FM mode:

- Press and release/hold the next/previous track buttons to search through FM radio stations.

Play/pause button

In Bluetooth/PC/speaker mode:

- Press and release to pause the current track.
- Press and release to play the current track.

In AUX IN/FM mode:

- Press and release to mute the current track.
- Press and release to play the current track.

NOTE: When listening to the radio in FM mode or playing music via audio cable in AUX IN mode the play/pause button only serves as a mute button. The track will still continue to play but will remain muted until the play/pause button is pressed again.

Digital keypad buttons

- Press numbers for specific FM radio stations while in FM mode.

NOTE: The digital keypad buttons only function while in FM mode.


Confirm button

- Press the confirm button after you select a FM radio station when using the digital keypad buttons in FM mode.

NOTE: The confirm button only functions while in FM mode.

Charging your Bassonix

NOTE: Make sure the Bassonix is fully charged before using it the first time.

1. Carefully insert the Micro-USB end of the included charge cable into the charge port labeled .
2. Plug the USB A end of the cable into a powered USB port, such as a computer, laptop or USB AC adapter (not included).
3. The LED indicator light located on the front of the speaker will turn orange. Once the speaker is fully charged, the LED indicator light will turn off.

NOTES:

- When the battery level is below 20%, you will hear a voice saying "Battery level low" and the orange LED indicator light on the front of the speaker will flash. Charge your Bassonix

with the included charge cable.

Connecting via Bluetooth® (first time set-up)

- 1.** Move the power switch on the right side of the Bassonix to the “ON” position and the speaker will say what mode it is in. If the speaker is not in Bluetooth mode, press the mode button until the speaker says “Bluetooth mode” and the screen panel will flash red dash lines.
- 2.** Open the settings on your Bluetooth device (Bluetooth must be enabled).
- 3.** Select Bassonix from the list of Bluetooth devices.
- 4.** Once paired, you will hear “Bluetooth paired” and the screen panel will show the letters “bL” and the Bluetooth symbol.
- 5.** Volume can be adjusted separately from your device or the speaker.

NOTES:

- Your device will automatically find and pair with the Bassonix after the initial pairing. If your device does not automatically pair, turn off the speaker and repeat steps 1-4.
- Sound will not play via audio cable if the speaker is in Bluetooth mode.
- The volume buttons only control the volume of the Bassonix. Device volume should be adjusted separately.

Connecting via audio cable


- 1.** Move the power switch on the right side of the Bassonix to the “ON” position and the speaker will say what mode it is in. If the speaker is not in AUX IN mode, press the mode button until the speaker says “AUX IN mode” and the screen panel shows the volume level number and the word “AUX”.
- 2.** Plug one end of the included audio cable into the AUX port located next to the power switch.

3. Plug the other end of the cable into your audio device.
4. Volume can be adjusted separately from your device or the speaker.

NOTES:

- Sound will not play via audio cable if the speaker is in Bluetooth mode.
- When playing via audio cable in AUX IN mode the play/pause button only serves as a mute button. The track will still continue to play but will remain muted until the play/pause button is pressed again.
- The volume buttons only control the volume of the Bassonix. Device volume should be adjusted separately.

Connecting a computer or laptop via charge cable

1. Move the power switch on the right side of the Bassonix to the "ON" position and the speaker will say what mode it is in. If the speaker is not in PC/speaker mode, press the mode button until the speaker says "PC/speaker mode" and the screen panel shows the letters "PC".
2. Carefully insert the Micro-USB end of the included charge cable into the charge port labeled .
3. Plug the USB A end of the cable into a PC computer or laptop. The LED indicator will light up orange.
4. Volume can be adjusted from your speaker or computer.

NOTES:

- The speaker will also charge while plugged into a PC computer or laptop.
- When you disconnect the Micro-USB cable from the speaker when connected to a computer the speaker will automatically go into Bluetooth mode.
- The volume buttons only control the volume of the Bassonix.

PC volume should be adjusted separately.

Using the FM radio (First time set up)

1. Move the power switch on the right side of the Bassonix to the "ON" position and the speaker will say what mode it is in. If the speaker is not in FM mode, press the mode button until the speaker says "FM mode" and the screen panel shows an FM radio station.

2. Press and hold the scan button on the speaker or remote for three seconds and release for the speaker to begin the scan/channel save function. The speaker will scan and save the FM radio stations with the strongest frequency. Once it is complete with the scan/channel save function the FM radio will start on channel 01.

NOTE: You must allow the speaker to scan all FM radio stations until complete.

3. Short press the track forward or back button on the speaker or remote to browse through the saved channels.

4. Long press the track forward or track back button on the speaker or remote to semi-auto scan FM channels. This allows you to go to a FM radio station that was not saved in the scan/channel save function.

5. You can also use the remotes digital keypad to type in the FM radio station of your choice. For example, press numbers "8", "7", and "8" and hit the confirm button to go to FM radio station 87.8.

NOTE: While playing in FM mode the play/pause button only serves as a mute button. The FM radio station will still continue to play but will remain muted until the play/pause button is pressed again.

Troubleshooting

Issue: My speaker doesn't turn on.

Solution: Try the following:

- Make sure that you fully charge your speaker before use.
- Turn the speaker off and then back on until you hear a voice.
- If you are using the remote, confirm the power switch on the speaker is set to the "ON" position and the battery in the remote is still in working condition.

Issue: My speaker isn't charging.

Solution: Try the following:

- Make sure that the charge port on the speaker is free from dust and debris.
- Make sure that you are using the charge cable that was included with your speaker.
- Make sure there is power coming from the power source.

Issue: My speaker isn't syncing to Bluetooth.

Solution: Try the following:

- Make sure you are on Bluetooth mode.
- Make sure that the Bluetooth setting is turned "ON" on your device.
- Check to see if another user is connected to the speaker.
- Refer to the user guide of your device for Bluetooth syncing instructions.

Issue: My speaker will not go to the FM radio station I selected.

Solution: Try the following:

- Make sure you are on FM mode.
- Make sure you have allowed the scan/channel save function to complete before use of the FM mode.
- If you are using the remote, confirm the batteries are still in working condition.

Issue: I selected my saved FM radio channel with the digital keypad buttons, but it is not going to the channel I selected.

Solution: Make sure you are using the track forward/backward buttons to find your saved FM radio channels. The digital keypad buttons and confirm button can only be used to find a specific FM radio station.

Issue: I brought my speaker on vacation but my FM radio channels are not saved.

Solution: Make sure you fully run the scan/channel save function before each use of the FM radio. FM radio frequencies may change depending on location and each channel may vary.

Important safety precautions

- Incorrect use or incompatibility with your device may result in reduced battery performance or damage to your device.
- Do not attempt to disassemble product.
- Tampering or removing the battery can result in damage to your product, void of warranty, and could cause injuries.
- Store and operate between 32°F – 113°F.
- Do not allow this product to have contact with liquids.
- Do not place this product near a heat source or flame.
- Do not throw or shake.
- Do not operate if it has been subjected to shock or damage.
- Do not crush or puncture the battery.
- Recharge the internal battery every 3 months when not in use to keep the battery in best condition.
- Use soft cloth to clean the exterior. Do not use harsh chemicals or strong cleaning solvents.
- The internal battery must be recycled or disposed of properly. Contact your local waste management office for information on the proper disposal or recycling.

FCC information

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- 1.** This equipment may not cause harmful interference.
- 2.** This equipment must accept any interference received, including interference that may cause undesired operation.

Modifications not authorized by the manufacturer may void the user's authority to operate this device. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna

or transmitter.

Warranty information

All dreamGEAR/i.Sound products come with a limited warranty and have been subjected to a thorough series of tests to ensure the highest level of dependability and compatibility. It is unlikely that you will experience any problem, but if a defect should become apparent during the use of this product, dreamGEAR warrants to the original consumer purchaser that this product will be free from defects in material and workmanship for a period of 120 days from the date of your original purchase. If a defect covered by this warranty occurs, dreamGEAR, at its option, will repair or replace the product purchased at no charge. If a replacement is necessary and your product is no longer available, a comparable product may be substituted at the sole discretion of dreamGEAR.

This warranty does not cover normal wear and tear, abusive use or misuse, modification, tampering or by any other cause not related to either materials or workmanship. This warranty does not apply to products used for any industrial, professional or commercial purposes.

Service information

For service on any defective product under the 120-day warranty policy, please contact Consumer Support to obtain a Return Authorization Number. **NOTE:** dreamGEAR will not process any defective claims without a Return Authorization Number.

Consumer support hotline

877-999-DREAM (3732) (U.S. and Canada only)
or 310-222-1045 (International)

Consumer support email

support@dreamgear.net

Websites

www.isound.com | www.dreamgear.com

Save a tree, register online

dreamGEAR/i.Sound is making the eco-friendly choice to have all products registered online. This saves the printing of physical paper registration cards. All the information you need to register your recent dreamGEAR/i.Sound purchase is available at: **www.dreamgear.com/product-registration**

iSound: The New Sound[®]

www.isound.com