压线(虚刀线,可用手撕开)

×

正面	POLYMER POWER BANK P66 USER MANUAL	Product Guide1Accessories• Host• User manual• Cable2SpecificationModelP66Micro Input5V=2.1AType-C5V=3AOutput5V=2.1AOutput5V=2.3x16.8mmWeight5000mAh/3.7V/29.6Wh	3 Overview 9 Overview	<image/> <section-header><section-header><text><text><list-item><list-item><list-item><list-item><list-item><text></text></list-item></list-item></list-item></list-item></list-item></text></text></section-header></section-header>
----	---	---	--	---

反面

Certificate Of Approval

Date of Manufacture: _____

Quality Controller:

 
Customer Couplet

Product Name:	Customer Name:	
Model:	Address:	
S/N:	City:	
Purchase Date:	ZIP:	
Dealer:	TEL/FAX:	
Dealer's address:	Email:	
	Customer Signature:	

Operation introduction

Charging power bank:


See below diagram, the blue indicator is flickering when charging. It will stop flicker and all the indicators turn in blue after fully charged. Please remove the adapter safely after power bank is fully charged.



Adapter AC 100-240V

Charging digital devices:

 Once the power bank is connected to the digital device, the device shall be charged.



* Blinking light indicates recharging. Solid light indicates fully charged.

Matters needing attention

It is forbidden to put the equipment in high temperature and high humidity environment, lest cause equipment overhea

-ting and internal short circuit and damage to equipment. Storage temperature not more than 45 degrees, high tem -perature storage for a long time can affect the service life of the machine.

maintenance

For a long time do not use the equipment should be the power plug from the outlet of down.At least half a year using a device to ensure the service life of equipment. If the equipment malfunction, please have qualified personnel maintenance, don't disassemble equipment without permission.



 $\label{eq:WARNING} \mbox{--When using this product, basic precautions should} always be followed, including the following:$

a) Read all the instructions before using the product.b) To reduce the risk of injury, close supervision is necessary when the product is used near children.

- c) Do not put fingers or hands into the product.
- d) Do not expose power bank to rain or snow.
- e) Use of a power supply or charger not recommended or sold by power pack manufacturer may result in a risk of fire or injury to persons.
- f) Do not use the power bank in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury to persons.g) Do not use the power bank that is damaged or modified. Damaged
- or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury. h) Do not disassemble the power bank. Take it to a qualified service

person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury to persons.

i) Do not expose a power pack to fire or excessive temperature.

Exposure to fire or temperature above 100° C may cause explosion. The temperature of 100° C can be replaced by the temperature of 212° F.

 j) Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.

k) Switch off the power bank when not in use. SAVE THESE INSTRUCTIONS

NOTE: This equipment has been tested and found to comply with the limits for a wireless power charger and a Class B digital device, pursuant to Part 18 and Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna

 Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help. CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

品名:使用指南 HAME P66 V1.0 国外 料号: 尺寸:115*75mm 材质:80g双胶纸,双面单黑色印刷,风琴折