## CK80177 Bluetooth Speaker ALL CHAR BT SPEAKER MANUAL

Main mode	Bluetooth/Radio/Aux input/TF play.	
Sparker	50MM	
Distance	10 Meters	
Play time	About 8 hours	
Charging Time	About 6 hours	
Response range	100K-20KHz	
Battery	400mAH	
Size	70MM948MM	





M: Mode button: Bluetooth mode/Radio mode/Aux input mode.

VOL -: Short press "VOL -" for Previous song, Long press for Volume down.

VOL - Sich press "VOL-" for Province awag, Long press for Volgene davan

[Smit : Swar press Main-function humon for PlayPhanes/Annoser call; Long press for 2
seconds for Reped call; Daubiecisk for Reduling.

VOL- : Swar press "VOL-" for Nest song, Long press for Volume up.

MIC: Managhare.

ONODE?: Power cound?

TO-God: Time to Fill Condition play masie.

USB Cornect compane.

OCSW- Changaragora.

Johns.

3. Usage  $\label{eq:button} I) Power on Plysh the button to the right, The LED indicator is on,$ 

Power off: Push the button to the left, the LED indicator is off.

2) Pairing: under the state of power-on, open the mobile phone's BT function and search BT devices, After search, select "ALL CHAR BT SPEAKER" to pair. When pair successfully, the blue light is on.

3) Play/Pause: press the multi-function button one time to stop when playing music, and press the multi-function button again to play when pause,

4) Answer/End call : Press the multifunction button one time to answer phone call and press the multifunction button again to end the call. Once you finish the call, double click to redial the last

5) Volume up or Next song: long press button the volume up or short press Next song.

6) Volume down or Previous song: long press button the volume down or short press button previous song

7)"Mode" Buttor: Bluetooth mode/Radio mode/Aux input mode shift. 8)TF card Function: Press "M" button to FM mode status, Listen music when Insert TF card.

9) During charge, the red light is on. When charge fully, the red light is off.

## 3 Attention

- 1) Full charge when first time using.
- 2) Keeping away from wet.
- Please charge on the USB port of computer, or the output of 5V charger.
- Unused for long periods, charge and discharge once a week.
   When it is first time to play music, please turn down the volume in order to better function and have a long-term excellent audio quality.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.