

# Get to know your Smart Vent™


## LED color key\*

- Double blinking green means your Smart Vent is attempting to pair with your Smart Bridge or partner hub
- Triple blinking green means your Smart Vent has paired
- Double blinking yellow means your Smart Vent is attempting to rejoin the network
- Double blinking white means you are identifying a Smart Vent
- Orange means heating
- Blue means cooling
- Purple means fan mode or Smart Vent activity
- Double blinking red means there is an obstruction. Reset your Smart Vent by ejecting and reinserting the batteries

\*For more information and updates, visit:  
[help.keenhome.io](http://help.keenhome.io)




Comfort starts here.

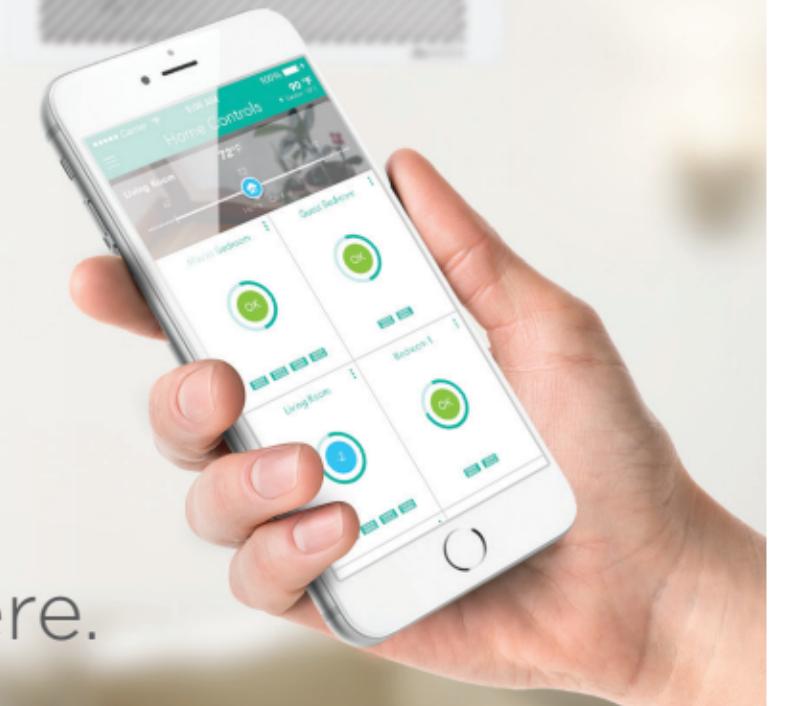

# Meet Your Smart Vent™

- 1 Aerodynamic airfoil louvers for quiet operation
- 2 4 x AA batteries provide years of operation (included)
- 3 Screws to secure if needed (included)
- 4 Manual louver control slider

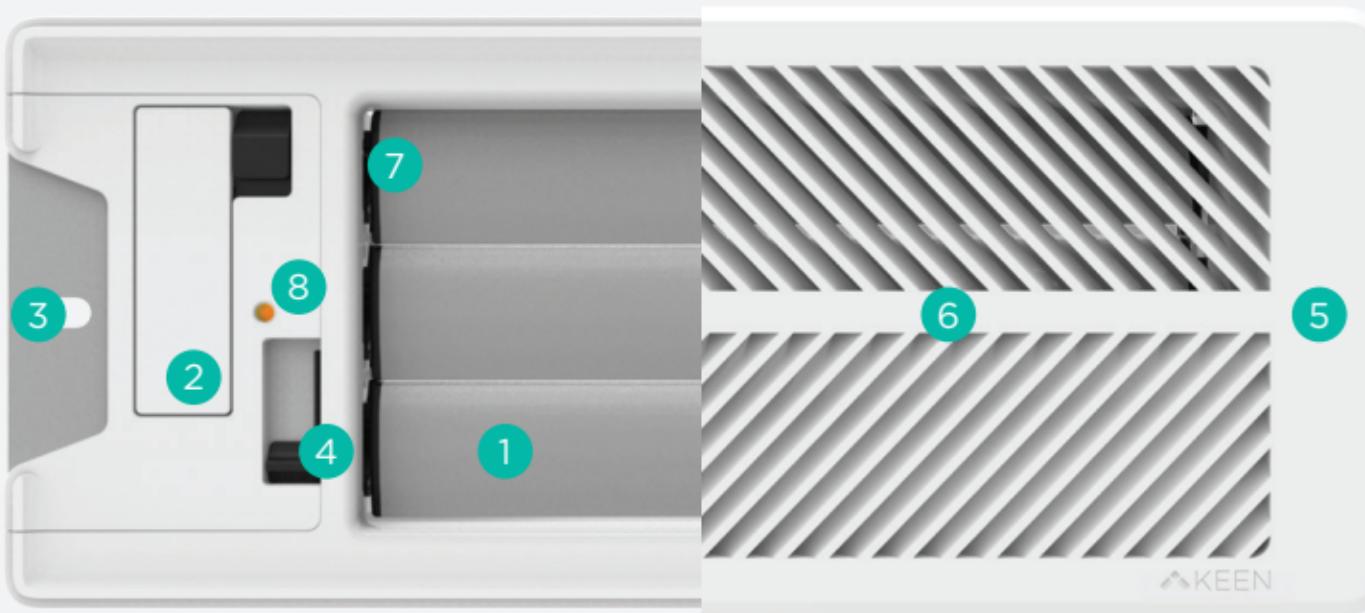

- 5 Magnetic faceplate for easy removal and cleaning
- 6 Steel reinforced faceplates can support over 300 lbs
- 7 Factory reset button (behind louvers)
- 8 LED status indicator

## FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

## IC warning:

### - English:

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with IC RF radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

### - French:

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Ce matériel est conforme aux limites d'exposition aux rayonnements rf de IC énoncées dans un autre environnement.

Ce matériel doit être installé et exploité à une distance minimale de 20 cm entre le radiateur et votre corps.