 


Bluetooth Earphone

User Manual

 
 
Model:BTW-116

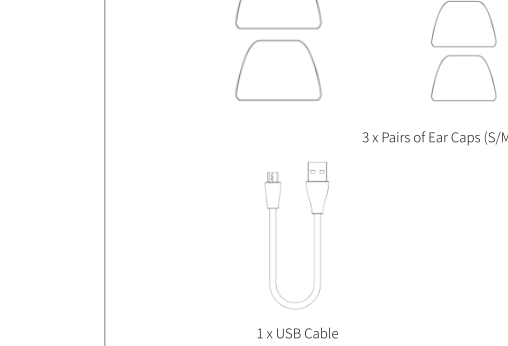

Manual Download 01

Q & A 01


English Version 02

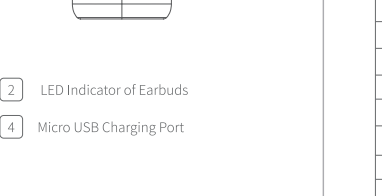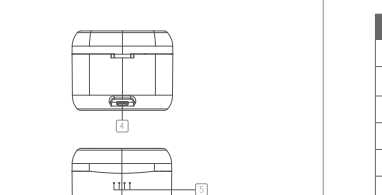


Package Contents



 
2 x Wireless Earbuds

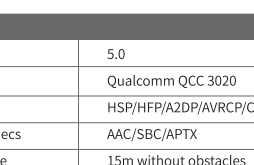


1 x Charging Case

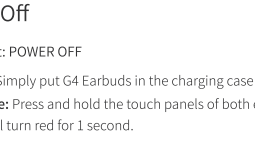

3 x Pairs of Ear Caps (S/M/L)

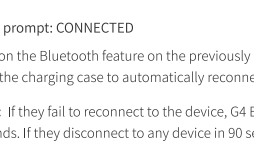

1 x USB Cable

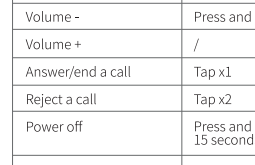 


1 x User Manual


Product Overview



 
1 Inductive Touch Sensor

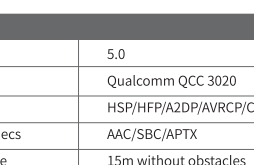

2 LED Indicator of Earbuds

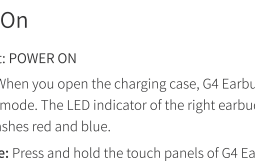

3 Charging Pins of Earbuds

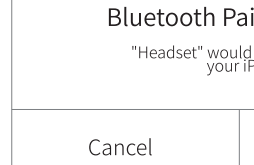 

4 LED Indicator of Charging Case

Technical Specifications

Earbuds	
Bluetooth Version	5.0
Chip	Qualcomm QCC 3020
Support Profile	HSP/HFP/A2DP/WRCP/CVC
Support Audio Codecs	AAC/SBC/APTX
Transmission Range	15m without obstacles
Voice Prompt	English
Frequency Response Range	20Hz-20kHz
Sensitivity	97.5dB
Speaker Driver Diameter	6mm
Resistance	160±15%
Compatibility	Most smartphones, tablets and Bluetooth devices
Earbud battery	50mAh Li-polymer battery (single earbud)
Charging Time	1 hour
Music time	6 hours
Talk Time	5 hours

Charging Case	
Battery capacity	500mAh
Charging plug	Micro USB
Charging time	1 hour
Input	5V/1A
Working voltage	5V/300mA

How to Use

Power On

Voice prompt: POWER ON
 Auto Mode: When you open the charging case, G4 Earbuds will automatically power on and enter pairing mode. The LED indicator of the right earbud firstly turns blue, and then alternately flashes red and blue.
 Manual Mode: Press and hold the touch panels of G4 Earbuds until the LED indicator of the right earbud turns blue.

Power Off

Voice prompt: POWER OFF
 Auto Mode: Simply put G4 Earbuds in the charging case to automatically turn off.
 Manual Mode: Press and hold the touch panels of both earbuds for 15 seconds and the LED indicators will turn red for 1 second.

Stereo Mode

1 First Time Pairing
Voice prompt: PAIRING, CONNECTED
 Turn on your Bluetooth device, search and select "G4R" or "G4L" to connect. After connecting L or R, Android or Apple device will pop-up a pairing request for another earbud, select "Pair" to complete the process.

Bluetooth Pairing Request



Mono Mode

Right or left earbud of G4 can be used as a mono wireless earbud.
 ① Remove the right or left earbud from the charging case to automatically power on and enter pairing mode.
 ② Turn on your Bluetooth device to search and select "G4R" or "G4L" to connect, and a voice prompt will say "PAIRING" and "CONNECTED".

How to Charge

Earbuds
 ① When the earbuds batteries are low, the LED indicators will turn in red and a voice prompt will say "BATTERY LOW".
 ② Put them in the charging case and close the lid. The first and fourth LED indicator of charging case will be on when charging. The LED will be off when fully charged.

Charging Case
 The charging case can be charged via micro USB and its LED will indicate the battery level status.

Troubleshooting

Problems	Possible Causes	Solutions
Can not turn on	The batteries of G4 Earbuds may be low.	Put them back to the charging case and charge them for about 1 hour.
No sound or low volume when calling	The media volume of the Bluetooth device may be low or you're in a noisy environment.	Turn up the volume or change to a quiet place.

How to Charge

Non-Charging Mode				
Battery Level	1 LED	2 LED	3 LED	4 LED
0-25%	/	/	/	On
25-50%	/	/	On	On
50-75%	/	On	On	On
75-100%	On	On	On	On

(Charging Case)

Charging Mode

Battery Level	1 LED	2 LED	3 LED	4 LED
0-25%	/	/	/	Flash once in 1s
25-50%	/	/	Flash once in 1s	On
50-75%	/	Flash once in 1s	On	On
75-100%	Flash	On	On	On

(Charging Case)

Troubleshooting

Problems	Possible Causes	Solutions
Can not turn on	The batteries of G4 Earbuds may be low.	Put them back to the charging case and charge them for about 1 hour.
No sound or low volume when calling	The media volume of the Bluetooth device may be low or you're in a noisy environment.	Turn up the volume or change to a quiet place.

Safety Tips

- Please read this manual carefully to properly use the earbuds before first use.
- Fully charge the earbuds along with the charging case before first use.
- Keep the earbuds away from children or pets to avoid accidental ingestion.
- Do not use the earbuds at a high volume continuously which may cause hearing loss.
- Do not use output larger than 5V 1A charger which may cause battery damage.
- Keep this product within acceptable temperatures.

FCU Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference, and
 (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure conditions without restriction.