AX PRO M2 Quick Start Guide

### ENGLISH

## 1 Appearance

1. Main Board 2. 4G Module 3. Power Switch 5. Battery 6. Antenna Position 7. Loudspeaker 4. Tamper Switch

#### 2 Installation

Note: Power down the control panel before installation.

- Loosen the screws and open the case.
   Take out the main board.
- 3. Fix the rear case on the wall.4. Install the main board and the antenna.
- 5. Install the loudspeaker.
  6. Connect the power supply and turn on the switch.
  7. Close the case and tighten the screws.

#### 3 Set Up

Add the AX PRO to Hik-ProConnect or Hik-Connect APP.
 Enroll the peripheral to the AX PRO.

4 User Manual

# Specification

| Basic         | RF frequency           | 915 Mhz  |
|---------------|------------------------|--|
|               | Keyfob                 | 48   |
|               | Wireless sounder       | 6  |
|               | Keypad                 | 8 (Including tag reader)   |
|               | Wireless repeater      | 4  |
|               | Tag                    | 48   |
|               | Zone                   | 96 (up to 48 PIRCAMs)  |
|               | Transmitter            | Up to 96 (Single), up to 6 (Multi)   |
|               | Onboard video clip     | 4  |
| User          | Admin, installer, user | 1, 120, 46   |
| Software      | Area                   | 32   |
|               | LEDs indication        | Arm/Disarm, Alarm, Alert, Cloud, Power                                       |
|               | Memory Log stored      | Alarm&abnormal (3000), user operation (1500), user management (200)          |
|               | Programming tool       | Hik-Connect/Hik-ProConnect/Web Portal/<br>IVMS4200/ Convergence Cloud        |
| Communication | Network                | Wired network, Wi-Fi, 3/4G on board  |
|               | ARC protocol           | SIA DC09 (SIA level 2, Contact ID), ISUP, ISAPI<br>(SDK), CSV-IP, FSK Module |
|               |                        | Hik-IP Receiver & Hik-IP Receiver Pro (Sur-<br>Gard & Ademco 685)            |
|               |                        | Supports video verification and remote control                               |
|               | SIM slot               | Dual   |
| Hardware      | Power supply           | 100 to 240V~, 50/60 Hz, 0.2A to 0.1A   |
|               | Battery type           | 12v 7Ah storage battery (sold separately),<br>up to 36 hours                 |
| Others        | Operation temperature  | -10 °C to 40 °C  |
|               | Dimension (W×H×D)      | 261 mm × 199 mm × 86.4 mm  |
|               | Weight                 | 975g (No battery)  |



Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. PCC compliance: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the PCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.


—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.


- —Connect the equipment who is noted that connected.
  —Consult the dealer or an experienced radio/TV technician for help.
  This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body.
  FCC conditions
  This device complies with part 15 of the FCC Rules. Operation is subject to the following two


- conditions:


  1. This device may not cause harmful interference.


  2. This device must accept any interference received, including interference that may cause undesired operation

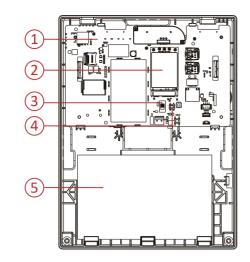


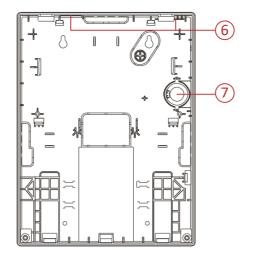


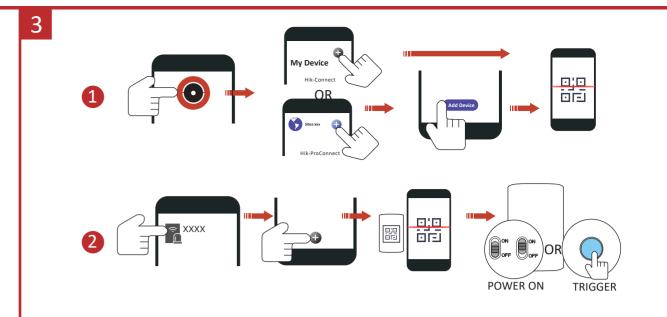


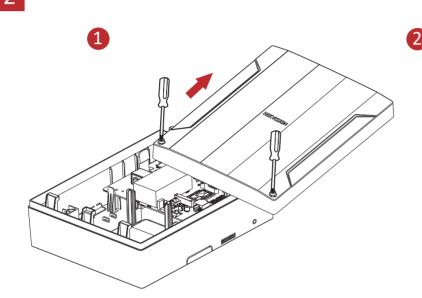


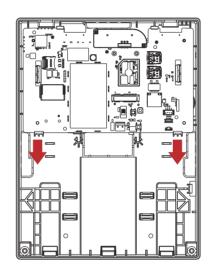

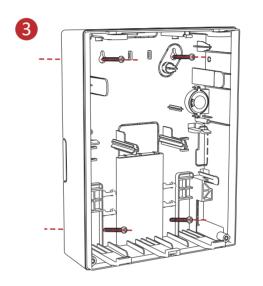


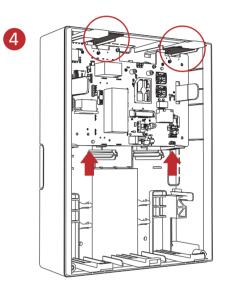

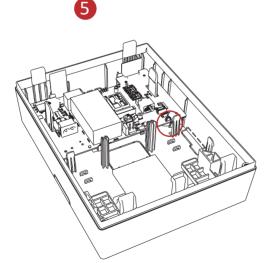

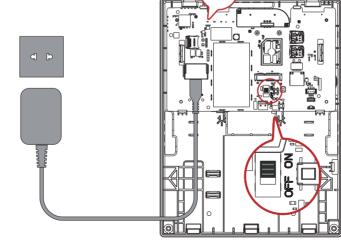

6

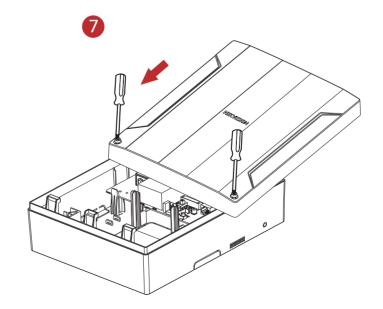



ENGLISH

2021 Hargibus Hibrision Digital Technology Co., Ltd. All rights reserved.
About this Manual
The Manual includes instructions for using and managing the Product. Pictures, charts, images and all other information
hereinafter are for description and explanation only. The information contained in the Manual is subject to change,
without notice, due to firmware updates or other reasons. Please find the latest version of this Manual at the Hibrision
without notice, due to firmware updates or other reasons. Please find the latest version of this Manual at the Hibrision
Please use this Manual with the guidance and assistance of professionals trained in supporting the Product.
Trademarks
AVMX/SY/OW and other Hibrision's trademarks and logos are the properties of Hibrision in various jurisdictions.
Other trademarks and logos mentioned are the properties of their respective owners.
To THE MANUAL AND THE PRODUCT DESCRIBED, WITH ITS
HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED 'AS IS' AND "WITH ALL FAULTS AND ERRORS" HIBVISION MAKES
NOT WARRANTHE, SUPPLES OR MINEED, THE LOUNG WITHOUT LOWING THE ALL THE AND THE PRODUCT DESCRIBED, WITH ITS
HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED 'AS IS' AND "WITH ALL FAULTS AND ERRORS" HIBVISION MAKES
NOT WARRANTHE, SUPPLES OR MINEED, THE LOUNG WITHOUT LOWING THE ALL THE AND THE PROVIDED THE PROVIDED

CAUTION

In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region.

In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region.

In the use of the place of the equipment.

The socket-outlet shall be installed near the equipment and shall be easily accessible.

Ensure correct wring of the terminals for connection to an AC mains supply.

Ensure correct wiring of the terminals for connection to an AC mains supply.

Indicates hazardous live and the external wiring connected to the terminals requires installation by an instructed person.

The equipment has been designed, when required, modified for connection to an IT power distribution system. No naked fines sources, such as lighted candles, should be placed on the equipment. The serial port of the equipment is used for debugging only.

This equipment is out suitable for use in locations where children are likely to be present. Install the equipment according to the instructions in this manual.

To prevent injury, this equipment must be securely statched to the floor/wall in accordance with the installation instructions.

The additional force shall be equal to three times the weight of the equipment but on tests than 50N. The equipment and its associated mounting means shall remain secure during the installation. After the installation, the equipment and its associated mounting means shall remain secure during the installation. After the installation, 1. This equipment is not suitable for use in locations where children are likely to be present.

the equipment, including any associated mounting plate, shall not be damaged.

For CAUTION.

For CAUTION.

1. CAUTION: Represent is not suitable for use in locations where children are likely to be present.

2. CAUTION: Risk of explosion if the battery is replaced by an incorrect types.

3. Improper replacement of the battery with an incorrect type may defeat a safeguard (for example, in the case of some lithium battery types).

4. Do not dispose of the battery into fire or a hot oven, or mechanically crush or cut the battery, which may result as the control of the cont