

Quick Start Guide


Quick Setup

Power Kit Installation

Doorbell Installation



Doorbell Setup

What's in the Box

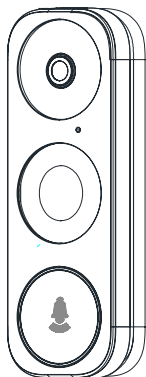

Doorbell (x1)
Faceplate (x3)

Pick the one that
best matched
your home from
three faceplates.

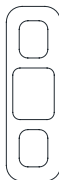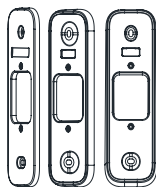

Mounting Plate (x3)

Pick the one for best
surveillance angle.



Screwdriver (x1)

Plate Foam (x1)

Stabilize the
mounting plate when
installing it in the
rough surface.



Drill Bit (x1)



Power Kit (x1)



Wire Harness (x1)



Fuse Wire (x1)



Wire Connectors (x4)



Mounting Screws (x3)



Anchors (x3)



Security Screws (x2)



Fixing Screws (x2)



Doorbell Screws (x2)




Mini-Level (x1)



U-shaped Wires (x2)

Tools You May Need

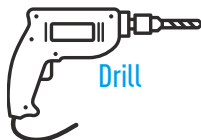

Drill




Pencil


- If you have mechanical chime installed in your home, install the power kit and doorbell.
- i** • If you have electronic chime installed in your home, refer to its own manual to install the power kit, and install the doorbell.
- If no chime is installed, skip power kit installation, install the doorbell and follow the **Option B** in page 5.

Power Kit Installation


- 1 Shut off the electricity at the breaker that controls doorbell's circuit.
- 2 Insert one end of the wire harness the power kit.

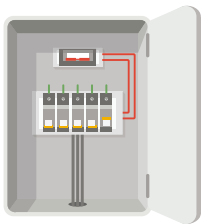


- 3 Remove the cover from your mechanical chime.

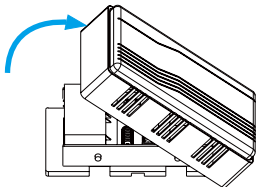


- 4 Remove the existing chime wires in the terminals named TRANS and FRONT.

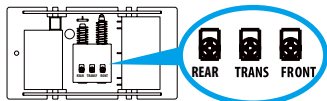


- 5 Connect the wire harness to the chime's terminals named TRANS and FRONT.

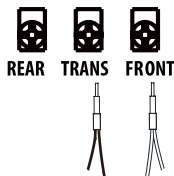


- 6 Insert the existing chime wire and the other end of the wire harness into the wire connector and twist it tightly. Repeat this step with the other chime wire.

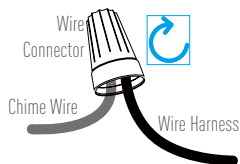


Wiring Overview

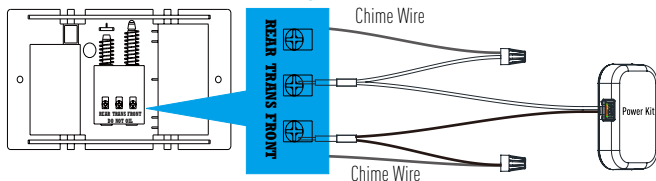

- 7 Mount the power kit to the side of the chime.


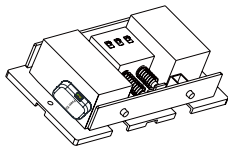


- 8 Put back the chime cover.


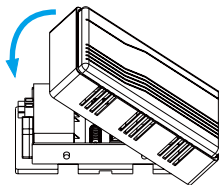


Doorbell Installation

- i** Recommended Installation Height: 4 feet (1.2 m) above the ground.
- 1** Shut off the electricity at the breaker that controls the doorbell's circuit.
- 2** (Optional) When the wall is uneven, paste the plate foam to the mounting plate.

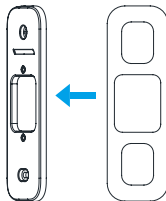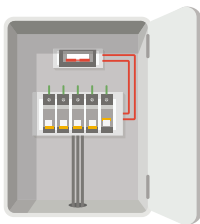


- 3** Insert the mini-level into the mounting plate and mark the drill points when its bubble stays in the middle.
- 4** Drill holes according to drill points and insert anchors.

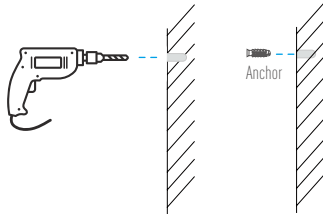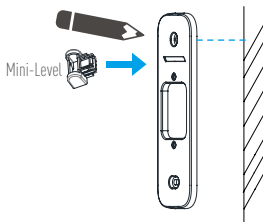


- i** Remove the mini-level when drill points are marked.
- i** Recommended Hole Depth: 1 inch to 1.2 inch (25 to 30 mm).

5 Fix the mounting plate to the wall.

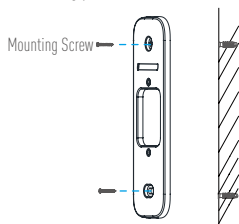


6 Remove faceplate on your doorbell from bottom to top.

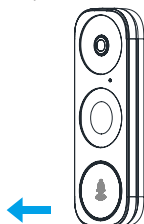


7 If you have a chime installed, follow **Option A**; If not, follow **Option B**.

Option A Connect doorbell with your existing doorbell wires.


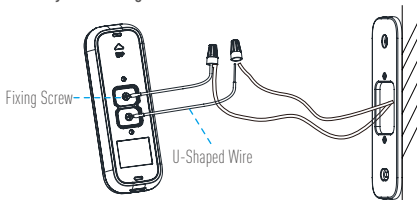


Option B Connect the fuse wire with your existing doorbell wire.

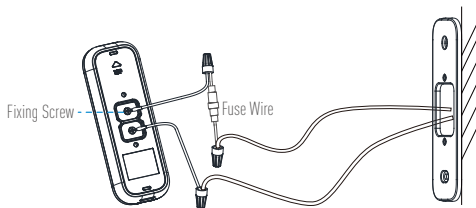

Power Supply: 8 to 24 VAC

- 8 Fix the doorbell to the mounting plate by inserting the doorbell screws.
- 9 Restore the electricity at the breaker.

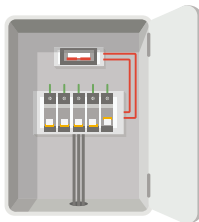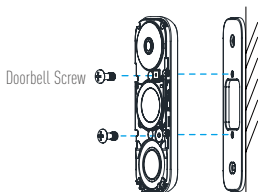

- Doorbell is powered on when its indicator flashes blue quickly. If not, make sure your electricity is off and check the wiring. If yes, proceed to doorbell setup.
- For the first time use, please power on the doorbell and wait for 3 hours before using it, or else the chime in your home may not work.


Doorbell Setup

- 10 Add to app.

- Connect your mobile phone to Wi-Fi.
- Download and install the app.
- Register a user account following the start-up wizard and log in.
- On the Home screen, tap “+” on the upper-right corner to go to the scan QR code page.
- Scan the QR code on the device or the cover of this manual when the indicator flashes blue.
- Follow the app wizard to finish Wi-Fi configuration.


- i If you want to change your doorbell's Wi-Fi, press and hold the reset button for 5s and repeat this part.

- 11** Put the faceplate back and insert two security screws into the bottom of the doorbell to secure the faceplate.

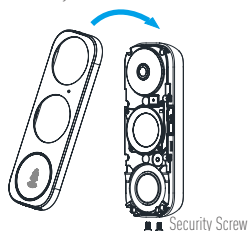

Appendix

Basics

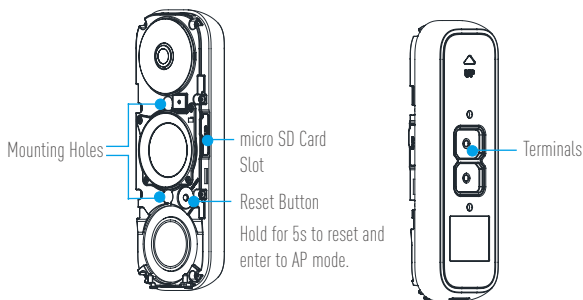

LED Indicator

Blue Light

Flashing

Doorbell is ready for Wi-Fi configuration.

Steady on

Doorbell is working.

Red Light

Flashing Fast

Device Exception

Steady on

Doorbell is powering on.

Use AP Mode for Wi-Fi Configuration


- For AP hotspot configuration, press the **Reset** button for 5 seconds and then you will hear voice prompt.
- Wait for a few seconds until you see the LED indicator flashes blue.
- Follow the voice prompt to connect Wi-Fi.

Wi-Fi Name: SoftAP_XXXXXXXX (9-digit Serial No.)
Default Password: SoftAP_XXXXXX (Verification Code)
eg. Default Password: SoftAP_ABCDEF


Serial No. and verification code are listed on the cover of this manual.

- Go back to app after successful connection. Tap **Next**.
- Search out the Wi-Fi you want the device to connect and enter password.

SD Card Management

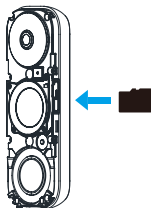

1. In the app, tap the **Storage Status** in the Device Settings interface to check the SD card status.

Wi-Fi Configure	TEST-WIFI  >
Storage Status	>
Device Version	Vx.x.x build xxxxxx No new version.

2. If the card status displays as **Uninitialized**, tap to initialize it.
The status will then change to **Normal** and it can store videos and/or pictures.

UD12237C

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC/IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause interference, and

(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radioexempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

This equipment complies with FCC/IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

ce matériel est conforme aux limites de dose d'exposition aux rayonnements, FCC / CNR-102 énoncée dans un autre environnement. cette équipement devrait être installé et exploité avec distance minimale de 20 entre le radiateur et votre corps.

The user manual for local area network devices shall contain instructions related to the restrictions mentioned in the above sections, namely that:

(i) the device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;

(ii) the maximum antenna gain permitted for devices in the bands 5250-5350 MHz and 5470-5725 MHz shall comply with the e.i.r.p. limit; and

(iii) the maximum antenna gain permitted for devices in the band 5725-5825 MHz shall comply with the e.i.r.p. limits specified for point-to-point and non point-to-point operation as appropriate.

(i) Les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.

(ii) le gain d'antenne maximal autorisé pour les appareils dans les bandes 5250-5350 MHz et 5470-5725 MHz doivent respecter le pire limiter; et

(iii) le gain d'antenne maximal autorisé pour les appareils dans la bande 5725-5825 MHz doivent respecter le pire limites spécifiées pour le point-à-point et l'exploitation non point à point, le cas échéant.

Users should also be advised that high-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

Les utilisateurs de radars de haute puissance sont désignés utilisateurs principaux (c.-à-d., qu'ils ont la priorité) pour les bandes 5250-5350 MHz et 5650-5850 MHz et que ces radars pourraient causer du brouillage et/ou des dommages aux dispositifs LAN-EL.