### Switch between the earphone and phone Press the Volume "--" for about 2 seconds during a call, the call will be switched to the mobile phone, redo this operation again, the call will be switched to the earphone.

End current call and answer new call When a new call rings during a call, press the Multifunction button once to answer new call and end current call

simultaneously.

On hold current call and answer new call When a new call rings during a call, hold the Multifunction button for 2 seconds to hold current call and answer new call. To switch between held call and active call, Hold the multifunction button for 2 seconds.

### Music -

(Need media player support)

- Music play / pause Press Multifunction button once to play / pause music. (Some phones may require you to start a media player first)
- Track back/forward Press the Volume "+" for 2 seconds once to skip track forward, press Volume "-" for 2 seconds once to skip track backward.
- Switch Music and Call
- When a call rings during a music playing, the music automatically pauses to allow you to answer or ignore the call. Once the call is ignored or ends, the music is resumed.



When the earphone is connected to a device with iOS system, a battery indicator will appear at the upper right of the system, indicating battery status of the earphone.

More features


**Battery Indicator** 

#### Auto power-off

When the distance between the earphone and the mobile phone is beyond effective range, a voice prompt "Connection lost" and earphone disconnects with the mobile phone, the earphone will power off automatically once no active for 10 minutes



stored contact.

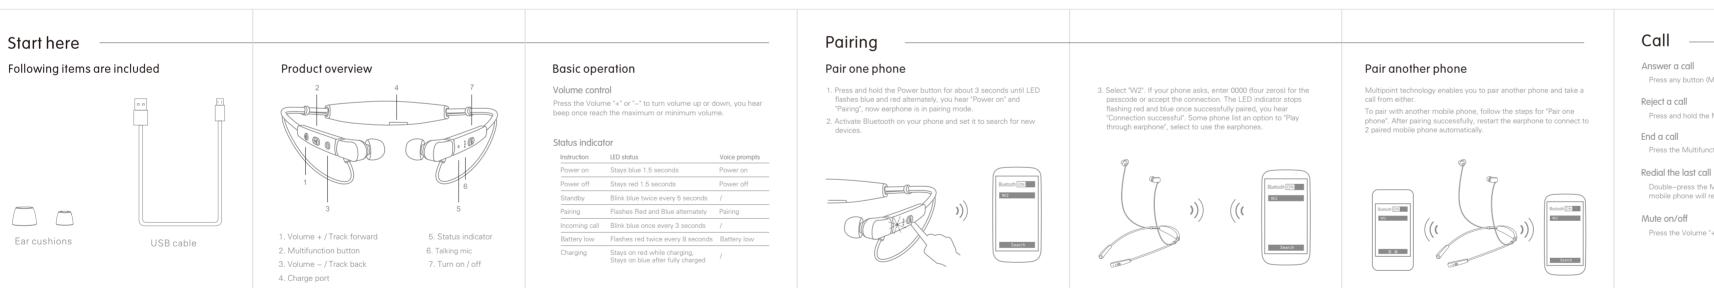

#### Automatic connection after powering on

When the earphone and phone have been paired once, they will automatically connect when the earphone is on and Bluetooth is activated on the phone.

#### Connection standby

After successful pairing and connection, you will hear the voice prompt "Connection successful". the earphone will be in turning on mode or standby mode automatically and the blue LED will flash twice every 5 seconds, when the earphone disconnect the phone, you will hear the voice prompt "Connection lost".

#### Voice dial (Need phone support.)

Press Vol+ and Vol- simultaneously, you will hear beep, and wait for phone prompt and then tell the phone to dial the name of a

## Charging

Your earphone has enough power to complete the pairing and a few calls. When battery is low, you will hear the voice prompt "Battery low". It takes 1.5 hours to fully charge the earphone. The red LED turns on during charging. The red LED will turn off and the blue LED will turn on after being fully charged. Note: The lifetime of the battery will be significantly reduced if your earphone is left uncharged for a long period. We recommend that you recharge your earphone at least once a month.

#### Clear paired list

In standy mode, press Vol+, Vol- and Multifunction buttons simultaneously for about 5 seconds, LED indicator flashes blue&red 5 times quickly, then clear all paired list, the earphone will enter pairing mode automatically after power on next time.

#### Hard reset

In turning on mode, press and hold the Multifunction button with the charger plugged to reset the earphone and power offlyou can release the Multifunction button 2 seconds after mounting the charger).

# connice

# **RING COLLAR** MUSIC WIRELESS HEADSET

W2 INSTRUCTION

Press any button (Multifunction/Vol+/Vol-) once.

Press and hold the Multifunction button for about 2 seconds.

Press the Multifunction button once

Redial the last call Double-press the Multifunction button in standby mode. The mobile phone will redial the last call number.

Press the Volume "+" for about 2 seconds to mute on/off.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.