

Call

Answer a call
When calling, press the Multifunction button once.

Reject a call
When calling, press and hold the Multifunction button for about 2 seconds.

End a call
When calling, press the Multifunction button once.

End current call and answer new call
When a new call rings during a call, press the Multifunction button once to answer new call and end current call simultaneously.

On hold current call and answer new call
When a new call rings during a call, Double press the Multifunction button to hold current call and answer new call.

Reject the new call hold the current call
During the call there is a new call, press the Multifunction button for about 2 seconds to reject a new call, keeping the active call.

Mute on/off
During the call, double press the Multifunction button to mute on/off.

Switch between the earphone and phone
Press the multifunction button for about 2 seconds during a call, the call will be switched to the mobile phone, redo this operation again, the call will be switched to the earphone.

Voice Assistant (Need phone support)
In standby mode or music mode double press the Multifunction button to activate the phone voice assistant function.

Music

(Need media player support).

Music play / pause
Press Multifunction button once to play / pause music. (Some phones may require you to start a media player first)

Track back/forward
Press the Volume "+/-" for 2 seconds to skip track backward, press Volume "+*" for 2 seconds to skip track forward.

Switch Music and Call
When a call rings during a music playing, the music automatically pauses to allow you to answer or ignore the call. Once the call is ignored or ends, the music is resumed.

Basic operation

Charging
Your new earphone has enough power to pair and make a few calls. It takes 2 hours to fully charge the earphone; while charging, the battery indicator light is red, the indicator light stays on white charging is complete.

Note: The lifetime of the battery will be significantly reduced if your earphone is left uncharged for a long period. We recommend that you recharge your earphone at least once a month.

Clear paired list
In the pairing state, press the volume "+" and "-" button for 5 seconds at the same time, the white indicator light will be on for 4 seconds, then the red and white will flash alternately.

Hardware reset
Connect earphone to the USB port of a PC or an USB power adaptor and LED shows red light, the earphone is now reset.

ANC
ANC On: Press ANC switch for 2 seconds to turn on ANC.
(1: Press and hold for 3s, turn back the phone and automatically turn on ANC; 2: Press and hold for 5s to enter pairing mode. If the phone is connected to the headset successfully, turn on ANC.)
ANC Off: When the ANC is on, press the ANC switch for 2 seconds to turn off the ANC.

Safety and care

Using earphone at high to moderate volumes for extended periods of time will result in permanent hearing damage. It is advised you keep volume levels moderate to low at all times for your safety.

Do not use while driving a car, cycling, operating machinery, or performing other activities that require hearing surrounding sounds.

Do not use earphone in thunderstorm weather, the earphone may not work properly in the condition, and increase the risk of being hit by lightning.

Earphone may not work properly under high temperature or high humidity conditions.

Do not use any corrosive cleaner/oil to clean the earphone.

If the earphone comes in contact with liquids, quickly wipe away. If submerged in water, do not turn the earphone on until completely dried. Tips: liquid submersion voids the warranty.

Keep the earphone and packaging out of reach of children.

Do not throw this electronic device into the trash when discarding. To minimize pollution and ensure utmost protection of the global environment, please recycle it.

WIRELESS SPORTS EARPHONE

W825 INSTRUCTION

Start here

Following items are included

Product overview

- ANC button
- LED indicator
- Charging Micro
- Volume + / Track forward
- Multifunction button
- Volume - / Track back
- Air holes
- Talking mic

Status indicator

Instruction	LED status	Voice prompts
Power on	Stay white about two seconds	Power on
Power off	Stay red about two seconds	Power off
Standby	Blink white once every 5 seconds	/
Pairing	Red and white alternately flashing	Pairing
Incoming call	White light flashing	Ringtone
Battery low	Blink red	Battery low
Charging	Stays on red while charging	/
	Stays on white after fully charged	

Volume up/down Press the volume "+*" to turn volume up Press the volume "-/" to turn volume down

Power on
Press and hold Multifunction button for about 3 seconds. The earphone says "power on" and the white LED light stays on for 2 seconds

Power off
Press and hold Multifunction button for about 5 seconds. The earphone says "power off" and the red LED light stays on for 2 seconds
Tip: When the distance between the earphone and phone is beyond effective range, earphone disconnects with phone. Earphone will power off automatically once no active for 10 minutes.

Pairing

Pair one phone

Note: When the earphone and phone have been paired once, they will automatically connect when the earphone is on and Bluetooth is activated on the phone.

1. Make sure the earphone is turned off and within 1 meter of your phone, press and hold the Multifunction button until the LED indicator flashes red and white alternately (About 5 seconds), then release Multifunction button.
2. Activate Bluetooth on your phone (See below for more details).

iPhone

a. On your phone, open the Settings menu.
b. Select Bluetooth. If Bluetooth is off, turn it on. The iPhone will search for new devices automatically.

Android phone

a. On your phone, open the Settings menu.
b. Select Bluetooth (For old Android phone, Bluetooth is found in the Wireless & Networks). If Bluetooth is off, turn it on. Select Search for Devices if your phone does not automatically search for new devices.

Windows Phone

a. On your phone, open the Settings menu.
b. Select Bluetooth. If Bluetooth is off, turn it on. The Phone will search for new devices automatically.

3. Select "JPRIDE ANC-510". If your phone asks, enter 0000 (four zeros) for the passcode or accept the connection. The LED indicator stops flashing red and white once successfully paired, you hear "Connection successful". Some phone list an option to "Play through earphone", select to use the earphones.

FCC Warning
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.