

cannice

WIRELESS SPORTS EARPHONE for calls and music

Muses 4BINSTRUCTION

<p>Switch between the earphone and phone Press the Volume "+" for about 2 seconds during a call, the call will be switched to the mobile phone, redo this operation again, the call will be switched to the earphone.</p> <p>End current call and answer new call When a new call rings during a call, press the Multifunction button once to answer new call and end current call simultaneously.</p> <p>On hold current call and answer new call When a new call rings during a call, hold the Multifunction button for 2 seconds to hold current call and answer new call. To switch between held call and active call, Hold the multifunction button for 2 seconds.</p>
--

Music

(Need media player support)

Music play / pause

Press the Multifunction button once to play / pause music. (Some phones may require you to start a media player first)

Track back/forward

Press the Volume "+" for 2 seconds once to skip track forward, press Volume "-" for 2 seconds once to skip track backward.


Switch Music and Call

When a call rings during a music playing, the music automatically pauses to allow you to answer or ignore the call. Once the call is ignored or ends, the music is resumed.

More features


Battery Indicator

When the earphone is connected to a device with iOS system, a battery indicator will appear at the upper right of the system, indicating battery status of the earphone.

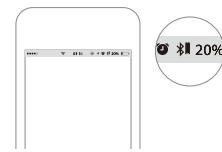

Auto power-off

When the distance between the earphone and the mobile phone is beyond effective range, a voice prompt "Connection lost" and earphone disconnects with the mobile phone, the earphone will power off automatically once no active for 10 minutes.

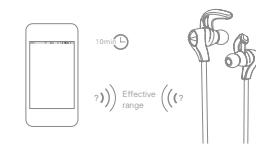

Automatic connection after powering on

When the earphone and phone have been paired once, they will automatically connect when the earphone is on and Bluetooth is activated on the phone.

Connection standby

After successful pairing and connection, you will hear the voice prompt "Connection successful", the earphone will be in pairing mode or standby mode automatically and the blue LED will flash once every 5 seconds, when the earphone disconnect the phone, you will hear the voice prompt "Connection lost".

Charging

Your earphone has enough power to complete the pairing and a few calls. When battery is low, you will hear the voice prompt "Battery low". It takes 1.5 hours to fully charge the earphone. The red LED will turn on during charging. The red LED will turn off and the blue LED will turn on after being fully charged.


Note: The lifetime of the battery will be significantly reduced if your earphone is left uncharged for a long period. We recommend that you recharge your earphone at least once a month.

Hard reset


In pairing mode, press and hold the Multifunction button with the charger plugged to reset the earphone and power off (you can release the Multifunction button 2 seconds after mounting the charger).

Start here

Following items are included

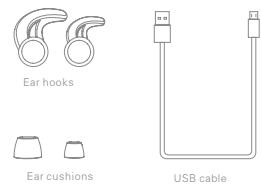

Product overview

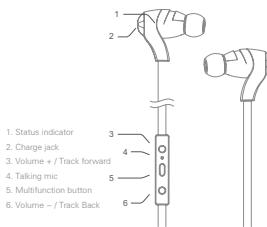

Basic operation

Volume control

Press the Volume "+" or "-" to turn volume up or down, you hear beep once reach the maximum or minimum volume.

Status indicator

Instruction	LED status	Voice prompts
Power on	Stays blue 2 seconds	Power on
Power off	Stays red 2 seconds	Power off
Standby	Blink blue twice every 5 seconds	/
Pairing	Flashes Red and Blue alternately	Pairing
Incoming call	Flashes blue continuous	/
Charging	Stays on red while charging, Stays on blue after fully charged	Battery low

Pairing

Pair one phone

1. Press and hold the Multifunction button for about 5 seconds until LED flashes blue and red alternately, you hear "Power on" and "Pairing", now earphone is in pairing mode.
2. Activate Bluetooth on your phone and set it to search for new devices.



3. Select "Muses4": If your phone asks, enter (0000 four zeros) for the password or accept the connection. The LED indicator stops flashing red and blue once successfully paired, you hear "Connection successful". Some phone list an option to "Play through earphone", select to use the earphones.



Call

Answer a call

Press the Multifunction button once.

Reject a call

Press and hold the Multifunction button for about 2 seconds.

End a call

Press the Multifunction button once.

Redial the last call

Double-press the Multifunction button in standby mode. The mobile phone will redial the last call number.

Mute on/off

Press the Volume "-" for about 2 seconds to mute on/off.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: Modifications to this product will void the user's authority to operate this equipment.