802.11 Wireless Wi-Fi Adapter

150M/300M/433Mbps 802.11Wireless Wi-Fi Adapter

User Manual

Version: V1.1

All rights reserved


All information contained in this sheet may not be changed without permission

802.11 Wireless Wi-Fi Adapter

1. Installation Steps


Installation steps of adapter driver program is same when it is installed in different operation system. Here takes the steps under Windows 7 for example to explain the installation process.

1. Double click the icon of installation package

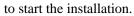




2. Choose "I accept the terms of the license agreement" and click "Next".

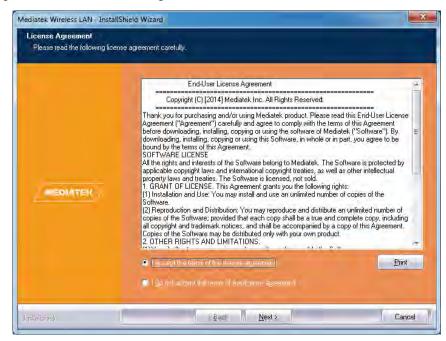


802.11 Wireless Wi-Fi Adapter

3. Users can choose the installation type for the actual needs. "Install driver and Mediatek WLAN Utility" is our recommended choice.

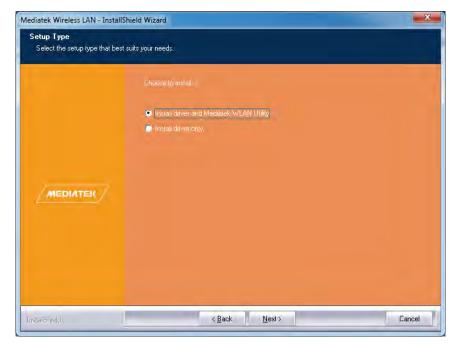


4. An UI will pop up to prompt that the system is ready for the installation, then click "Install".

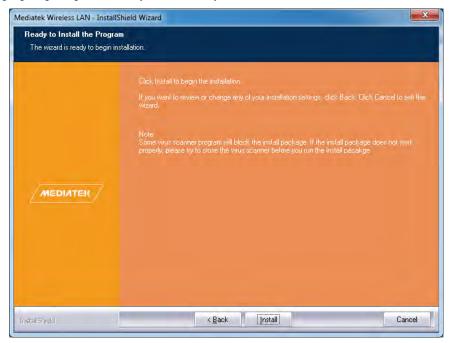

802.11 Wireless Wi-Fi Adapter

5. The system will show the installation processing bar. After the installation, another interface will show up.

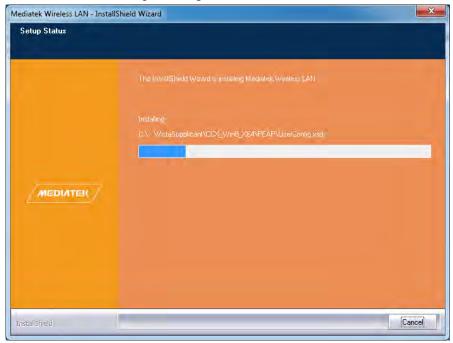

6. When installation process is done, system will remind this information. Click "Finish" will accomplish the installation and log out from installation wizard automatically.

Mediatek Wireless LAN - InstallS	hield Wizard
MEDIATER	InstallShield Wizard Complete The InstallShield Wizard has successfully installed Mediatek Wireless LAN. Click Finish to exit the wzard.
Instalishield	< Back Finish Cancel

Notice: If you want to change the installation setup, please click "Back" to return to previous page to set it up again. If you want to quit the installation, please click "Cancel".


2. System Connection

2.1 Check Device Condition

After finishing the installation, users can find an icon is on the task bar, this icon has the information that our product is not existed. Therefore, users need to plug our adapter into the target USB2.0 port.

After plugging in, blue LED indicator on adapter will turn on. At the same time, icon $\overline{\square}$ will turn to $\overline{\square}$ to inform users that device is available but waiting for connecting.

Users can check its condition in Device Manager.

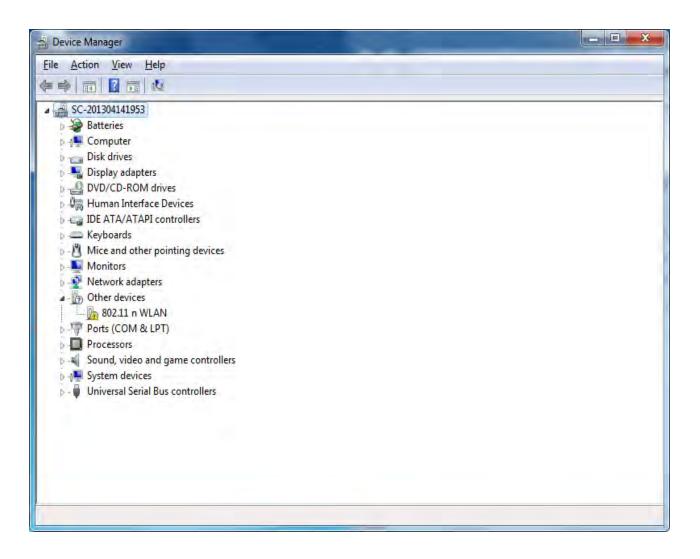

802.11 Wireless Wi-Fi Adapter


Double click device name "802.11ac Wireless LAN Card" can check its condition, and the condition will be shown like the below:

General	Advanced	Driver	Details Power Management	
5	802.11n US	B Wirel	ess LAN Card #3	
	Device type	¢	Network adapters	
	Manufacture	er:	MediaTek, Inc.	
	Location:		Location 0 (Port_#0007.Hub_#0001)	
1100		ang pro	perly.	~
1.10		מוזק אוס	peny.	X
			peny.	× +
			peny.	× +
			peny.	*

Click "OK" can finish this step.

2.2 Device Connection

1. When device is working properly, please double click \boxed{I} , or right click it and choose "Lauch Config Utility", users will find an UI like the following picture shows:

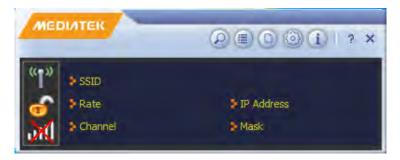

2. Click , users can check all available wireless networks:

MEDIATER		? x 🔁 🗉					
((p))		Carcool Car Club	ø	1 D 11 D 2 D	901	37%	
SSID 🔰 SSID		cfq	0	11 🚺	901	68%	
Rate	> IP Address	ChinaNet-27Hg	B	2 🚺	904	55%	
•		ESP_996E59	0	6 b 6 b 3 b	9	50%	
Channel	Mask	jacky	0	6	904	70%	
<u>201</u>		jackyw	0	3 🚺	90	44%	E
		Izw	B	3 🚺	9 1 41	70%	
		NETGEAR 75-5G	0	149 <mark>a</mark>	0 ()	42%	
		office	0	11 🚺	901	50%	
		ogemray-ZT	0	6 🚺	9 🛈 🖺	63%	
		QA 5	0	6 🚺	9 1 41	55%	
		QA 9	0	7 🚺	9 1 49	91%	
		QA2	0	2 🚺	9 1 4	26%	
		szogemray2	0	4 🟮	9 🛈 🖺	73%	
		Tenda_5_43156C	Ø	161 a	0	20%	
		AP Information	-		_		
		SSID Izw		Authentica	tion WPA2	-PSK	(())

3. Choose the desired wireless netowrk name, the AP information of that network will be shown at the bottom for


reference. Click 🖤 will start the connection.

If the encryption pattern is NONE, system will start auto-connection, and the basic information of that a) network will be seen on home page.



If the encryption pattern is not NONE, users will enter "Profile Settings" page when click 🖤 to connect b) this wireless network. Authentication pattern and encryption pattern can be revealed in this page.

	Profile Settings	
Authentication	WPA2-PSK	-
Encryption	AES	•

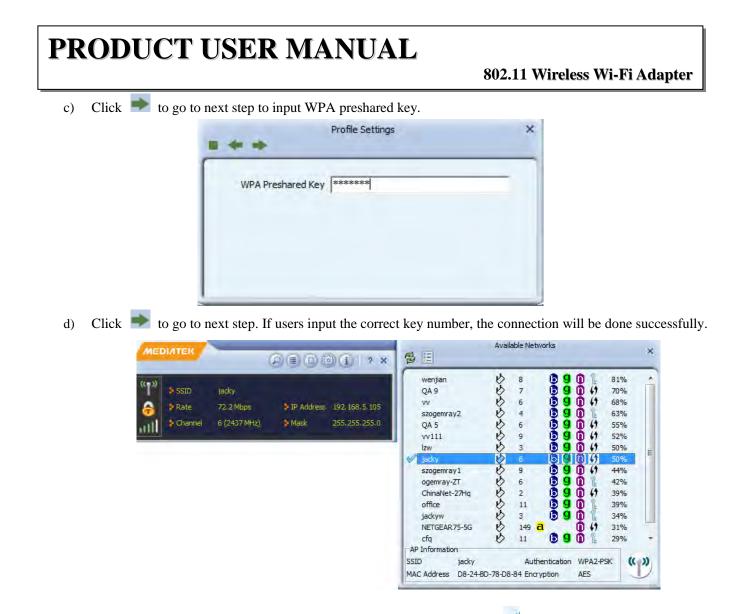

Left part is the basic informaton of the connected network. On the right part, 划 is used to remark the connected one.

4. When the connection is established, LED indicator on device will keep blinking, and users can enjoy the connected network environment.Image: Image: Im

1. Among the available network selections, 1-14 means the network of 2.4G band, 36-165 means the network of 5G band. If the network is marked as ^a, then it is a 5G network for easy recognization.

2. Click on home page, or right click the related icon on task bar to choose"Exit", network conncetion will be disconnected.

3. Home Page Introduction

Home page will display some basic information of the connected network, such as SSID, IP address, communication rate, channel, and subnet mask.

MEL	DIATEK	4)(j	? X
"T"	SSID	jacky			
a	👂 Rate	72.2 Mbps	👂 IP Address	192, 168	.5.105
ull	Channel	6 (2437 MHz)	Mask	255.255	.255.0

We will explain the usage of those functional buttons in the red square frol left to right.

1. Debutton: This button is for searching all usable wireless networks. By clicking it, a page will show all networks that users can use for check.

	Avail	able Netwo	orks			×
wenjian	v	8	0 9	01	81%	
QA 9	0	7	69	0 0	70%	
VV	0	6	69	0.47	68%	
szogemray2	0	4	69	0	63%	
QA 5	000000000	6	00000	0 4	55%	
vv111	0	9	69	0 47	52%	
Izw	3	3	69	0 47	50%	-
🏏 jacky	0000000000	6		00	50%	III
szogemray1	B	9	69	0 ()	44%	
ogemray-ZT	3	6		0	42%	
ChinaNet-27Hg	0	2	0000	0 47	39%	
office	0	11	69	0	39%	
jackyw	0	3	69	0	34%	
NETGEAR75-5G	0	149 a	12.2	0 0	31%	-
cfq	0	11	69	0	29%	+
AP Information						
SSID jacky		Authe	ntication	WPA2-F	SK ())
MAC Address D8-24-B	D-78-D8	-84 Encryp	otion	AES		

802.11 Wireless Wi-Fi Adapter

Click	B

can refresh the list information, click 🔳 will guide users to "Profile Settings" page for the

connection setup of desired network.

Profile Name	PROF1
SSID	jacky 💌
Network Type	 Infrastructure - Connect to AP
	C Ad Hoc - Connect to other computers

Follow and guide and click is to finish the connection setup.

Right click the selected network, users can get the 3 ways of network sequencing. Users can choose the preferred one to sequece the list for convenient check.

		Availa	able Ne	tworks				×
🧭 jacky 🗖		- A-		250	1251	()	91%	*
wenjia	Sorte	d by SSI	D			6	81%	
QA 9	Sorte	d by Ch	annel			10	70%	
vv	✓ Sorte	d by Sig	nal St	enath		17	68%	
szogenw		V			-	w	63%	E
vv111		0	9	6	9	0 47	52%	-
ogemra	I-ZT	\$	6	6	9	0	50%	
Izw		0	3	6	9	0 47	50%	
szogemi	ay1	0	9	6	g	0 47	44%	
QA 5		0	6	6	9	0 47	42%	
office		\$	11	0	g	0	39%	
ChinaNe	t-27Hq	ø	2	6	g	0 47	39%	
jackyw		0	3	6	g		34%	
NETGEA	R75-5G	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	149	a		0 47	31%	
cfq		0	11	6	g		29%	+
AP Informat	ion		-					
SSID	jacky		Au	thentica	tion	WPA2-	PSK 🕻	2)
MAC Address	D8-24-B	D-78-D8	-84 En	cryption		AES		\cup

Click (Click Click Click

2. Dutton: Click this button can gain network link information.


oll 🕜	Link Information	-
Status	jacky <> D8-24-BD-78-D8-84	_
Extra Info	Link is Up [Tx Power: 100%]	
Authentication	WPA2-PSK	
Encryption	AES	
Network Type	Infrastructure	
Central Channel	6	

- button: Showing the link information just like the page above s hows.
- button: giving some link data information, such like link quality, signal strength, transmit rate and receive rate.

uill 🕜	Line Inte	ormation	
ink Quality	-		98 % -56 dBm
Signal Strength 1	-		50 ubiii
ignal Strength 1 Transmit Link Speed	72.2 Mbps	Receive Link Speed	2.0 Mbps

button: Providing some data information about some statistic information about transmitting and receiving.

Transmit C Receive	9	5
Transmitted Successfully	-	2454
Retransmitted Successfully	=	2422
Fail To Receive ACK After All Retries	=	180

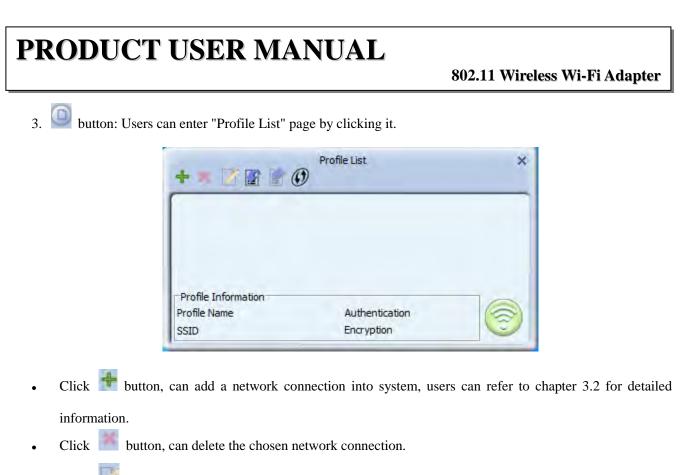

- Click button can do edit operation.
- Click 🔟 button, can import some files into system.
- Click from system.
- Click 🚺 button can add a WPS profile. When finish the related setup, please click 💌 to follow the adding guide and finish it.

Profile Settin	ngs >
WPS Method @ Push-Button	
C PIN	WPS Version
	2.0
WPS AP List. Jacky	2

Remark: WPS function needs device (WiFi adapter) support for WPS button.

802.11 Wireless Wi-Fi Adapter

4. We button: This button is for advanced setup.

	Advanced	×
Install Certificate		5.7
User certific	tate	
Issuer certific	tate	
	4	
		- + ·
		-
Certificate Details		
	Version	
Certificate Details Issuer Subject	Version Type	

5. **(i)** button: This button is for checking product version, MAC address information.

	About	
Version		
Utility	5.0.9.19	Date 2015-05-06
Driver	5.1.21.0	Date 2015-02-16
SDK	1.1.18.19	Date 2015-03-14
MAC Address	7C-DD)-90-92-50-4C
MEDIATEK		yright 2014, Mediatek Inc. All rights reserved.

802.11 Wireless Wi-Fi Adapter

4. Device Mode Switch

Here are 2 extra work modes for users to choose according to their actual needs and real situation: Client+AP mode and AP mode.

Client+AP mode can make device connect WLAN and use itself as a Wi-Fi hotspot simultaneously; AP mode is for access point mode.

4.1 Client+AP Mode

Right click the device icon on task bar, users can see a pop-up list:

Launch Config Utility
Switch to Client + AP Mode
Switch to AP Mode
Exit

Click "Switch to Client+AP Mode", users can see the following page:

I RaUI Message		X
Please enter SSID and P	re-Shared key.	
SSID	SoftAP-4D	
WPA2 Pre-Shared Key	I.	
	OK	

Input SSID and pre-shared key and click "OK", then follow the guide to switch the work mode successfully.

4.2 AP Mode

Right click the device icon on task bar, users can see a pop-up list:

Launch Config Utility
Switch to Client + AP Mode
Switch to AP Mode
Exit

Click "Switch to AP Mode", the cofiguration utility will be activitated and the home operation page will pop up.

The device icon will turn to $\overset{\checkmark}{\overset{\checkmark}}$, and the operation method is described in chapter 4.

Notice: If users want to turn back to client mode, just right click device icon and choose "Switch to Client Mode".

5. Disclaimer

This **DATA SHEET** document is the guidance of the installation and tentative usage of our products. Before operating the product, please read this data sheet carefully.

All rights reserved. Any reproduction, translation or simplification of this data sheet in whole or in part is strictly prohibited without written permission from our company.

We do not provide any guarantee about this data sheet, software or other relevant information. We solemnly state that there is no implied business warranty or commercial contract assurance in the sheet, software or other related information. The data sheet is only for operation guidance and reference; it cannot be used as basis or supplement of any other contract or duty.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For 5180-5240MHz, the device indoor used only.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.