 


User Manual

Model: X8MT16
FCC ID: 2ADVA-X8MT16



Thank you for choosing this Tablet PC. In order to keep your device in its best condition, please read this manual and keep it for future reference.

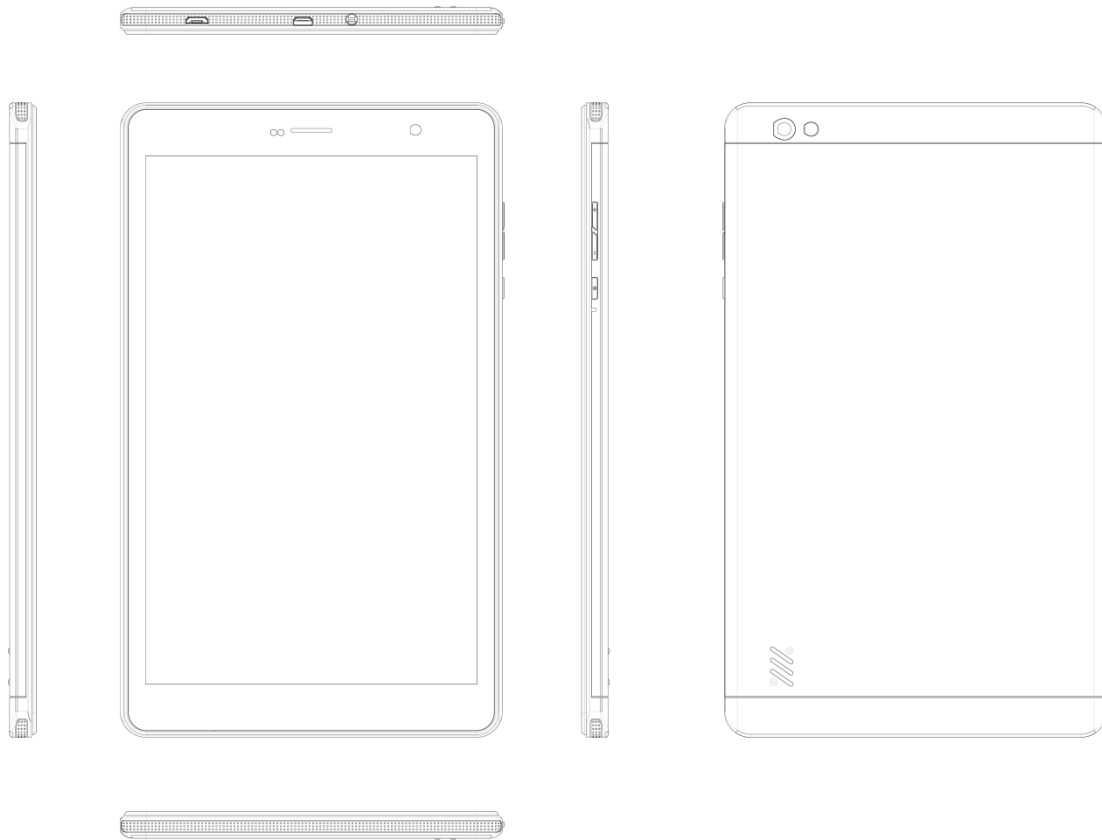

1. Power
2. VOL+
3. VOL-
4. Earphone jack
5. USB Port
6. TF Card
7. Speaker
8. Rear Camera
9. Front Camera

Content

1	Announcements	4
2	Introduction	4
	2.1 Operation and Preparation.....	4
	2.2 Status and Reminder.....	4
3	Quick Start Guide.....	5
	3.1 Keys Function	5
	3.2 Startup and Shutdown	6
	3.3 Screen wakeup and sleep	6
	3.4 Usage of Touch Screen.....	7
	3.5 Home Page	7
4	Basic Setting	8
	4.1 Wireless and Internet.....	8
	4.2 Add Network.....	9
	4.3Bluetooth.....	10
	4.4 Display	11
5	Multi-Media	12
	5. Music.....	12
	5.1 Video	13
	5.2 Photo Gallery	14
	5.3 Camera	15
	5.4 FM Radio	16
6	Internet	17
	6.1 Browser.....	17

1. Announcements

Safety warnings and notices

- λ Please always keep the tablet dry. To avoid the device short trouble, corrosion fault and electric short, please prevent the device, battery and charger from water and moisture, and don't operate the device or charger by wet hand.
- λ To avoid failure of device, battery and charger, please prevent the device, battery, charger from violent shock or shake.
- λ To avoid failure of device, battery and charger, please prevent the device, battery, charger of all over heating or too cold circumstance
- λ Never shock, throw, prod the TABLET PC, or drop, extrude, bend the TABLET PC.
- λ Never disassemble the device and accessories arbitrarily, otherwise the device and accessories are not in our company warranty scope.

2 Introduction

2.1 Operation and Preparation





Battery Charging







Please Full charging before first use..

2.2 Status and Reminder

Reminder icons

When some remind message appears in your reminder window, please click column and slip the screen to open the reminder list. Choose the menu you need, and confirm the information. Then you can close the reminder window through clicking the column to slide up. Please refer to below status icons:

	New email		Airplane Mode on
	USB connected		USB debugging connected

	Return button		Downloading
	Display recently-used application		Home button
	Current electric volume.		WIFI connected, internet is available

Reminder board

Reminder icons will work while receiving emails, WIFI is open, you can open the reminder board to view the detailed information.

 



Open the reminder board

When the reminder column shows new reminder icon, please hold the column and slip down your finger, then the reminder board is opened.

3 Quick Start Guide

3.1 Keys Function

Keys Function Description:

Power button	Short press to sleep/wake up, long press to startup and shutdown.
Volume + (up)	increase the volume
Volume - (down)	decrease the volume
HOME button (home) 	Click it in any interface will return to main interface.
Back button (back) 	click it in any interface will return to previous menu
Menu button 	This button will display in menu interface.
Setting button 	display recently browsed history

3.2 Start-up and Shutdown

Start-up

Long press **POWER** key for **three seconds**, you can enter into start-up picture. The system enters into screen lock status, please unlock it.

Shutdown

 
1. Long press POWER, it will pop-up shutdown window.
2. Shutdown window contains mute mode, airplane mode, reboot mode and shutdown four options.
3. Click Shutdown is the last step.

3.3 Screen wake-up and sleep

Screen will be closed automatically when no operation happens.

1. Screen will be closed on its own if no operation happens for some time to save battery power
2. When screen is open, press POWER key, the screen will be closed immediately.

Screen wake-up when it is closed.

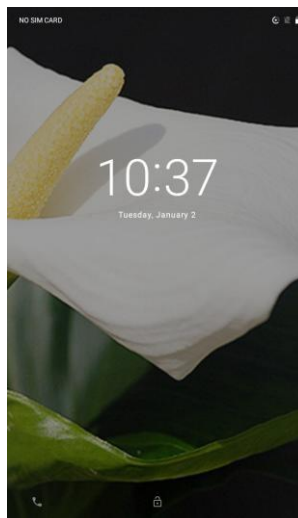

If the screen is closed, short press POWER to open the screen. The screen will be locked open it, it will show the picture as below picture, left slide to unlock and enter into camera, right slide the unlock icon to unlock the screen.

3.4 Usage of Touch Screen

TABLET PC operating methods

There are below methods to view the main screen, menu and application procedure in your TABLET PC.

Click

When you want to use the screen keyboard typing or choose application in the main interface, you only need to touch it by your finger.

Press on

If you want to open some item(text box or the link in the web-page), or shortcut and main procedure move, you can press on this item.

Quickly slide or slide

Quickly slide or slide indicates make quick vertical or horizontal movement by finger.

Pull


Before you pull, you need to hold the it with strength until you pull it into the position you want.

 
Rotate

For most pictures, you only need to rotate the TABLET PC side wise to change the screen direction from horizontal to vertical. For instance, when you are typing words, and watching movies.

3.5 Home Page

Main interface as below picture 3.2, long press the blank and it will pop-up windows to set wallpaper, folder, widgets, and shortcut.

Click  in right top of Picture 3.3, enter into main interface as Picture 3.3 choose the application procedure you want to visit.

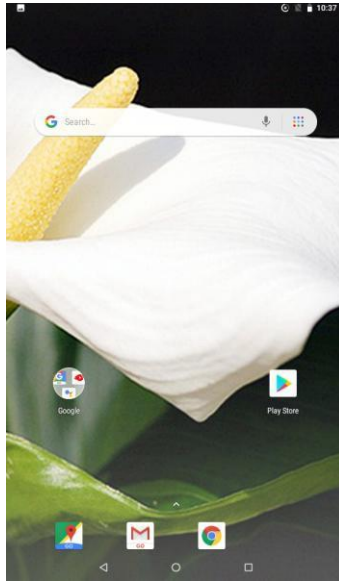

Picture 3.5

4 Basic Setting

4.1 Wireless and Internet


1. Connect Wi-Fi


- 1) In the main menu or interface, choose **setting** application procedure.
- 2) Click WLAN, open Wi-Fi, TABLET PC will automatically search the available Wi-Fi wireless internet. As Picture 4.6
- 3) Choose the Wi-Fi internet you want to connect, if it has password, it will pop-up the password window, enter password, click connect.



Picture 4.1

4.2. Add Network

 - 1) Click  **AKN** icon in right top, as Picture 4.2

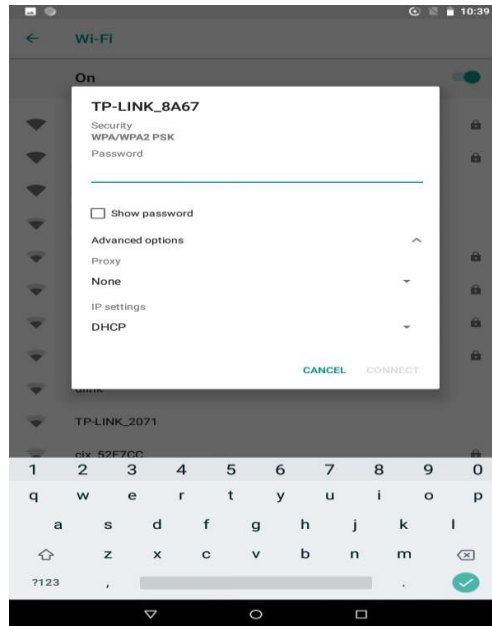


Picture 4.2

- 2) Input network SSID, the wireless network name, click save.
- 3) Click user name already saved, click connect to use network.

2. Network Notice

If you open Network Notice, when WIFI signal appears, the right bottom will remind you available WLAN network

 
3. Keep WI-FI on during sleep..

1. Click  icon in right top of Picture 4.8, select **advanced**.
2. Click **Keep WI-FI on during sleep**, as Picture 4.2

4.3 Bluetooth

Bluetooth function operation

1. Click setting application in main menu interface
2. Click Bluetooth and open it.
3. If somebody open Bluetooth in your surroundings, click search device in right above, then TABLET PC will automatically search the Bluetooth device nearby. As picture 4.31

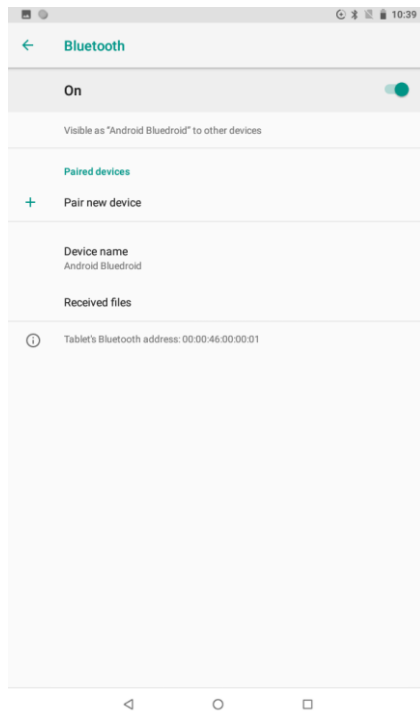


Picture 4.31

4. Click the available Bluetooth device, it will pop-up request window, enter into related password, and match the device to connect.

4.4 Display

4.4-1 Adjust the screen brightness

 1. Click **Setting** application procedure.
2. Click **display**, choose brightness,
3. Drag the portfolio to adjust the brightness volume.As Picture 4.31

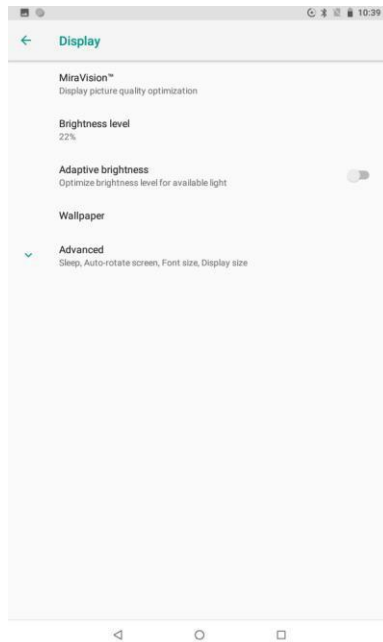

Picture 4.41

 
4. Click OK after brightness is adjusted.

4.4.2 Auto rotation

System is defaulted as open auto rotation, when it is turned off, system won't rotate TABLET PC screen by G-sensor.

4.4.3 Sleep

1. Click setting application.
2. Click display.
3. Click sleep.
4. Set the sleep time as you want, as **Picture 4.43**

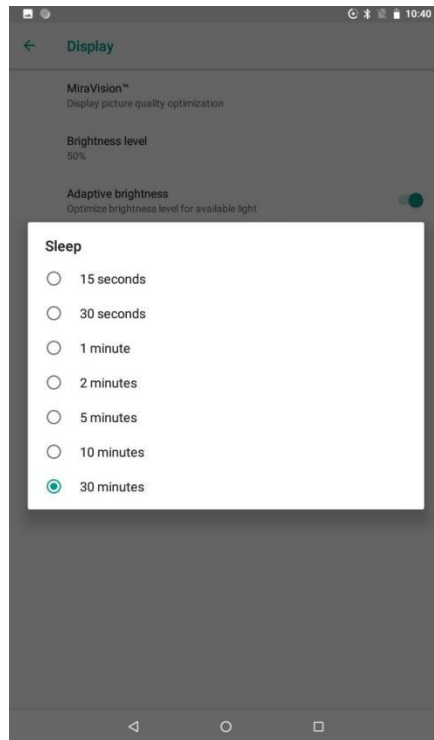

Picture 4.43

5 Multimedia

 
5. Music

Enter into music player: in menu or desktop click music



icon to enter into music player,

click the music you want to play, as Picture 5.1:

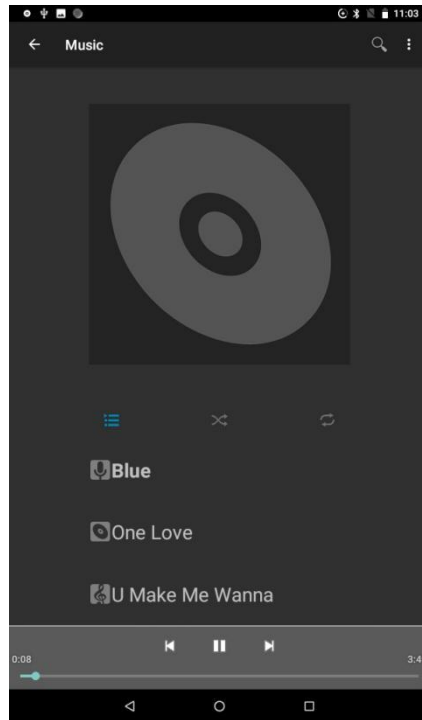


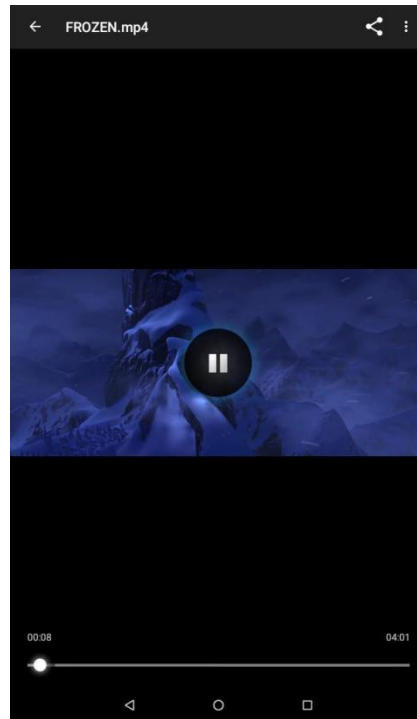 
Picture 5

- λ Drag the progress bar to adjust play progress.
- λ Operation of music player button as Picture 5.1

5.1 Video



- λ Enter video player: choose  application in main menu, choose the video you want to play.
- λ Operation of video player button as Picture 5.3



Picture 5.1

5.2 Photo Gallery

Photo gallery application can auto search photos and video files in SD card, and photo gallery will classify these photos and videos in folder. You can apply photo gallery to view and edit photos, set the photos as wallpaper and watch the video.

View pictures

1. Click gallery application in main interface.
2. Enter into gallery, click the folder you want to view.
3. Click the picture you want to view, the system will play it in full screen mode automatically.
4. The pictures can be zoom in and zoom out, put two fingers on the screen, the separate the fingers(gather up the fingers, the picture will be zoom in) or double click the screen.


Note: when you browse the pictures, slide left or right to view more pictures.

Edit and set pictures

When check the pictures in full screen mode, click menu key to display menu selection, you can choose the selection you need to edit and setting pictures.

λ Slide Show

1. Open a picture, use virtual key to click menu key, display menu selection.

2. Click **slide show**, it will auto loop play(or choose  button in picture folder)

 
λ **Crop**

1. Click **menu** key to display menu selection.
2. Then click crop, click and drag related area to adjust the cropper.
3. Click cropper and drag it inside and outside to adjust the image.
4. After adjust the size you want, click **crop**.
5. If you wish to give up to crop, click **cancel** to return to picture browse.


λ **Edit**

1. Click **menu** key, display the menu selection.
2. Click **edit**.
3. Adjust the brightness, style, color, antialias setting in selection.
4. Click **save**.
5. If you want to give up edit, click **return** key, click **not** to return to picture browse.

5.3 Camera

In the main interface or desktop, click camera application procedure  , enter into camera

 
- λ Operation of camera ,Switch camera: choose **Menu** key, click **switch front/back camera**, as Picture 5.4

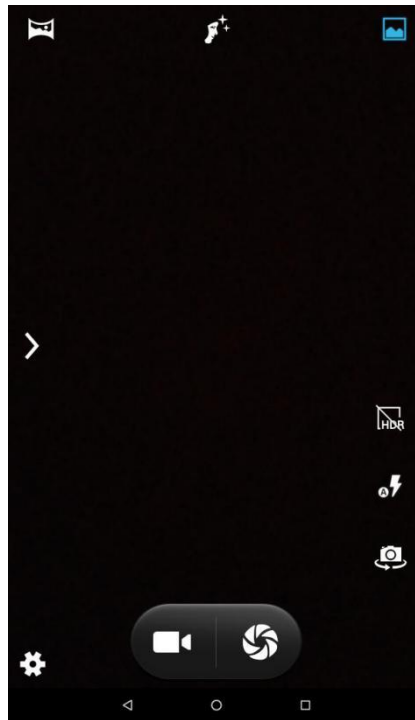

Picture 5.3

5.4 FM Radio



Click  in the main interface or desktop to enter into FM radio interface:

λ Radio button operation instruction as Picture 5.5:





Picture 5.4

Note: You need to insert earphone as antenna when using FM radio, If no antenna, your TABLET PC can't search any frequency band.

6 Internet

 
6.1 Browser

 In case of Wi-Fi or mobile internet is connected well (Please refer to Chapter 4.1 for wireless and internet setting), click IE browser  in the main menu or desktop to enter the IE interface, as Picture6.1

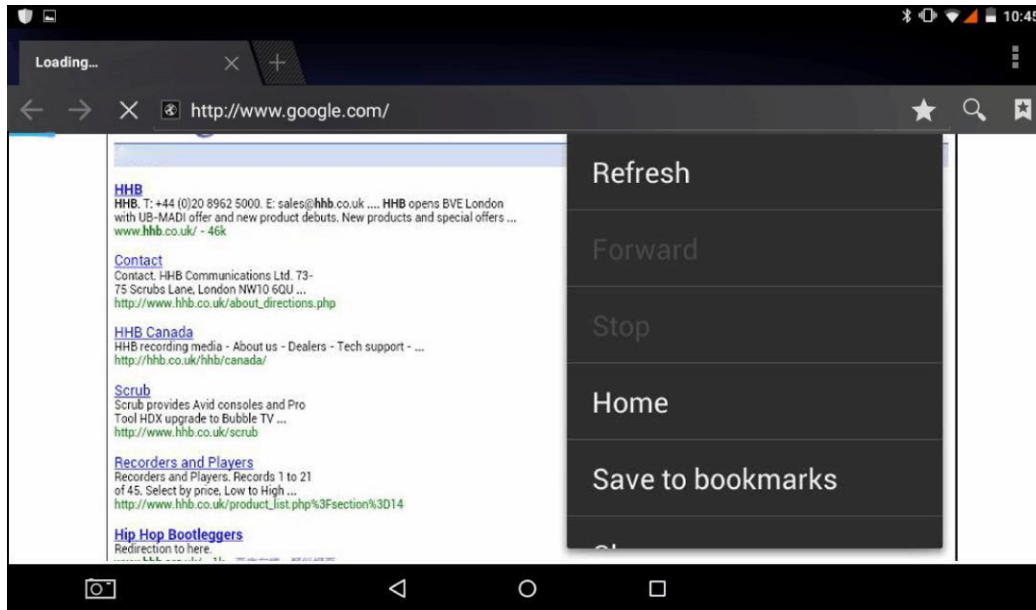

Picture 6.1

 Click address bar to input the website, click start, enter into related web page, then you can browse the website information, as Picture 6.1.2 and you can click the menu you can refresh ,save to bookmarks, share page,bookmarks,,history and setting the web page.

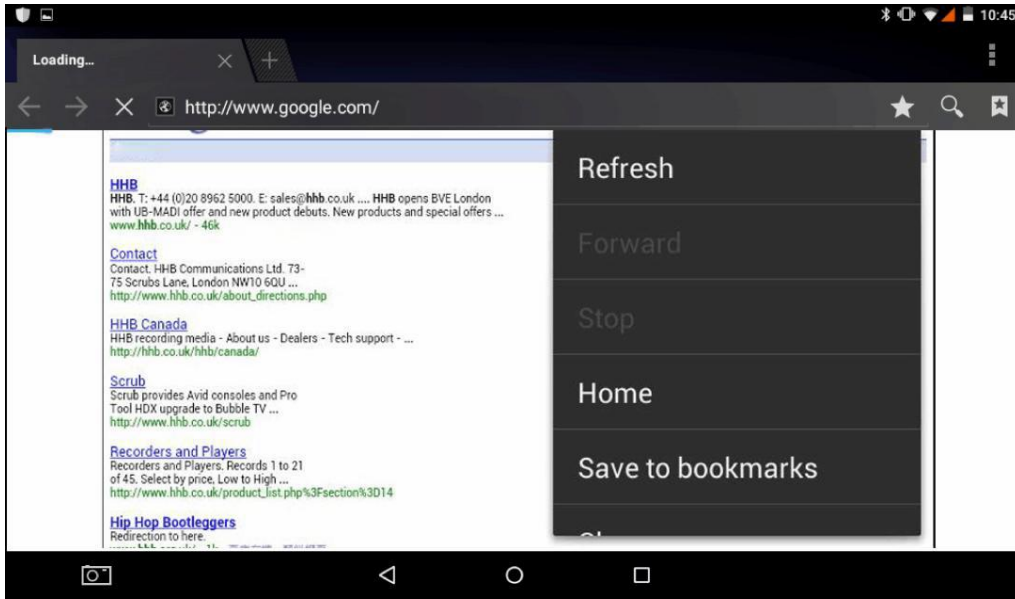

Picture6.1.2

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.