

User Manual
Model:I12
Brand:DaNo
FCC ID:2ADWD-I12

Contents

1. About phone.....	4
2. Dial.....	6
2.1Disconnect BT.....	6
2.2Connect BT.....	7
3. Menu.....	8
3.1 Phone book.....	8
3.2Message.....	13
3.3Dail Recorder.....	22

3.4Setting.....	31
3.5Alarm.....	37
3.6Magic Voice Function.....	38
3.7BT Settings.....	39
3.8BT Music.....	40
3.9BT Dialer.....	42
3.10 Remote capture	46
4.Notice	47
4.1Safety Instruction.....	47

4.2Safety Warming.....	48
------------------------	----

1. About phone

The phone is a host computer via Bluetooth pairing later, by operating Phone, you can call the function to achieve control of the host product, and comes with GSM function, you can insert a SIM card, used alone. Phone through Bluetooth support host-side music, synchronize contacts, sync messages.



2. Dial

2.1 Connect BT

In this state, receive calls, and the answer is allocated by the SIM card on the Phone, BT call menu can not be used.

When the network operator's logo appears on the screen, you can make or receive calls. The upper left corner of the display screen information display network signal strength bar.

2.2 Connect BT

The following operations are in the Bluetooth Dialer (slave), and when attached to the host, see the specific connection method 3.9 BT dialer.

2.2.1 Answer The Phone

Bluetooth Dialer (slave) and the host will receive a Call Alert. Press host or Bluetooth Dialer (slave) The answer key can answer an incoming call, the host of all voice calls to the handset, with a

sub-machine conversation. You can also switch the handset to answer a host in the host side.

2.2.2 Dial Phone Call

Bluetooth Dialer (slave) when there is no SIM card, from a Bluetooth Dialer (slave) Press after dialing the number, in fact, this time using a dial-up host SIM dialing, voice calls go to the Bluetooth Dialer (slave) , call Bluetooth dialer (slave). When you hang up, press the hold button and Bluetooth host

dialer (slave) can hook key to hang up.

Bluetooth Dialer is equipped with a SIM card from a Bluetooth Dialer (slave) dialing, you can select Local call or BT call, local call if you choose to use Bluetooth Dialer (slave) of SIM card dialing. If you choose BT call if you are using the host's SIM card dialing,

voice calls go to the sub-machine, with a sub-machine conversation, hook, hook keys by host

and slave can hang hook key.

3. Menu

3.1 Phone book

3.1.1 Local Phone Book Local Phone Book

The machine stored contacts.

- Add a new contact: You can increase the storage of contacts, enter the name and phone number, and then save.

1. *Click Add new contact can choose to contacts*

stored in the SIM, or the phone inside the machine, enter the names and phone numbers saved.

- 2. *Click the Phone book setting can view the status of the phone book store.*
- Quick Find: in the input box to search for contacts first letter of the word to search for a contact.
- Contact: Select a contact, press dial keys to directly make a call, press the left soft key to view,

edit send text messages, delete, copy, caller groups, phone book setting.

3.1.2 Bluetooth phone book

Coming from a Bluetooth sync contacts in.

- Quick Find: in the input box to search for contacts first letter of the word to search for a contact.
- Contact: Select a contact, press dial keys to directly make a call, press the left soft key to view,

send text messages, copy the number to the local phone book.

3.2 Message

3.2.1 Write message

➤ Sent to: Send, enter the information you want to send the contact number, or add contacts from the local phone book, and then press the left software select Send mode .

1. *Sent by local: Sent using this phone number.*

2. *Sent by BT: Via Bluetooth (with a Bluetooth connected devices) to send text messages.*

➤ Input method: Select input method

1. *ABC: Uppercase text input*

2. *abc: Lowercase text input*

3. *Numeric: Enter a number*

4. *Insert symbol: Caret*

➤ Advanced: Advanced Options

1. *Insert number: Phone number into the phone to*

be sent, then click enter to connect the phone book, select the contact you want to send.

- Save: Save SMS to Drafts, Drafts can be found in the saved text messages.

3.2.2 Inbox

SMS inbox. Press * key to switch to view local or BT SMS inbox.

- Local: can view the phone number of the received message, click enter to view the content of

text messages.

1. *Reply: Direct reply to SMS*
2. *Call sender: Send phone number to call.*
3. *Forward: SMS Forwarding*
4. *Delete: Delete SMS*
5. *Delete this number message : Delete this number of messages*
6. *Delete all: Delete all messages*
7. *Advanced: Advanced Options*

8. *Save to phone book* : Save the sender's number to the phone book.

- BT: Can view the connected devices SMS inbox.

3.2.3 Outbox

Outbox message has been sent. Press * key to switch to view local or BT Outbox SMS.

- Local: Can view the phone number of the received message, click enter to view the content of

text messages.

- BT: Can view the connected equipment outbox text messages.

3.2.4 Drafts

Drafts, unsent message. Press * key to switch to view local or BT SMS Drafts.

- Local: can view a draft text of this machine saved, click to enter can view the contents of text messages.

1. *Send: Send SMS draft*
2. *Edit: Edit SMS*
3. *Delete: Delete SMS*
4. *Advanced: Advanced Options*

➤ BT: can view all saved Drafts messages in the connected device.

3.2.5 Sent message

SMS has been sent. can view the records BT Local or send text messages.

➤ Local: can view the text of the machine has been sent, click to enter can view the contents of text messages.

1. *Forward: SMS Forwarding*
2. *Delete: Delete SMS*
3. *Advanced: Advanced Options*

➤ BT: SMS has been sent can view in the connected equipment

3.2.6 SMS settings

➤ SIM

1. *SMSC address: Carrier SMS center number setting.*
2. *Delivery report: Set whether to send the report, after the setting is turned on, the other will return to later receive a text message has been received prompt reports.*
3. *Reply path: Set whether to open the reply path.*
4. *Voice mail server: Set Voice mail*

- Memory status: View the number of messages stored in the state.
- Save sent message: Save message has been sent. Select Close will not save messages that have been sent, select Open will be saved has sent a text message.
- Prefer...: Set SMS saved on the machine or SIM card.

3.3 Dial Recorder

3.3.1 call history

- Missed calls
- 1. *Local: View native missed call records, select a phone record, you can view the phone information, callback number, send a text message, save the number to the phone book, blacklist, delete obedient records, etc.*
- 2. *BT: View BT missed calls records connected device, select a phone record, you can view the*

phone information, callback number, send a text message, save the number to the phone book.

➤ Dialed calls

1. *Local: Check the machine dialed telephone records, choose a phone record, you can view the phone information, callback number, send a text message, save the number to the phone book, blacklist, delete obedient records, etc.*

2. *BT : View BT connected devices dialed*

numbers, select a phone record, you can view the phone information, callback number, send a text message, save the number to the phone book.

➤ Received calls

1. *Local: Check that the machine is connected to the phone records, choose a phone record, can view the phone information, callback number, send a text message, save the number to the phone book, blacklist, delete obedient records, etc.*

2. *BT; View BT connection device is connected to the phone records, choose a phone record, you can view the phone information, callback number, send a text message, save the number to the phone book.*

➤ All calls

1. *Local: See all the native phone records, select a phone record, you can view the phone information, callback number, send text messages, save the*

number to the phone book, blacklist, delete obedient records, etc.

2. *BT: Check all the native phone records, select a phone record, you can view the phone information, callback number, send text messages, save the number to the phone book, blacklist, delete obedient records, etc.*

3.3.2 call settings

➤ Call waiting:Setting off call waiting, call waiting

start up settings, check the status of call waiting.

- Call divert: Call forwarding settings
 1. *Divert all voice* : Set *divert all calls unconditionally*.
 2. *Divert if unreachable*: Set *when not contact when transferring calls*.
 3. *Divert on no answer*: Set *the phone to call no answer*.
 4. *Divert if busy* : When transferring a call, set the

phone busy

5. *Divert all data calls: Divert all calls data.*
6. *Cancel all divert: Cancel call forwarding, can cancel all settings.*
 - Call barring: Call barring settings.
 1. *Outgoing calls: Restrict all outgoing voice calls, restrict international voice calls, voice calls without restricting international domestic.*
 2. *Incoming calls: Restrict all voice calls, voice*

calls when roaming restrictions.

3. *Cancel all: Enter the password to cancel all call barring settings.*

4. *Change barring password:Change Password Call set limit.*

➤ Line switching: Call line settings, you can now line 1 or line 2

➤ Advanced setting: Advanced Settings

1. *Blacklist:Set list, blacklist reject all calls, set up*

blacklist numbers.

2. *Auto redial: Set up automatic redial on or off.*
3. *Answer mode: Set incoming calls answering mode, can press any key answer or automatic answer.*

3.4 Setting

3.4.1 Profiles

Setting Profiles

- General: Standard mode, set the standard

mode on and off, set the type of ring tones, set ring tones sound volume, set SMS ring tone types, set SMS tone volume, set the key sound.

➤ Ears hang:Headset mode, set the standard mode on and off, set the type of ring tones, set ring tones sound volume, set SMS ring tone types, set SMS tone volume, set the key sound.

3.4.2 Time and date

Set the time zone & time & date

- Set home city: Set the time zone area
- Set time/date: Set the time and date
- Update with time zone: Update Time Switch

3.4.3 Phone settings

- Scheduled power: Timer switch settings
- 1. *Scheduled power on: Set timing for the start time*
- 2. *Scheduled power off: Set the timer off time*
- Language: Language Settings, select the

language after entering, click OK.

- BT mode: Bluetooth mode and normal mode switch setting
 1. *Normal mode: Normal mode, this mode GSM and BT dialing can be opened at the same time*
 2. *BT mode: Bluetooth mode, this mode GSM phone off signal, only Bluetooth dialing*
- BT phone warning tone setting: Bluetooth mode disconnect warning ring tone

3.4.4 Security settings

Mobile security settings, can set the phone lock or change the phone lock code.

- SIM security: SIM Security Settings
- 1. *PIN lock: Need to enter a password before setting the PIN code lock switch.*
- 2. *Change PIN: Change the PIN code, PIN lock before setting needs to be set to the ON state.*
- 3. *Chang PIN2: Change PIN2 password*

- Phone security: Mobile Security Settings.
 1. *Phone lock: Set the phone lock switch state, when changes to the ON state, need to enter a password, the default password is: 1122:*
 2. *Change password: To change the phone lock code, need to enter your old password before changing*
 3. *Screen auto lock: Set the screen auto-lock function, can set off the automatic lock, auto lock*

*after 15 seconds, 30 seconds automatically lock,
auto lock after one minute, five minutes after the
automatic lock.*

3.4.5 Network setting

➤ Network:Settings Select the network,can be set to: automatically or manually.

3.4.6 Restore settings:Restore factory settings, the default password is: 1122.

3.5 Alarm

3.5.1 Switch settings

Set the alarm switch

3.5.1 Alarm bells way

The alarm clock rings, can be set to a single day, custom three ways.

3.6 Magic Voice Function

This feature applies to calls made using this machine, BT Dial This function can not be used.

can select the type of magic sound: wom

an, man, child, old, cartoon, young, optimus, duck, robot, eva, walle, rapman and rapwoman.

3.7 BT Settings

- **Power:** This switch can activate or deactivate the Bluetooth function. The phone's Bluetooth is switched off by default.
- **Visibility:** When the device visibility setting ON may be other devices to search, when you set OFF other devices do not search the local Bluetooth

device.

- My name: Is displayed when other devices to search for this name. This name can be changed.
- Anti lost: Bluetooth anti-lost settings.can set the open and close anti-lost status, set the ringing mode, etc.

3.8 BT Music

This feature requires a connection to the host BT. This feature can control a Bluetooth device

music play, pause, next, previous one.

Function Control Introduction:

The arrow keys: to increase the volume

Under the direction keys: to reduce the volume

Key 5: Pause Play / start playing a song

Key 4: Play the previous song

Key 6: Play the next song

***Special Note: BT connection method see
the introduction of 3.9 BT dialer.***

3.9 BT Dialer

This function can be paired with a host of BT pairing, by operating Phone, the host device can be controlled to achieve the call, BT anti-lost, sync contacts, sync SMS function.

Note:

- 1. To achieve the BT Phone anti-lost, sync contacts, sync SMS features, you must install the APK program in the smart device side: BT*

Notification_v1.3.19.apk. Above function only supports android devices.

2. In order to better match the BT, in order to achieve better functionality when connecting and searching BT, recommend the use of the host operating, that the use of host-side search Phone (slave) to complete connection of BT name.

➤ Search new device:Search prime new device,

the following list will appear in the sub-machine search can search for a host of Bluetooth, select the host you want to connect a Bluetooth.

➤ Matching sub-machine BT: BT name search on the host side, select the name of slave and slave end will prompt for password, click OK to complete the pairing.

Note:

- 1. Once connected, click on the name after***

the sub-machine settings to achieve sub-machine hosts music and call control after the call audio, media, audio must be checked.

2. After the match, the host terminal prompt "contact request, Phone wants to access your contacts and call history, Phone allow access it?." Click OK. Otherwise, PHONE can not sync contacts.

➤ Disconnect: Select the BT host In BT dialer

that you have connected, point the left function key to enter the menu, select Disconnect, disconnect tips.

➤ Remove the connected device :
Select the BT host in BT dialer that you have connected, point the left function key to enter the menu. Select Delete. Before deleting, please disconnect the BT.

3.10 Remote capture

After the connection of Bluetooth, this function can control the host photos.

4. Notice

4.1 Safety Instruction

If your phone is lost or stolen, please immediately notify the telecommunications sector in order to disable the SIM card (this feature requires network support), which will allow you to take a call

from another economic losses.

To make your phone from misuse, please take preventive measures, such as:

- Set up SIM card PIN number;
- Set the phone password .

4.2 Safety Warming

Driving Traffic Safety first

When driving, do not use the phone. When a

call is unavoidable, use a hands-free accessories. Remember that in some countries the phone while driving is against the law.

- On the plane to shut down.

Cell phones can cause interference. Use of mobile phones on airplanes is not only illegal but also dangerous. Make sure that the aircraft during flight will not turn the phone.

- In the danger zone to be shut down
 - In Oil gas station,in the vicinity of mining,chemical plants or blasting activities, to strictly abide by the relevant laws or regulations, turn off the phone.
- Comply with the special provisions
 - To comply with the special provisions, prohibit the use of cell phones at any place or anything that may cause interference or danger please

turned off phone. For example: in the hospital. Special attention should be using the phone near pacemakers, hearing aids and other medical electronic equipment, cell phones may interfere with these devices.

➤ Interference

Cell phone call quality can be affected by interference of radio waves. The device has an internal antenna when the phone is switched

on, if not necessary, do not touch the antenna area (bottom, below the phone's microphone), so as not to affect the communication effect.

➤ Professional Services

Only professionals can install or repair the phone. Self-install or repair phone may bring great danger, but also violate the warranty provisions.

- Accessories & Batteries
 - Use only factory-approved accessories and batteries.
- Rational use
 - Use the phone in the normal way.
- Emergency Call
 - Determine the phone is switched on and in service, enter the emergency number, such as

999 112 or other, point to issue a call by dialing icon. Reported out your location, and a brief description of what happened, without permission, please do not terminate the call.

Note : *Like with any cell phone, due to the network coverage transmission or wireless signals cause, may not necessarily support this phone has features that some networks do not even support 112 emergency call service. Thus, for particularly*

critical communications (eg medical emergencies), should not rely solely on the phone. Please consult with a check to the local network operators.

FCC

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue.

Device types: I12(FCCID: 2ADWD-I12) has also been tested against this SAR limit. The highest SAR value reported under this

standard during product certification for use at the ear is 0.784 W/kg and when properly worn on the body is 0.463 W/kg. This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.0 cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories

used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of

accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including

interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment .This equipment has been tested and found to comply with the limits for a Class B digital

device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no

guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the

equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The user's manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications

not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the Internet, the information required by this section may be included in the manual in that alternative form, provided the user can reasonably be expected to have the

capability to access information in that form