
# 7143-27GY/W57-CK

## Instruction Manual

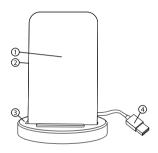

#### Functions:

- 1. Wireless Charging Surface
- 2 LED Indicator 3. Limestone Stand
- 4. USB cable

# What's included:

- 1 x Cork Wireless Charging Pad
- 1 x Limestone Stand
- 1 x Instruction Manual

## Tech Specifications

- Input: 5V/2A
- · Wireless Output: 5W

#### Instructions:

# 1. Using the Charging Stand:

- . The cork wireless charging pad can be used either flat on the table or can be placed in the limestone stand for a upright charging surface.
- . To use the charging stand in the upright position, simply thread the top of the charging pad through the bottom of the limestone stand
- . Place the USB cable along the cut out channel to the back of the stand, then place on the table.

## 2. Wireless Charging Mobile phones and other electronic devices:

- Connect the USB cable of the charging pad to a power source. LED indicator (2) will glow RED when the device is in wireless charging standby.
- · Place the wireless charging supported mobile device vertically on the wireless charging surface(1), LED will glow BLUE when device is charging.
- Phone will begin to charge automatically. wireless charging LED(3) will turn off when the device is fully charged. · Once fully charged remove the device.
- \*\* Note: When wireless charging, if the LED indicator flashes the device is either NOT a wireless charging device or there is an object between the device and charging surface interfering with the charging.

### SAFETY PRECAUTIONS:

process.

- · WARNING-When using this product, basic precautions should always be followed:
- Read all the instructions before use. 2. Never store or use this product in temperatures below 32°F(0°C) or above

### 115°F(45°C)

- 3. Do not overcharge your phone. The unit may become hot under excessive use. Remove your phone once it is fully charged. Never charge your phone for more than 7 hours at a time.
- 4. To reduce the risk of injury, close supervision is required when the product is used near children.
- Do not expose the device to moisture.
- 6. Do not use the device in excess of its output rating. Overload outputs above the rating may result in a risk of fire or injury
- 7. Do not use the device if damaged or modified.
- 8. Do not disassemble the device. For repairs, seek a qualified service professional, incorrect reassembly may result in a risk of fire or injury.
- 9. Do not expose the device to fire or excessive temperature. Exposure to fire or temperatures above 104°F may cause explosion
- Ensure that qualified service professionals. use only identical replacement parts to ensure product safety.
- 11. Attachments on the back of your phone can impede the effectiveness of the
- wireless charger, and lead to overheating. 12. Please remove any attachments from the phone before charging on this device. attachments can interfer with wireless
- charging and lead to over heating 13. This product is made from cement. If drop, it may crack, Please handle with care.

#### FCC Caution-

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This enginment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no suprantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected

-Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 30cm hetween the radiator & your hody



MIX

Paper from responsible sources

FSC® C161647

20 mm



31.2 mm

Paper from responsible sources

FSC® C161647

**FSC** 2.7mm