

**M50L**

---

**QUICK**

**START**

**GUIDE**

# Package content

- Case
- Handset
- Battery
- Charger
- Data Cable
- Manual
- Screen Protector
- Stereo Headset
- Thank you Card



Their items supplied with the device and their images  
May vary by region

## Accessing more information

 
To view the full user manual on your device, launch the Settings app and tap User Manual.

Visit [www.figoglobal.com/usermanual](http://www.figoglobal.com/usermanual) to view device information, the user manual, and more.

- The user manual may not be available depending on the web browser or service provider.
- You may incur additional charges for accessing the internet.


# Device layout

To turn on the device, press and hold the Power key for few seconds.

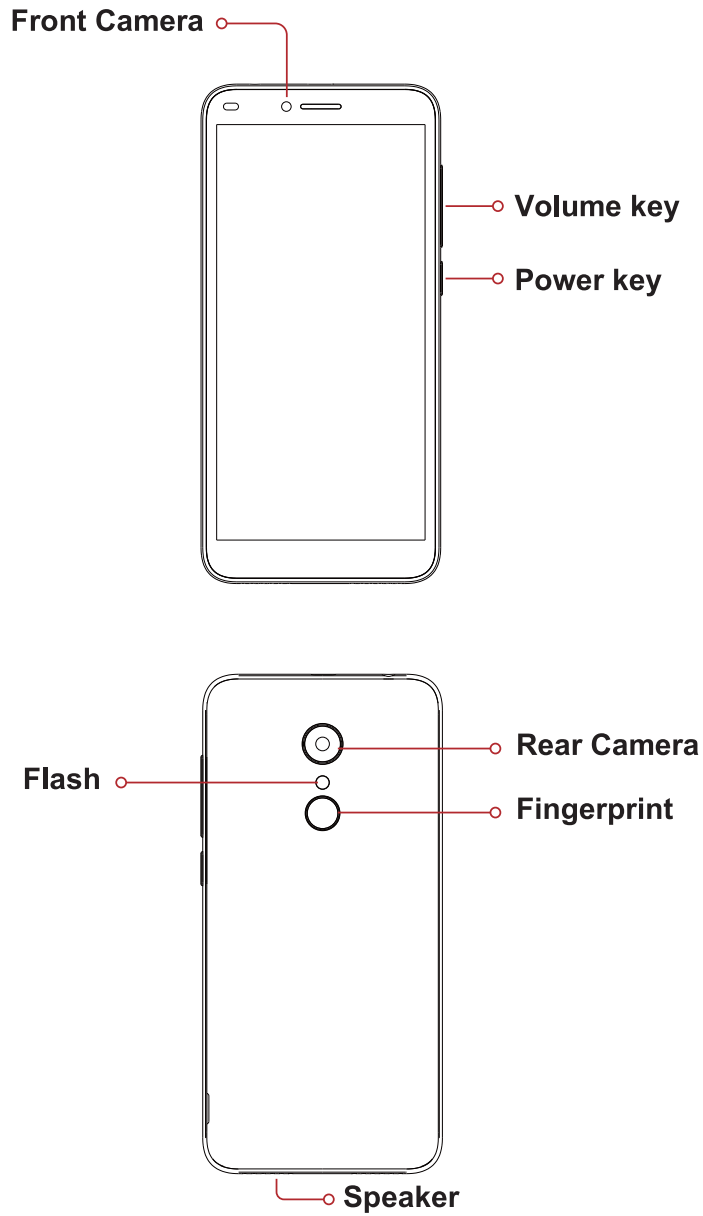

# Installing a nano-SIM and a microSD card

 Gently remove the battery door from the phone, slide and lift the SIM tray door and place the SIM card as shown in the picture below:

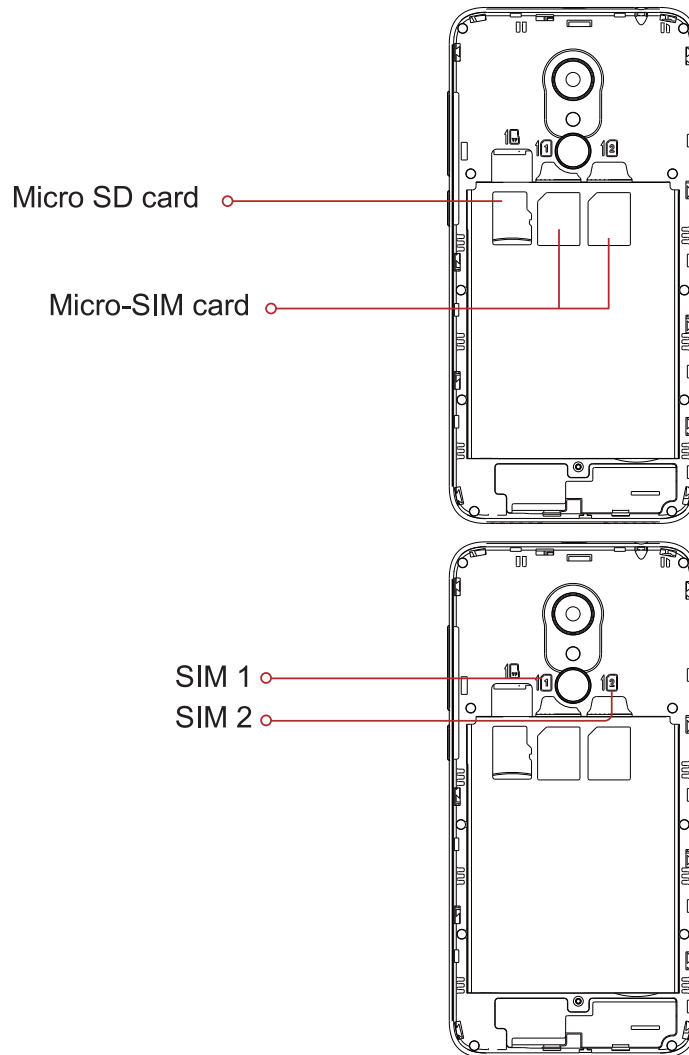


- If the card is not firmly to the tray, the card may leave or fall out of the tray.



Nano-SIM card, Micro-SIM card and MicroSD card are sold separately.

# Charging the battery

 
Before using the device for the first time, you must charge the battery.

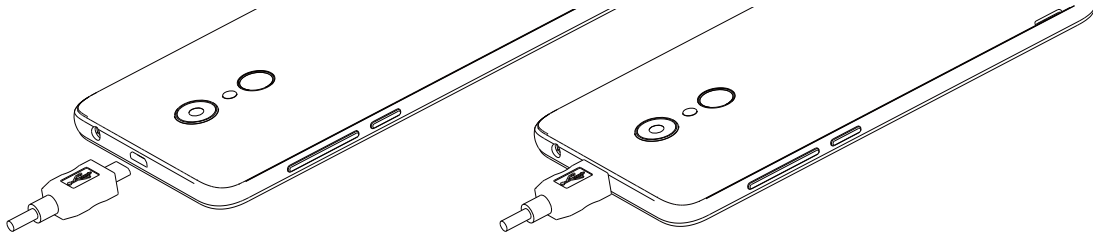

The charger should remain close to the electric socket and easily accessible while charging.

# Using the Home button

 - When you turn on the device, the Home button will appear at the bottom of the screen as a soft button.
- When the screen is off, hard press the Home button until the device vibrates to turn on the screen.

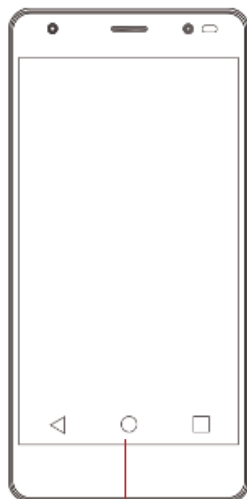

Home button  
(on-screen button)

●To transfer data of the previous to a new device:  
Please login to your Gmail account and sync all your content.

The actual available capacity of the internal memory is less than the specified capacity because the operating system and default apps occupy part of the memory. The available capacity may change when you upgrade the device.

Some content may differ from your device depending on the region, service provider, or software version, and is subject to change without prior notice.

# Safety Information

Read all safety information before using the device to ensure safe and proper use.



## Warning

**Follow the warning information provided below to prevent incidents such as fire or explosion.**

- Do not expose the device to physical impact or damage.
- Use manufacturer-approved batteries, chargers, accessories, and Supplies.
- Prevent the multipurpose jack and battery terminals from contacting conductive elements, such as metal or liquids.
- If any part of the device is cracked or broken, stop using the device immediately and take it to a Samsung Service Centre.
- Do not turn on or use the device when the battery compartment is exposed.

**Follow the warnings below to prevent injury to people or damage for the device.**

- Do not allow children or animals to chew or suck the device.
- If the device has a camera flash or light, do not use it close to the eyes of people or animals.
- The device can be used in locations with an ambient temperature of -10°C to 55 °C. You can store the device or reduce the battery's lifespan.
- Do not use your device in a hot environment or near fire.
- Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle.
- To protect your eyes, do not stare at the iris recognition LED light when your eyes are less than 20 cm away from the device.



To prevent possible hearing damage when using a headset, do not listen to sound high volume for long periods.

To view the full safety information including device and battery disposal instructions, launch the **Settings** app and tap **About phone** → **Legal information** → **Safety information**.

You can download and install the firmware update to upgrade your device's software with the firmware over the-air (FOTA) service. To check for the firmware update, launch the **OTA Update Service** app and tap **Available Update..**



FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television

reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SAR tests are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new device is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, Tests for each device are performed in positions and locations as required by the FCC.

For body worn operation, this device has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 10 mm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

**M50L**

---

**GUIA DE**

**INICIO**

**RAPIDO**

# Contenido de caja

- Caso
- Teléfono
- Batería
- Cargador
- Cable de Datos
- Manual de usuario
- Protector de Pantalla
- Audífonos
- Nota de agradecimiento



Los elementos que vienen con el dispositivo y sus imágenes pueden variar según la región.

## Obtener más información

 
Para visualizar el manual de usuario completo en su dispositivo, inicie la aplicación Ajustes y pulse Manual de usuarios.

Ingresa en [www.figoglobal.com/manualdeusuario](http://www.figoglobal.com/manualdeusuario) para ver información sobre el dispositivo, accede al manual de usuario, y pulse Manual de usuario.

- El manual de usuario podría no estar disponible, Según el navegador web o el proveedor de servicios
- Es posible que incurra en gastos adicionales por acceder a Internet.


# Diseño del Dispositivo

Para encender el dispositivo, mantenga presionado la tecla ENCENDIDO durante algunos segundos,

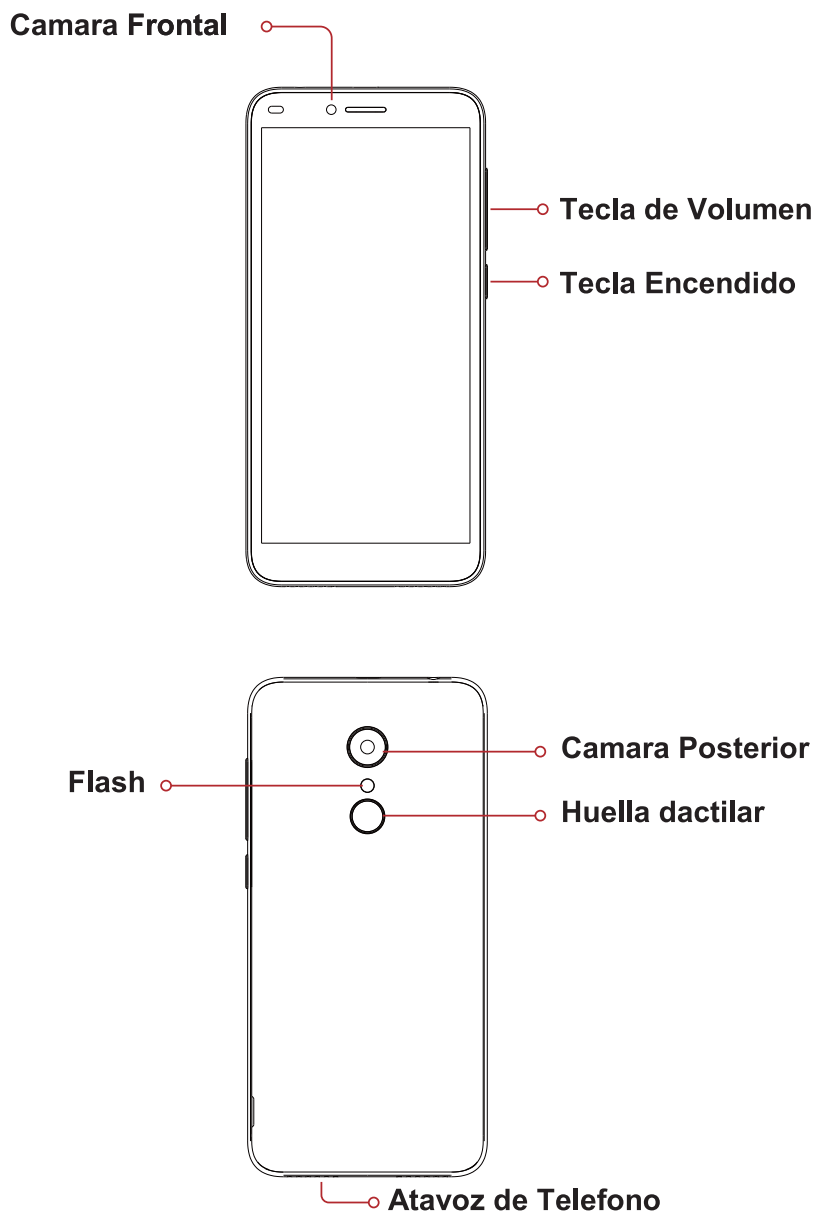

# Instalar tarjeta Nano-SIM, Micro-SIM y tarjeta microSD

 Retire suavemente la tapa de la batería del teléfono, deslice y levante la puerta de la bandeja SIM y coloque la tarjeta SIM como se muestra en la imagen siguiente:

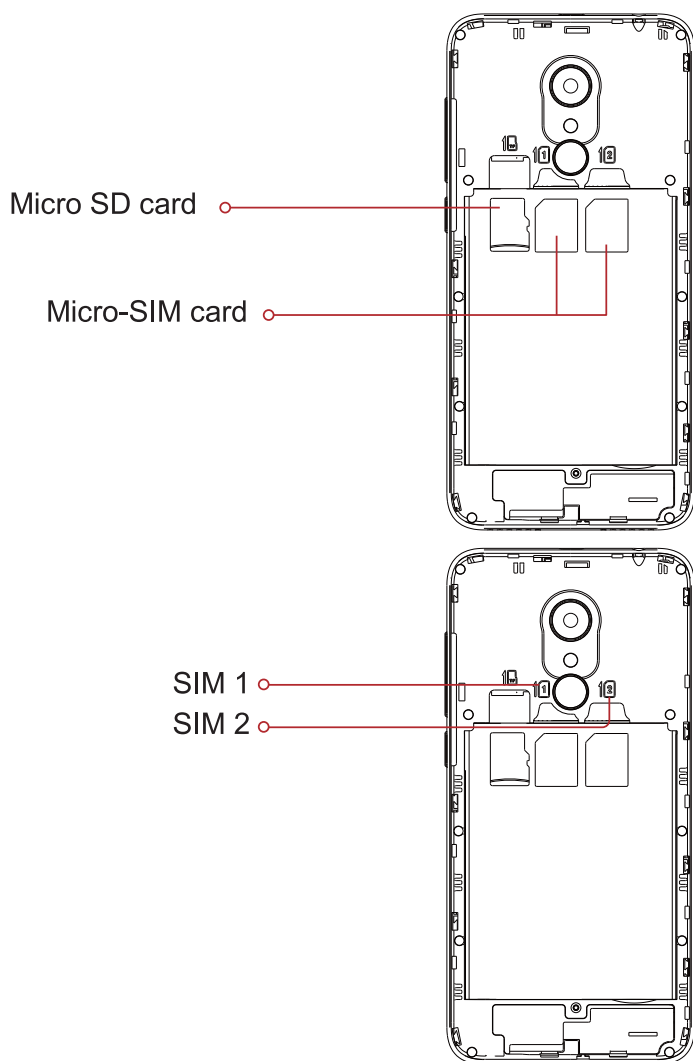


- Si la tarjeta no se encuentra correctamente firme en el SLOT, podría salirse o caerse del SLOT.



Las tarjetas nano-SIM, micro-SIM y microSD se venden por Separado.

# Cargar la batería

 
Antes de utilizar el dispositivo por primera vez, deberá cargar la batería.

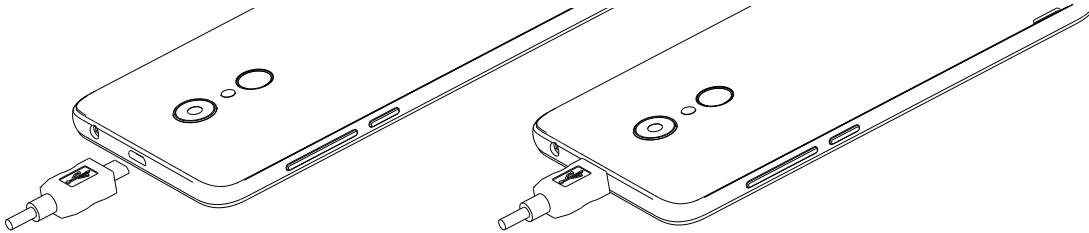

El cargador deberá permanecer cerca de la toma eléctrica, y deberá poder acceder a él fácilmente mientras el dispositivo se esté cargando.

# Uso de la tecla de inicio

 - Cuando enciende el dispositivo, la tecla inicio se muestra en la parte inferior de la pantalla como tecla programmable.

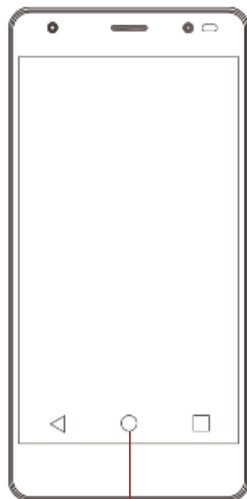

Tecla Inicio  
(botón en pantalla)

- Para transferir datos del anterior a un nuevo dispositivo: Inicie sesión en su cuenta de Gmail y sincronice todo su contenido.

La capacidad real disponible de la memoria interna es menor que la capacidad especificada, ya que el sistema operativo y las aplicaciones predeterminadas ocupan parte de la memoria. La capacidad disponible puede cambiar al actualizar el dispositivo.

Parte del contenido puede ser diferente del dispositivo según la región, el proveedor de servicios o la versión del software, y se encuentra a cambio sin previo aviso.

## Información sobre seguridad

Lea toda la información sobre seguridad antes de utilizar el dispositivo a fin de garantizar el uso correcto y seguro.



**Advertencia**

## **Respete las advertencias que figuran a continuación para evitar incidentes tales como un incendio o una explosión**

- No exponga el dispositivo a impactos o daños físicos.
- Solo utilice baterías, cargadores, accesorios y suministros aprobados por el fabricante..
- Evite que el enchufe multiusos y las terminals de la batería entren en contacto con elementos conductors, como metals o Líquidos.
- Si cualquier parte del dispositivo se encuentra rota o dañada, Interrumpa el uso inmediatamente y llévelo a un Centro de Servicios.
- No encienda ni utilice el dispositivo mientras el compartimiento de la batería se encuentre expuesto.

## **Respete las advertencias que figuran a continuación para evitar lastimar a otras personas o dañar el dispositivo**

- Do not allow children or animals to chew or suck the device.
- Si el dispositivo tiene un flash o una luz de cámara, no loutilice Ojos de personas o animales.
- El dispositivo se puede utilizar en lugares con temperatura ambiente entre  $-10^{\circ}\text{C}$  to  $55^{\circ}\text{C}$ . Puede almacenar el dispositivo o esperanza de  $-20^{\circ}\text{C}$  a  $50^{\circ}\text{C}$ . Usar o almacenar el dispositivo fuera de los rangos de temperatura sugeridos puede ocasionar daños al dispositivo o reducir la vida útil de la batería.
- No utilice el dispositivo en un entorno caliente ni cerca del fuego.
- Cumpla con todas las advertencias y reglamentos de seguridad el uso del dispositivo durante la operación de un vehículo.
- Para proteger los ojos, no mire la luz LED con reconocimiento de Iris si está a menos de 20 cm del dispositivo.





Al fin de evitar posibles daños auditivos al usar un auricular, no escuche sonidos con volume alto durante mucho tiempo.

Para ver la información de seguridad completa, incluidas las instrucciones de eliminación de dispositivos y baterías, inicie la aplicación Ajustes y pulse Acerca de teléfono → Información legal → Información de seguridad.

Puede descargar e instalar la actualización del firmware para actualizar el software de su dispositivo con el servicio de firmware sobre el aire (FOTA). Para comprobar la actualización del firmware, inicie la aplicación **OTA Update Service** y toque **Actualización disponible**.