Instruction manual

Welcome to choose my company product, it's a bluetooth, AUX IN audio playback, bluetooth hands-free, emergency power bank and multi-function portable waterproof night light speaker Bluetooth audio magic sound

box. The product is a portable audio with Bluetooth receiver. You can store the songs in mobile phone or device with Bluetooth playback, and then transmit to this product for music playback via Bluetooth. Read the instruction manual quickly before use.

A. Main features and Technical Parameters

- Bluetooth audio player

- Bluetooth audio player
 Handfree function
 Emergency power bank
 SOS warning signal light flashing
 \$\overline{0}3.5mm audio input interface
 Frequency response: 20Hz-20kHz ± 3db
 Audio Max power: 3W*1
 Max. power consumption: 1W
 Power supplied: built-in rechargeable lithium battery
 Charge input: 5V/1A
 Charging time : around 3 hours
 Continue playing music in maximum volume about 15 hours when built-in lithium battery is fully charged
 Continue for Nightlight about 6 hours when built-in lithium battery is fully charged
 Water resistance level: IPX4
 B Product Illustration

B. Product Illustration



C. Key functions

No	Current mode	Function operating	Button	Operation	Indicator
1	Power off	Power on	ą۵,	Long press for 2 seconds	Status Indicator is ON
2	Power on	Power off	Ľ۵	Long press for 2 seconds	Status Indicator is OFF
3	Power on	Bluetooth pairing		Manually paired	blue status indicator is flashing rapidly
4	Power on	Bluetooth pair successfully		Automatically paired	blue status indicator is flashing slowly
5	Power on	Call back	缩	Double click twice	
6	Call mode	Answer call	٢Ħ	Short press once	
7	Call mode	Reject call	ĘJ,	Long press	
8	Talk mode	End call	양문	Short press once	
9	Play mode	Volume up	+	Long Press	
10	Play mode	Volume down	-	Long Press	
11	Play mode	Previous song	-	Short Press once	
12	Play mode	Next song	+	Short Press once	
13	Play mode	pause/play/mute	ą۵	Short press circle	
14	Any mode	Charging			Red charging indicator flashes
15	Any mode	Battery is full			Red charging indicator is ON
16	Any mode	Emergency power bank			Green status indicator is ON
17	Bluetooth mode	Audio input		Audio cable is plug into the audio input	Blue status indicator is ON
18	External audio	Bluetooth mode		Unplug The audio cable	Blue status indicator flashes
19	Any mode	Night light ON/OFF	\ لا	Short press circle	
20	Light on Mode	Dimmer	Ŷ	Long press	The brightness in ascending or descending regulation
21	Any mode	Turn on/off SOS	SOS button	Short press circle	

D. Bluetooth playback

D. Bluetooth playback
1. Long press " → " for 2 seconds for power ON to Bluetooth speaker. Blue status indicator is ON. Please don't plug the audio cable into the line-in jack when Bluetooth playback.
2. Turn on your cell phone or Bluetooth device on the Bluetooth function, and search for devices in the Bluetooth menu.
3. When "Hiting" appears on the Bluetooth devices list, select "Hiting" to establish pairing and connection (if asked for a passkey, enter 0000). When the pairing and connection is successful, it produces a connected tone, and Bluetooth indicator changes to slow flash, the speaker is ready for playing music. Short Press " → " to play music.
4. When the connection between the mobile and the speaker is successful, and the speaker is playing music, the music will be stopped when incoming call is reaching and the speaker will play incoming call alert, and short press " → " to answer the call, others' speech will be broadcast via the speaker, Long press

"+"or"-" to adjust desire volume for conversation. Please keep toward the speaker within, 1meter distance during phone conversation.Short press " to hang up the phone. The speaker is automatically restored before playback music. To reject the incoming call, long press " for 2 seconds to reject the incoming call. To redial the previous call number, short press " twice for redial. 5. If the pairing is overtime or no flash for indicator light, please repeat step 1 to 3 for re-connection.

E. Audio input mode

Please insert 3.5mm audio cable into the audio input port of the product, with MP3, IPOD, cell phone or other audio connections, audio music playback, adjust the audio output volume to achieve the best sound, and the green indicator is on.
 Long press "+"or "-" to adjust desire volume to achieve the best sound is accurred.
 Through 'audio line-in' jack playing music, short press "a" for play/pause, the last song, the next song are no function.

" $\overrightarrow{\mathbf{A}}$ " for play/pause, the last song, the next song are no function. Please control music through your music device. **4.** Please pull out the audio cable to disconnect the devices from the speaker, the speaker will switch back to the Bluetooth mood, blue status indicator is flashing again, and the product will automatically pair back with the last device.

F. Charging and emergency power

F. Charging and emergency power
1. Connect DC 5V adapter with the Micro USB for power supply and charging the built-in rechargeable lithium battery synchronously, the red power indicator flickers. After the full charge, the red indicator is on. Disconnect the adapter, all the power charging indicators are off.
2. Includes Built-in high capacity lithium battery, connect USB power cable to the USB output port, to provide emergency power to charge your phone or tablet; when charging the green indicator lights on, when the green indicator light lashes means the built-in battery power is insufficient, please charge it.
3. When the speaker in the charging process, the emergency power interface can not provide power output.
C. Night Light and SOS warring function

G. Night Light and SOS warning function

The Bluetooth speaker is with Night light function. Please short press "& "for Light ON/OFF, or long press "&"to adjust the dimmer function. SOS button is the SOS distress signal lights button in field , short press circle "&" can turn on or off SOS warning light, long press the "SOS" button to adjust the SOS light level. In low light situations, you can extend the use of time of SOS signal light.

H. Troubleshooting

Failure Manifest	Solutions		
Bluetooth playback interrupt and produce a sound	Lower battery, please charge		
Fail to turn on			
Music intermittent in Bluetooth playback	Try to move the bluetooth device close to the product or change the audio or equipment location		
	Lower battry , please charge		
	Try to move the Bluetooth device closer to the speaker		
	Turn off & restart		
	Device of the computer has Bluetooth function or not		
Equimpment cannot pair with Bluetooth	Try repeating this product Bluetooth playback and set up steps		
audio connection	Play the music in the only one device, cance Equipment and unused pairs (see the documents for help), in accordance with the procedure set pairing new devices		
	Bluetooth name is not correct, confirm whether "Hiting"		
No call function	Repair again		
No can function	Check the setting of the phone(see the phone manual)		
Var failure	Lower battery, please charge		
Key failure	Turn off & restart		
Weak sound or loud sound	Touch "+" or "-" key to the suitable level		
No output for power	Built-in battery low power, pls charge		
bank	The product is in charging status		

I. Packing Accessories

1. Micro USB cable x 1 **3.** An adapter (optional)

2. Line in audio cable x 1**4.** Instruction manualx1

Caution:

1. The product accords with IPX4 waterproof level, don't directly rainy or put in water, should be kept away from fire, high temperature environment to avoid the product does not work normally and explosion. 2. When playing music, the bluetooth speaker disconnect and shutdown suddenly, then can't turn on the speaker or the light out the product lighting that is low buttery please charge it.

shutdown suddenly, then can't turn on the speaker or the light out after some minutes lighting, that is low battery, please charge it.
When the product is playing music via Bluetooth technology, the music may caused intermittent or noise because of the environment or the source device (such as mobile phones) interference or software incompatibilities etc... Please adjust the distance between the music device and the unit, or restart the unit's power supply or restart the music device or change to other music source to have better sound performance.
When the product is during a call via Bluetooth technology, the environment or the network signal interference or poor etc... Please adjust the distance between the phone and the unit, or change to other calling device, or restart the unit's power supply etc. to improve the calling quality.
When DC5V is for power supply, the power supply current should be more than IA.

6. If it is stopped using for a long time, pls make sure it is full

6. If it is stopped using for a long in a long in a long in a long of the stopped using the along in a long in a long

FCC statements: This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment of and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement, The device can be used in portable exposure condition without restriction