

1 Taking care of your device

Your device is a product of superior design & craftsmanship and should be handled with care: The following recommendations will help protect your phone:

- Keep the device dry. Precipitation, humidity, and all types of liquid or moisture may contain minerals that can rust electronic circuits. If your device gets wet, remove the battery and refrain from turning on device. Wipe it with a dry cloth and take it to the service center.
- Do not store the device under extreme temperatures; it can damage the battery and shorten device lifespan.
- Do not use or store device in dusty and dirty areas; the electronic components may be damaged.
- Do not attempt to open device in any way other than instructed in this guide. Repairs attempted by an entity other than designated service agent/center will void warranty.

TECNO mobile

Licking the battery or charger is strictly prohibited; saliva is more corrosive than water. Residual saliva may short-circuit phone and damage its motherboard, causing the device to become inoperable; battery & charger may also be damaged in the process.



WARNING:

Licking USB plug or metallic battery component is strictly prohibited.

- Do not drop, knock, or shake device. Rough handling can disrupt internal circuit boards and fine mechanical parts.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Use a soft and dry cloth to wipe down surfaces.

 
Battery & charger safety

- Do not place battery in fire, explosion may occur. With concern for the environment, please abide local laws & ordinances in battery disposal.
- Only use original battery, charger, and accessories applicable to the specific mobile model. Failure to do so voids the warranty and may result in a hazard.
- Power off mobile prior to testing its charger. If charger malfunctions, off-mode will prevent damage to the motherboard.
- Please keep the charging mobile away from small children.
- Do not touch charger or mobile with wet hands; it's hazardous and may damage electronic parts.

WARNING:

- Risk of explosion if original battery is replaced.
- Tampering with mobile OS and ROOT voids warranty and may cause software instability.


2 Know your phone

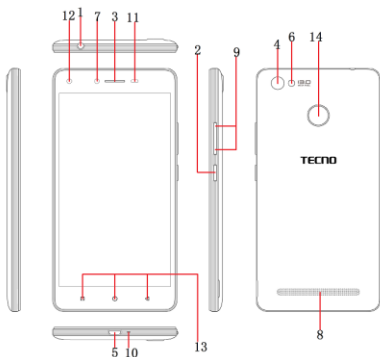

1. Earphone plug
2. Power button
3. Receiver
4. Rear camera
5. USB port
6. Flash
7. Front camera
8. Speaker
9. Volume button
10. Microphone
11. Light/proximity sensor
12. Front flash
13. Virtual button
14. Fingerprint ID button

3 SIM / SD card installation

 1. Refer to the following picture for SIM / SD card installation.

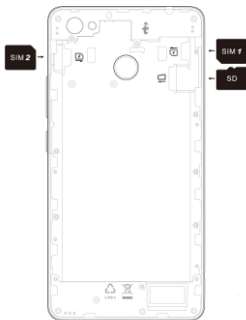


4 Home screen

Home screen showcases frequently used apps, you can also display ubiquitous information such as time, weather (third-party app required), date, etc.



5 Dialing

 
Tap the phone icon to open call interface. Enter contact number via keypad to start a call. The keypad interface also enables functions such as texting and contact storage.

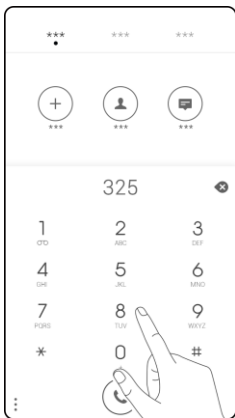

6 Notification & function toggle


The notification screen displays new information & events; simply tap the notification to access its detailed content.

 The function-toggle screen lists commonly used functions and their virtual switches. Tap a switch to quickly turn a function on/off.

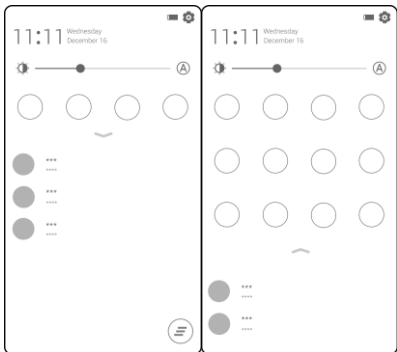

7 Messages

 The message function sends plain or multimedia texts to your friends. Tap a message to view its content. Tap the “Compose new message” button to start composing a message and send it to designated contact.

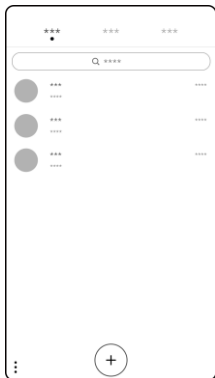

8 Camera

The camera function captures your surroundings via the front or rear camera. Various types of white balance and photo filters are available to accommodate different lighting conditions.



 
9 My picture

My picture can be used to browse images and photos from mobile or SD card storage; editing functions can be performed. Images can be designated as wallpaper or contact avatar. The sharing function allows images to be shared with friends via Bluetooth and MMS, etc.




10 Wi-Fi

Enabling Wi-Fi grants access to local hotspots and allows you to browse Internet. Private networks will require a password.

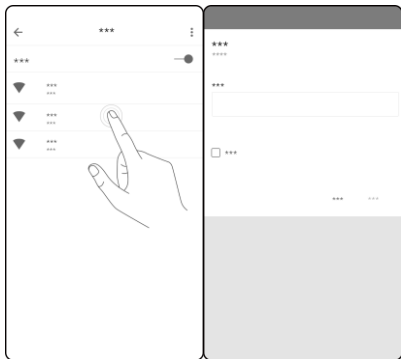


11 Map

 “Google Maps” provides users with complete GPS & navigation services. It can display maps in terrain or terrain contour modes.

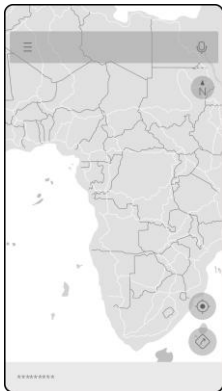

12 Boom player

 Boom player playlist displays all relevant files saved on the mobile or SD card storage. You can play, pause, and switch between tracks through the music control panel. Volume control is accessed via side buttons.

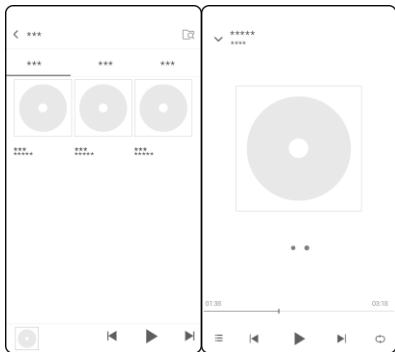

13 Palmpay

Palmpay is a virtual software store that offers commonly used apps. Simply tap an app to start downloading.



14 Factory data reset

“Factory data reset” resets all configurations to their default state. Internal mobile storage is cleared of all data including apps, photos, music, videos, mail, contacts, etc. This procedure may take a long time. Please wait patiently for mobile to restart and do not power off.

15 WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information:

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. DeviceTypes W5 (FCC ID:2ADYY-W5) has als

o been tested against this SAR limit.

The highest SAR value reported under this standard during product certification for

use when properly worn on the body is 0.619 W/kg and for head is 0.668 W/kg. Simultaneous RF exposure is 1.236 W/Kg.

This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset.

The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.