



# OWNER'S MANUAL

## Safety and Reference

Find your user guide online!

<http://go.roku.com/tvmanual>



Model: ONC32HR19C10

---



Please read this manual carefully before operating your  
TV and retain it for future reference.

# Precautions for unpacking


- Always use the handles of the bag when removing the TV from the box.

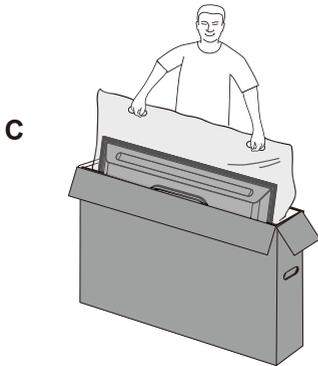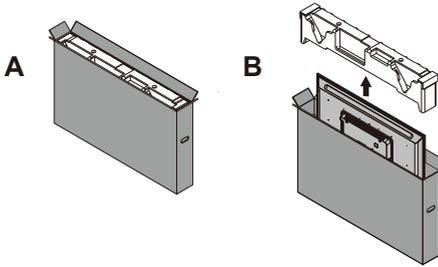

- Only grasp the bottom base and lower side of TV.

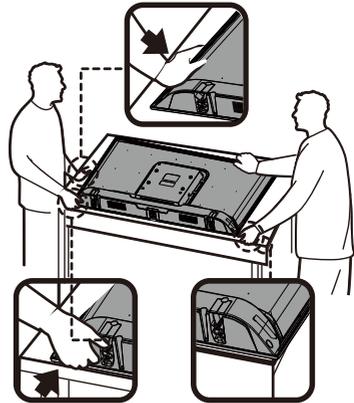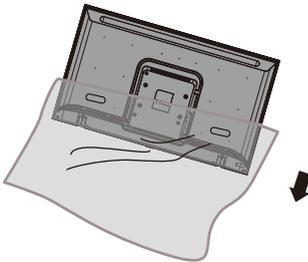

- TV screens are fragile. Avoid applying pressure to the front or back of the screen.
- Please keep the working area clean without any sharp objects in order not to scrape or damage the TV when assembling the stand.

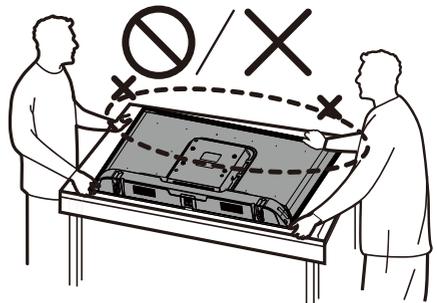

# IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug the apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- 16) Do not expose to dripping or splashing and do not place objects filled with liquids, such as vases, cups, etc. on or over the apparatus.



## Additional Safety Information


- 17) Power Sources—This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
- 18) Overloading—Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 19) Object and Liquid Entry—Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- 20) Damage Requiring Service—Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions
  - a) When the AC cord or plug is damaged,
  - b) If liquid has been spilled, or objects have fallen into the product,
  - c) If the product has been exposed to rain or water,
  - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation,
  - e) If the product has been dropped or damaged in any way, and
  - f) When the product exhibits a distinct change in performance - this indicates a need for service.
- 21) Replacement Parts—When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- 22) Safety Check—Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- 23) Wall or ceiling mounting—Use a wall mount bracket that has been listed by an independent laboratory (such as UL, CSA, ETL).

## CAUTION

- These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

- **Outdoor Antenna Grounding** — If an outside antenna is connected to the television equipment, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

### EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE, ANSI/NFPA 70

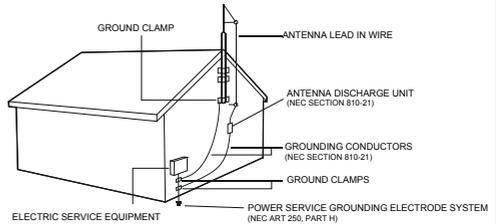

**WARNING:** The batteries should not be exposed to excessive heat such as sunshine, fire or the like.

**WARNING:** No naked flame sources, such as lighted candles, should be placed on the apparatus;

**WARNING:** Attention should be drawn to the environmental aspects of battery disposal;

Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well Ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.

## Important Information

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE**

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK. DO NOT OPEN	
<b>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL</b>		



The lightning flash with arrow-head symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within a triangle presence of important operating and maintenance (servicing) instruction in the literature accompanying the product.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

# Table of Contents

---

## Chapter 1: Introduction

Precautions .....	5
Product .....	5
Power and Plug .....	5
Power Cord and Signal Cable .....	5
Use Environment .....	5
Cleaning .....	5
Hanging the TV on the Wall .....	5
Ports .....	6
Remote Control Functions .....	7
Battery Installation .....	8

## Chapter 2: General Operation

Powering Your TV .....	9
Other Connections .....	9

## Chapter 3: Other Information

Troubleshooting .....	10
Stand .....	10
Wal-Mart , Inc Limited Warranty .....	13

## Precautions

Read all of the instructions before operating the set. Keep these instructions for future use.

## Product

- Do not block or cover the ventilation openings on the back cover.
- Do not push objects of any kind into this unit through the cabinet slots as they could touch the current carrying parts or short-circuit parts, resulting in fire, electric shock, or damage to TV cabinet.
- Do not attempt to open the cabinet as this may cause damage. There are no parts inside you can service by yourself. Refer all servicing to qualified personnel.
- Do not press strongly upon the panel with a hand or sharp object such as a nail, pencil, or pen, or make a scratch on it.

## Power and Plug

- Unplug the TV under the following conditions:
  - If the TV will not be used for a long time.
  - If the power cord or the power outlet/plug is damaged.
  - Follow the instructions to install and adjust the product. Adjust those controls that are covered in these operating instructions as improper adjustment of other controls may result in damage. If this happens, unplug the TV and refer to the service personnel.
  - If the TV is subject to impact or has been dropped and the cabinet is damaged.

## Power Cord and Signal Cable

- Do not allow anything to rest on or roll over the power cord and the signal cable.
- Protect the power cord and the signal cable from being trampled.
- Do not overload the power cord or the power outlet.
- Do not expose the power cord and the signal cable to moisture.

## Use Environment

- Do not place the TV on an unstable cart, stand, or table.
- Place the TV on a place that allows good ventilation.
- Do not use the TV near damp, and cold areas. Protect the set from overheating.
- Keep the TV away from direct sunlight.
- The TV shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not use in a location with dust.

## Cleaning

- Dust the TV by wiping the screen and the cabinet with a soft, dry, clean cloth.
- Do not apply excessive force to the screen when cleaning.
- Do not use water or other chemical cleaner to clean the screen as this may damage the surface of the TV screen.

## Hanging the TV Set on the Wall

**Warning: This operation requires two people.**

To ensure a safe installation, observe the following safety notes:

- Check that the wall can support the weight of the TV and wall mount assembly.
- Follow the mounting instructions provided with the wall mount.
- The TV must be installed on a vertical wall.
- Make sure to use only screws suitable for the material of the wall.
- Make sure that the TV cables are placed so that there is not danger of tripping over them.

All other safety instructions about our TV are also applicable here.

### **Note:**

Illustrations within this publication are provided for reference only.

## Ports

*Note: The location and names of the ports on the TV may vary according to TV model, and some ports may not be available for some models.*

OPTICAL –



### OPTICAL (OUTPUT)

This output can be used to connect a compatible digital audio receiver.

AUDIO OUT –



### AUDIO OUT(OUTPUT)

Use a 3.5mm cable to connect external speakers, or other audio devices to your TV.

AV IN



### AV audio + video RCA sockets

The AV IN sockets can be used to connect a range of equipment, including video recorders, camcorders, decoders, satellite receivers, DVD players, or games consoles. The AV IN socket provides composite video connection.

RESET –



### RESET

Press and hold for factory reset. Careful, you will lose all your settings!

ANTENNA/CABLE IN –



### ANTENNA/CABLE IN

Let's you connect a coaxial cable to receive the signal from your antenna, cable, or cable box.

HDMI 1  
HDMI 2  
HDMI 3  
(ARC)



### HDMI

The HDMI (High-Definition Multimedia Interface) ports can be used to connect a PC with a compatible video card installed, certain DVD players or a high-definition compatible digital satellite decoder. This input provides an uncompressed digital connection that carries both video and audio data by way of an integrated mini-plug cable.

- ARC (Audio Return Channel) function is only supported on the HDMI 3 (ARC) port for some models.

- Number of HDMI ports may vary.

USB –



### USB

This input can be used to connect a USB device.

Note: The number of USB ports on the TV may vary according to TV model.

## Remote Control Functions

Most of your television's functions are available on the menu that appear on the screen. The remote control supplied with your set can be used to navigate through the menus and to configure all the general settings.

*Note: The location and names of the buttons on the remote control may vary according to TV model, and not all buttons are available on all models.*



#	Button	Description
1	Power	Turn TV on and off.
2	Back	Returns to the previous screen.
3	Directional keypad	(up, down, left and right direction buttons) Highlights different items in the menu system and adjusts the menu controls.
	OK/ENTER	Confirms your selection.
4	Channel recall/jump back	Changes to the previous channel when viewing antenna or cable (no set-top box) programming. Jumps back one position in video when viewing streaming content. Backspaces one letter during menu entries, such as Search.
5	Sleep time	Set the TV to turn off after a given amount of time.
6	Rewind	Rewinds streaming video. Scrolls left one page at a time.

# Introduction


#	Button	Description
7	Play/Pause	Pauses or resumes playback.
8	Home	Displays your TV's Home screen. If you are watching TV or streaming content, playback stops.
9	View more options	This button gives you easy access to picture settings, display options, and more. Press the * button on any screen to access options.
10	Fast forward	Fast forwards streaming video. Scrolls right one page at a time.
11	Featured channels shortcut buttons	Actual remote includes preset channel buttons with channel logos. When you press a button: <ul style="list-style-type: none"><li>• If you have not added the channel, displays a signup page.</li><li>• If you have added the channel, displays the channel's home page.</li><li>• If your TV is off, turns on your TV and displays the channel's home page.</li></ul>
12	Volume up	Increases the volume or un-mutes the sound.
13	Volume down	Decreases the volume.
14	Mute	Reduces the TV's volume to its minimum level. Press again to restore the volume.

## Battery Installation

1. Remove battery compartment door.
2. Install two (2) new AAA batteries, making sure to match + and - ends to the label inside the compartment.
3. Close the battery compartment door.

### Precautions on using batteries:

- Only use the battery types specified.
- Make sure you use the correct polarity.
- Do not mix new and used batteries.
- Do not use rechargeable batteries.
- Do not expose batteries to excessive heat such as sunshine, fire or the like, throw them in a fire, recharge them or try to open them, as this could cause them to leak or explode.
- Remove the batteries from the remote control if you are not using it for a long time.

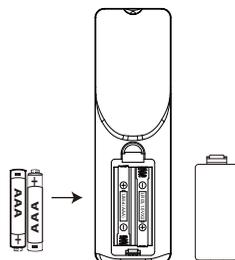

### Powering Your TV

1. Connect the power cord to an AC wall outlet

Your TV should only be connected to an AC supply. It must not be connected to a DC supply. If the plug is detached from the cable, do not, under any circumstances, connect it to a mains socket, as there is a risk of electric shock.

2. To turn your TV on, press the power button  on the remote control or on the TV.
3. To turn your TV off, press the power button  on the remote control or press and hold it for 3 seconds on the TV..

### Connecting to an Antenna or Cable

Connect an Antenna, cable or cable box to watch TV.

- Make sure not to bend the copper wire of the RF cable
- Complete all connections between devices, and then connect the power cord to the power outlet to prevent damage to your TV.

### Other Connections

Connect your TV to external devices. For the best picture and audio quality, connect the external device and TV with an HDMI cable.

### WARNING

Never place a TV in an unstable location. A TV may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the TV.
- Only using furniture that can safely support the TV.
- Ensuring the TV is not overhanging the edge of the supporting furniture.
- Not placing the TV on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the TV to a suitable support.
- Not placing the TV on cloth or other materials that may be located between the TV and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the TV or its controls.

If your existing TV is being retained and relocated, the same considerations as above should be applied.

## Troubleshooting

### No picture

1. Check if the product is turned on.
2. Check if the power cord is connected to a wall outlet.
3. Check if there is a problem in the wall outlet by connecting other products.
4. Check the signal source.

### No color

1. Change the color system.
2. Adjust the saturation.
3. Try another channel. Black-white program may be received.

### Remote control does not work

1. Check if there are any obstacles between the product and the remote control.
2. Replace the batteries

### No picture, normal sound

1. Adjust the brightness and contrast.

### Normal picture, no sound

1. Press the **Vol+** button to increase volume.
2. Volume is set to mute, press the mute button to restore sound.
3. Change the sound system.

### Unorderly ripples on the picture

It is usually caused by local interference, such as cars, daylight lamps and hair driers. Adjust the antenna to minimize the interference.

### Snowy dots and interference

If the antenna is located in the fringe area of a television signal where the signal is weak, the picture may be marred by dots. When the signal is extremely weak, it may be necessary to install a special antenna to improve the reception.

1. Adjust the position and orientation of the indoor/outdoor antenna.
2. Check the connection of antenna.
3. Try another channel.

### Ignition

Black spots or horizontal streaks appear, or the picture flutters or drifts. This is usually caused by interference from car ignition system, neon lamps, electric drills, or other electrical appliance.

### Ghost

Ghosts are caused by the television signal following two paths. One is the direct path, the other is reflected from tall buildings, hills, or other objects. Changing the direction or position of the antenna may improve the reception.

### Radio frequency interference

This interference produces moving ripples or diagonal streaks, and in some case, loss of contrast in the picture. Find out and remove the radio interference source.

### The TV turns off suddenly

1. Check that the power cord is not unplugged.
2. Check the power control settings
3. Check if the Sleep Timer feature is activated in the Timer settings.

*Note: If these methods can not resolve the issue please contact after-sales support to help resolve.*


## Stand

Put the column of the stands into the TV, align the stands with the screw holes located on the TV. Secure the stands to the TV with four (4) screws.


### Note:

1) *Illustrations below are provided for reference only and may differ from actual product appearance.*

2) *Below image shown here is indicative only. If there is inconsistency between the image and the actual product, the actual product shall govern.*

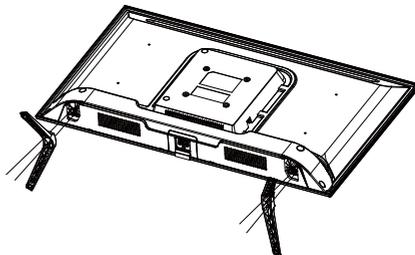

## Wall Mounting Your TV

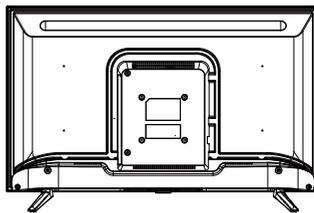

Use a wall mount that supports a VESA 32inch(100mmx100mm),43inch(200mm x 100mm) pattern. Follow the instructions that come with the wall mount.

### WARNING:

The screw for the wall mount must be as below:



For:32inch  
(4) M4 x 8mm  
no longer than 8mm

For:43inch  
(4) M6 x 8mm  
no longer than 8mm

# Walmart Inc. Limited Warranty

All Onn™ LCD/LED TV Models.

**What your warranty covers:** Defects in materials or workmanship to the original owner of this Onn TV product when purchased as new from Walmart Inc. in the United States and packaged with this warranty statement.

### New LCD/LED Televisions (Non-Commercial Use)

**For how long after your purchase:**

- One (1) year from date of purchase for parts and labor for non-commercial use.

### New LCD/LED Televisions (Commercial Use)

**For how long after your purchase:**

- Six (6) months from date of purchase for parts and labor for commercial use.
- Commercial use includes, but is not limited to, the use of this product in a commercial or business environment, the use of this product in an institution or for institutional purposes, or other commercial purposes including rental purposes.

**What we will do:**

- At Walmart Inc. discretion, (1) pay an Authorized Service Center for both labor charges and parts to repair your television, or (2) replace your television with a new or refurbished / remanufactured equivalent value product. The decision to repair or replace will be made solely by Walmart Inc. See "How to get service".

**How to get service:**

- Call 1- 888-412-6886.
- Please have your original purchase receipt or proof of purchase (bill of sale or receipted invoice), the unit's date of purchase, place of purchase and model/serial number ready. The model/serial number information can be found on the back of your unit.
- A representative will troubleshoot your problem over the telephone. If it is determined that your unit requires service, the service location will be at the sole discretion of Walmart Inc. based upon the Walmart Inc. Warranty Statement.
- At the sole discretion of Walmart Inc. television screen sizes 43" and smaller will either be repaired at an Authorized Service Centre or directly exchanged for a new or refurbished/remanufactured unit. At the sole discretion of Walmart Inc. television screen sizes 44" through 55" or larger will either be repaired at an Authorized Service Center or repaired in-home. If repaired at an Authorized Service Center, a pre-paid shipping label will be provided and Walmart Inc. will pay for return shipping.
- Proof of purchase in the form of a bill of sale or receipted invoice from an Authorized Dealer which is evidence that the product is within the warranty period must be presented to obtain warranty service.
- PRE-AUTHORIZATION MUST BE OBTAINED BEFORE (1) SENDING ANY PRODUCT TO AN AUTHORIZED SERVICE CENTER, OR (2) OBTAINING ANY IN-HOME REPAIR/REPLACEMENT/RENTAL SERVICES.

**What your warranty does not cover:**

- Customer instruction. (Your Owner's Manual describes how to install, adjust, and operate your unit. Any additional information should be obtained from your Authorized Dealer).
- Installation and related adjustments, or damage resulting from installation.
- Damage resulting from non-approved installation methods.
- Signal reception problems not caused by your unit.

- Damage from misuse, abuse, neglect, normal wear and tear, cosmetic damage, mishandling, faulty installation, or power line surges.
- Markings or images on the television's panel resulting from viewing fixed images (including but not limited to certain 4:3 images on wide screen televisions, or data or images in fixed screen locations from banners, video games, or certain broadcast networks).
- **Batteries**
- A television that has been modified or incorporated into other products.
- A unit purchased or serviced outside the USA.
- A unit sold in "As-Is", "Factory Reconditioned", "Factory Re-Certified", or "Refurbished" condition or with faults.
- Acts of nature or God, such as but not limited to earthquake or lightning damage.
- Special, incidental or consequential damages.

## Walmart Inc. Limited Warranty

### LIMITATION OF WARRANTY

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. NO VERBAL OR WRITTEN INFORMATION GIVEN BY WALMART INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARANTEE OR IN ANY WAY INCREASE OR MODIFY THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. WALMART INC. SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF ARKANSAS. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY AND WARRANTY PERIOD SET FORTH ABOVE. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE.

### How State Law relates to this warranty:

- Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

**If you purchased your unit outside the United States or seek warranty coverage outside the United States:** This warranty does not apply. Contact your store for warranty information.

**Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.**

# *Supplier's Declaration of Conformity*

The following equipment:

\* Type of Product : TV  
\* Model Number : ONC32HR19C10/ONC43FR19C11  
\* Brand Name : ONN

Caution: Changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This is herewith confirmed to comply with the requirements of FCC Part 15 Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

The result of electromagnetic emission has been evaluated by Compliance Certification Services Inc. EMC laboratory and showed in the test report.

It is understood that each unit marketed is identical to the device as tested, and any changes to the device which could adversely affect the emission characteristics will require retest.

The following manufacturer is responsible for this declaration :

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body

FCC ID: 2AE2WONC32HR19C10

Contains Transmitter Module FCC ID: 2AC23-WC0HR2601

Company Name: Walmart Inc.

Company Address: Bentonville, AR 72716

Telephone: 1-800-788-2878

**FC** TEL:1-800-788-2878

Product for Walmart Inc.  
Bentonville, AR 72716

Ver. 01 Rev. 27/03/19