

# ROBOTICS

## SMART MACHINES



THAMES & KOSMOS



Franckh-Kosmos Verlags-GmbH & Co. KG, Pfizerstr. 5-7, 70184 Stuttgart, Germany | +49 (0) 711 2191-0 | [www.kosmos.de](http://www.kosmos.de)  
Thames & Kosmos, 301 Friendship St., Providence, RI, 02903, USA | 1-800-587-2872 | [www.thamesandkosmos.com](http://www.thamesandkosmos.com)  
Thames & Kosmos UK Ltd, Goudhurst, Kent, TN17 2QZ, United Kingdom | 01580 212000 | [www.thamesandkosmos.co.uk](http://www.thamesandkosmos.co.uk)

## SAFETY INFORMATION

### Safety Information

**WARNING.** Only for use by children aged 8 years and older. Instructions for parents or other supervising adults are included and have to be observed. Keep packaging and instructions as they contain important information.

**WARNING.** Not suitable for children under 3 years. Choking hazard — small parts may be swallowed or inhaled. Store the experiment material and assembled models out of the reach of small children.

**WARNING.** Do not aim at eyes or face. Never launch heavy, sharp-pointed, or sharp-edged objects.

### Safety for Experiments with Batteries

- » The wires are not to be inserted into socket-outlets. Never perform experiments using household current! The high voltage can be extremely dangerous or fatal!
- » To operate the models, you will need three AA batteries (1.5-volt, type AA/LR6) or three AA rechargeable batteries (1.2-volt, type AA, HR6/KR6), which could not be included in the kit due to their limited shelf life.
- » The supply terminals are not to be short-circuited. A short circuit can cause the wires to overheat and the batteries to explode.
- » Different types of batteries or new and used batteries are not to be mixed.
- » Do not mix old and new batteries.
- » Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- » Batteries are to be inserted with the correct polarity. Press them gently into the battery compartment. See page 2.
- » Always close battery compartments with the lid.
- » Non-rechargeable batteries are not to be recharged. They could explode!
- » Rechargeable batteries are only to be charged under adult supervision.
- » Rechargeable batteries are to be removed from the toy before being charged.
- » Exhausted batteries are to be removed from the toy.
- » Dispose of used batteries in accordance with environmental provisions, not in the household trash.
- » Be sure not to bring batteries into contact with coins, keys, or other metal objects.
- » Avoid deforming the batteries.

As all of the experiments use batteries, have an adult check the experiments or models before use to make sure they are assembled properly. Always operate the motorized models under adult supervision.

After you are done experimenting, remove the batteries from the battery compartments. Note the safety information accompanying the individual experiments or models!

### Notes on Disposal of Electrical and Electronic Components

The electronic components of this product are recyclable. For the sake of the environment, do not throw them into the household trash at the end of their lifespan. They must be delivered to a collection location for electronic waste, as indicated by the following symbol:



Please contact your local authorities for the appropriate disposal location.

### Dear Parents,

Before starting the experiments, read through the instruction manual together with your child and discuss the safety information. Check to make sure the models have been assembled correctly, and assist your child with the experiments. **We hope you and your child have a lot of fun with the experiments!**

### FCC Part 15 Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



## >>> KIT CONTENTS

**GOOD TO KNOW!** If you are missing any parts, please contact Thames & Kosmos customer service.  
US: techsupport@thamesandkosmos.com  
UK: techsupport@thamesandkosmos.co.uk

## What's inside your experiment kit:

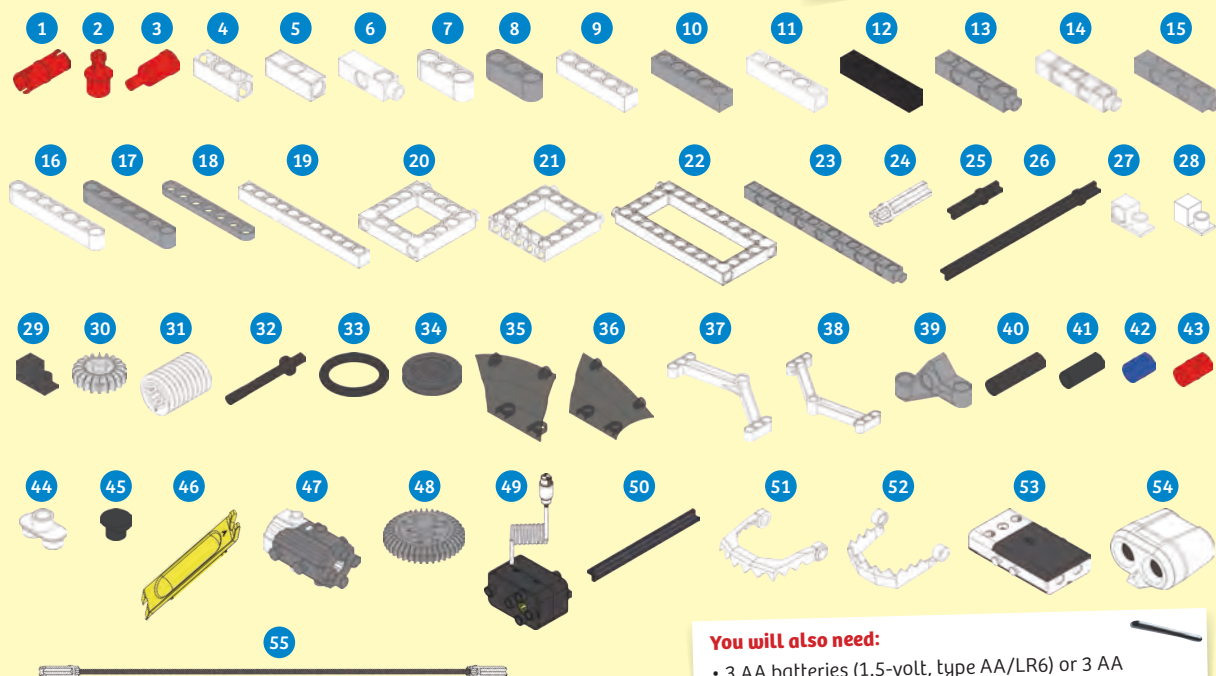


### You will also need:

- 3 AA batteries (1.5-volt, type AA/LR6) or 3 AA rechargeable batteries (1.2-volt, type AA, HR6/KR6) and a tablet or smartphone running iOS or Android (see page 7 for hardware requirements)

## Checklist: Find – Inspect – Check off

✓	No.	Description	Qty.	Item No.
<input type="radio"/>	1	Joint pin	18	1156-W10-A1R
<input type="radio"/>	2	Shaft plug	8	7026-W10-H1R
<input type="radio"/>	3	Shaft pin	9	7026-W10-J3R
<input type="radio"/>	4	3-hole rod	1	7026-W10-Q1W
<input type="radio"/>	5	3-hole cross rod	5	7026-W10-X1W
<input type="radio"/>	6	3-hole dual rod	2	7061-W10-R1W
<input type="radio"/>	7	3-hole wide rounded rod, white	2	7404-W10-C1W
<input type="radio"/>	8	3-hole wide rounded rod, gray	6	7404-W10-C1S
<input type="radio"/>	9	5-hole rod, white	1	7413-W10-K2W
<input type="radio"/>	10	5-hole rod, gray	4	7413-W10-K2S1
<input type="radio"/>	11	5-hole cross rod, white	2	7413-W10-K3W
<input type="radio"/>	12	5-hole cross rod, black	2	7413-W10-K3D
<input type="radio"/>	13	5-hole dual rod B, gray	6	7026-W10-S2S1
<input type="radio"/>	14	5-hole dual rod C, white	2	7026-W10-S3W
<input type="radio"/>	15	5-hole dual rod C, gray	2	7026-W10-S3S2
<input type="radio"/>	16	7-hole wide rounded rod, white	2	7404-W10-C2W
<input type="radio"/>	17	7-hole wide rounded rod, gray	6	7404-W10-C2S
<input type="radio"/>	18	7-hole flat rounded rod, gray	3	7404-W10-C3S
<input type="radio"/>	19	11-hole rod, white	2	7026-W10-C1W
<input type="radio"/>	20	Square frame B	2	7026-W10-T2W
<input type="radio"/>	21	Square frame A	1	7026-W10-V1W
<input type="radio"/>	22	Short frame, white	2	7413-W10-I1W
<input type="radio"/>	23	14-hole dual rod, gray	2	7413-W10-H1S1
<input type="radio"/>	24	Motor shaft	4	7026-W10-L1W
<input type="radio"/>	25	3-cm axle	1	7413-W10-N1D
<input type="radio"/>	26	10-cm axle	1	7413-W10-L2D
<input type="radio"/>	27	90-degree converter X, white	4	7061-W10-J1W
<input type="radio"/>	28	90-degree converter Y, white	4	7061-W10-J2W

 ✓	No.	Description	Qty.	Item No.
<input type="radio"/>	29	90-degree converter Y, gray	6	7061-W10-J2S2
<input type="radio"/>	30	Small gear	8	7026-W10-D2S
<input type="radio"/>	31	Worm	1	7344-W10-A1W
<input type="radio"/>	32	Crank bar	1	7026-W10-J2D
<input type="radio"/>	33	O-ring	2	R12-08S
<input type="radio"/>	34	Small pulley	2	7344-W10-N3S
<input type="radio"/>	35	Body plate 3	3	7392-W10-L1TD
<input type="radio"/>	36	Body plate 4	3	7392-W10-L2TD
<input type="radio"/>	37	Leg left	1	7397-W10-C1W
<input type="radio"/>	38	Leg right	1	7397-W10-C2W
<input type="radio"/>	39	Diagonal connector	6	7404-W10-B2S
<input type="radio"/>	40	30-mm tube	4	7400-W10-G1D
<input type="radio"/>	41	20-mm tube	1	7400-W10-G2D
<input type="radio"/>	42	Short anchor pin	6	880-W10-M1B
<input type="radio"/>	43	Anchor pin	51	7061-W10-C1R
<input type="radio"/>	44	Two-to-one converter	4	7061-W10-G1W
<input type="radio"/>	45	Button pin	4	7061-W10-E1D
<input type="radio"/>	46	Anchor pin lever	1	7061-W10-B1Y
<input type="radio"/>	47	Motor unit 1	1	7392-W85-B1
<input type="radio"/>	48	Medium gear	10	7346-W10-C1S
<input type="radio"/>	49	Motor unit 2	1	7400-W85-A
<input type="radio"/>	50	6.5-cm axle	3	7416-W10-C1D
<input type="radio"/>	51	Jaw, upper	1	7416-W10-A1W
<input type="radio"/>	52	Jaw, lower	1	7416-W10-A2W
<input type="radio"/>	53	Bluetooth battery box	1	7416-W85-A
<input type="radio"/>	54	Ultrasonic sensor	1	7416-W85-B
<input type="radio"/>	55	Flexible shaft	2	7416-W85-C


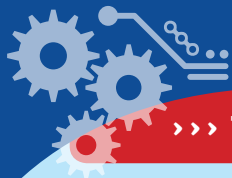


## >>> TIPS AND TRICKS

Here are a few tips for assembling and using the models. Read them carefully before starting.


### A. Pay attention to the hole alignment!

  It is very important that you pay close attention to the alignment of the holes in the gear wheels. Make sure that you insert the shaft pins into the correct holes and that the gears are oriented exactly as shown in relation to each other and to the model. Otherwise, the animals will not move properly.

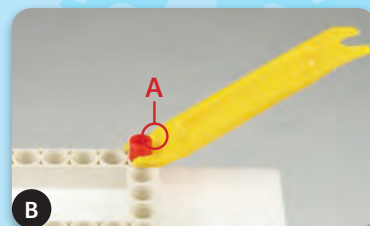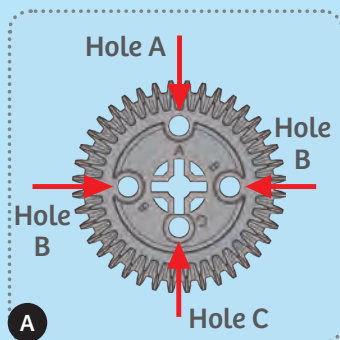

### B. The part separator tool

 In the box, you will find a little yellow tool called the anchor pin lever. End A of the part separator tool makes it easy to remove anchor pins from the frames.

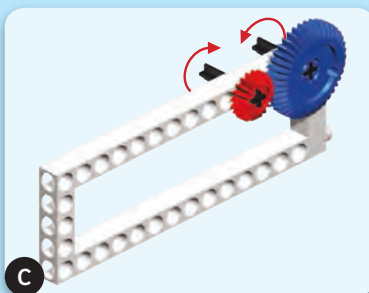

### C. Gear wheels

 
The models will often have several gear wheels installed in a row. In order for the models to work well, these gears will have to mesh well. Otherwise, the force from one gear wheel won't be properly transferred to the next.

### D. Installing batteries in the Bluetooth battery box

Slide the transparent cover open. Insert the batteries according to the indicated plus-minus polarity. Close the compartment by sliding the cover back on.



## &gt;&gt;&gt; TABLE OF CONTENTS

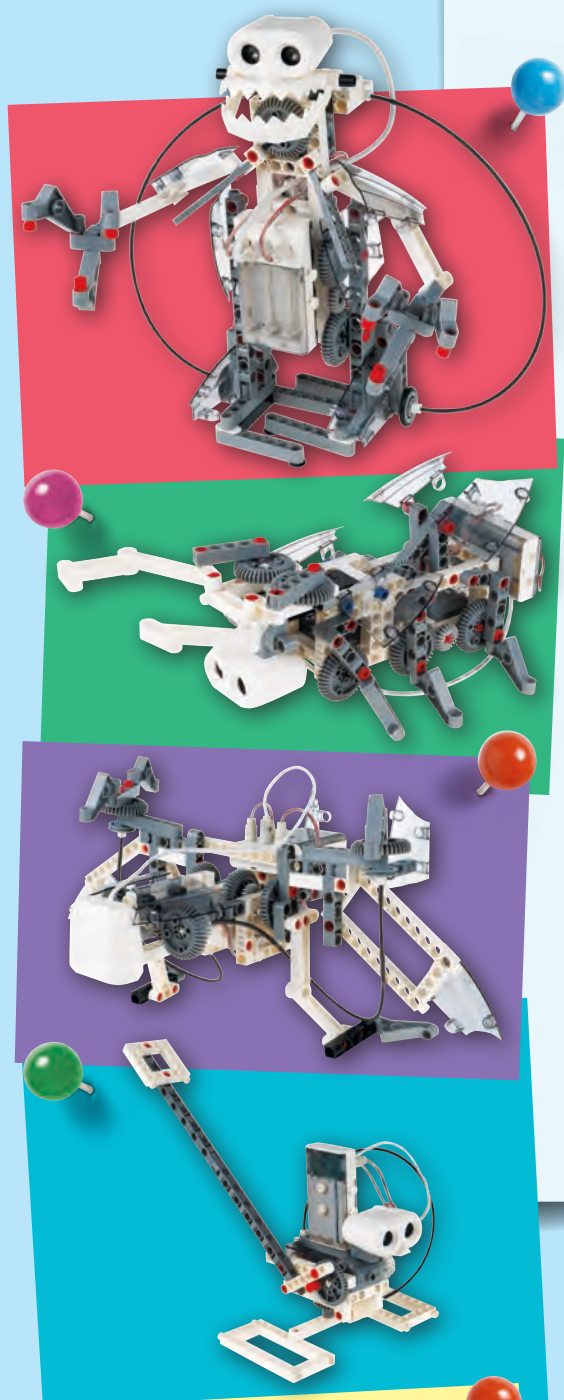**TIP!**

Above each set of assembly instructions, you will find a red bar:

>>> It shows you the difficulty level for the model's assembly:



**Safety Information** ..... Inside front cover

**Kit Contents** ..... 1

**Tips and Tricks** ..... 2

**Table of Contents** ..... 3

**Robots: Sensing, Thinking Machines**

**Getting Started** ..... 4

**About Ultrasound** ..... 5

**Downloading and Using the App** ..... 6

**Writing Programs** ..... 7

**The models:**

**Bipedal Droid** ..... 13

**Programming the Bipedal Droid** ..... 17

**Spy Bot** ..... 18

**Using the Spy Bot** ..... 23

**Beetle** ..... 24

**Programming the Beetle** ..... 31

**Crocodile** ..... 32

**Programming the Crocodile** ..... 38

**Tiltrotor Aircraft** ..... 39

**Programming the Tiltrotor Aircraft** ..... 49

**Robo Dog** ..... 50

**Programming the Robo Dog** ..... 55

**Robotosaurus** ..... 56

 
**Programming the Robotosaurus** ..... 61

**Catapult** ..... 62

**Programming the Catapult** ..... 64


**Publisher's information** ..... Inside back cover



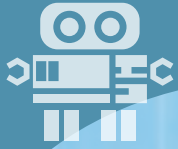

# Robots: Sensing, Thinking Machines

 Robots are mechanical agents controlled by computer programs. They can be programmed to perform all sorts of tasks and movements. Robots can assemble cars, play soccer, vacuum floors, deliver packages, map terrain, climb mountains, entertain people, cook dinner — the list goes on and on. With this kit, you can build robots that use an ultrasonic sensor to sense their environment. With the app, you can program the robots' motors to behave in different ways depending on the data coming from the ultrasonic sensor. In this way, you can create different robots that perform different tasks!

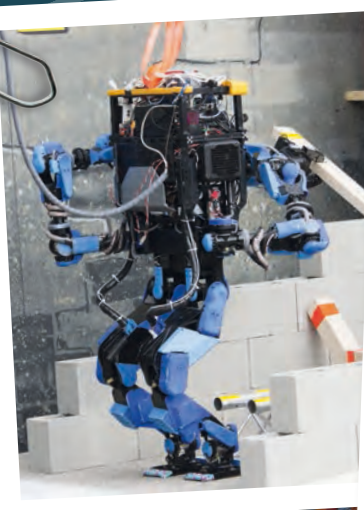

## GETTING STARTED

There are five primary functional components in this kit that enable the robots to work:

- A. The Bluetooth battery box** connects to the app on your tablet or smartphone via a wireless Bluetooth connection, and provides power to the motor units via wires.
- B. Motor units 1 and 2** connect to axles and motor shafts to turn gears and wheels, activating your models. They are powered by the battery box.
- C. The ultrasonic sensor** sends out ultrasound waves and “listens” for them to bounce off of objects. It gives this information to the app.
- D. The app** is the “brain” of your robotic models. It uses the feedback from the ultrasonic sensor and program instructions to control the models.

 
These five elements, in combination with all the mechanical parts — rods, gears, axles, frames, and so on — allow you to build and program mechanical robots that can sense their surrounding using sound waves.

First, follow the assembly instructions starting on page 13 to build one of the models. The Spy Bot model starting on page 18 is one of the easiest.


Make sure you have inserted the batteries correctly according to the battery information on page 2.

Shake the model until the blue light on the Bluetooth battery box turns on, indicating that the module is on. The module automatically turns off after about a minute of inactivity to save battery power. You simply have to jiggle the model when you want to turn it on again. It's a movement-activated on-off switch!

Now you can connect the tablet or smartphone to the model via the free app. Instructions to download and use the app start on page 7.

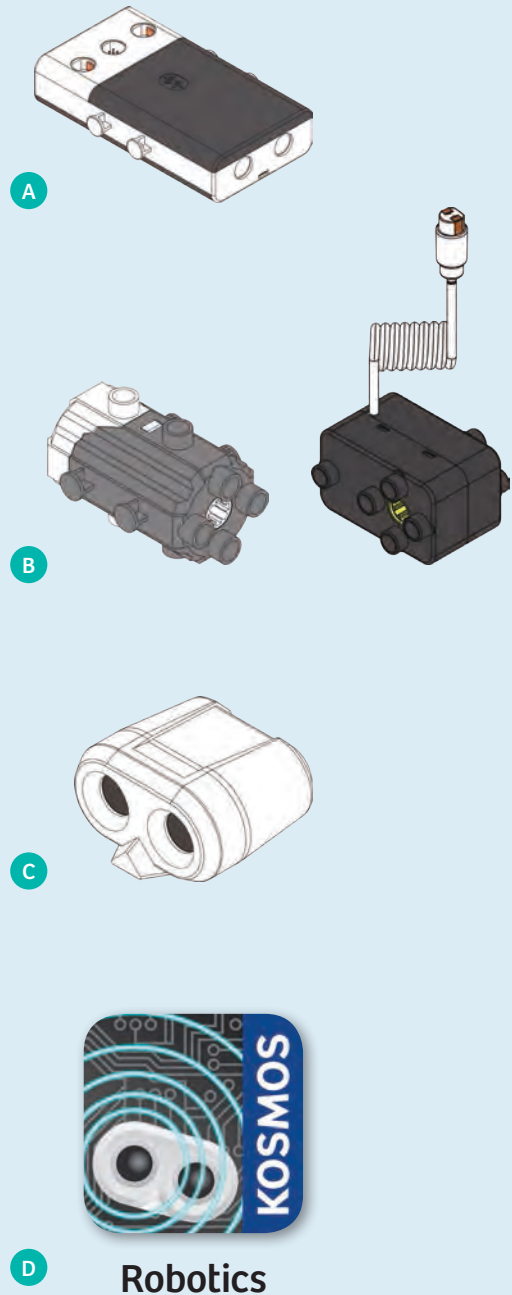

Robotics

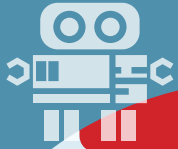 

## ABOUT ULTRASOUND

### ABOUT ULTRASOUND

Ultrasound is a sound pressure wave that moves through substances (gases, liquids, and solids) and has a frequency greater than that which humans can hear.

Frequency is simply the number of waves in a given period of time. Humans can hear sound waves in the frequency range of 20 hertz (which means cycles per second) to 20,000 hertz (20 kilohertz).

### ANIMAL SONAR

In the natural world, bats, whales, and some birds use sound waves to detect objects around them. This is especially useful in the darkness of night or underwater, where seeing visible light is difficult or impossible.

This type of sensing is called **echolocation**, or biosonar. It works like this: The animal emits sound waves that move outward in all directions around it. When the sound waves hit an object, they bounce off of it and travel back to the animal's ears. The sound waves reach each of the animal's two ears at slightly different times. The animal can interpret this time difference to perceive the size, direction of movement, and speed of objects.

 
Animals use echolocation to hunt prey in the dark of night. They can also navigate and find their way around without normal eyesight.

### ACTIVE SONAR





Humans have developed a technology to replicate echolocation, which is called **sonar**. Sonar is an acronym for **SOund Navigation And Ranging**. Sonar is used for navigation in submarines, ships, and airplanes. A similar technology using electromagnetic radio waves instead of sound waves is called **radar** (**RA**dio **D**etection **A**nd **R**anging).

With sonar and radar, airplane pilots are able to find their way and avoid collision with other planes, even in complete darkness or in thick clouds. Police use radar to detect speeding cars.


Your ultrasonic sensor also sends out sound waves. You can't hear them because they are ultrasonic! One "eye" on the sensor head is a transmitter and the other is a receiver. The transmitter sends out ultrasonic waves, like a speaker, and the receiver senses the waves that bounce back, like a microphone. In this way, the sensor is able to sense objects in front of it, even in the dark.

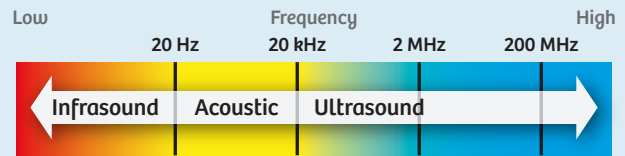

    Sound waves of emitted call      Echo sound waves

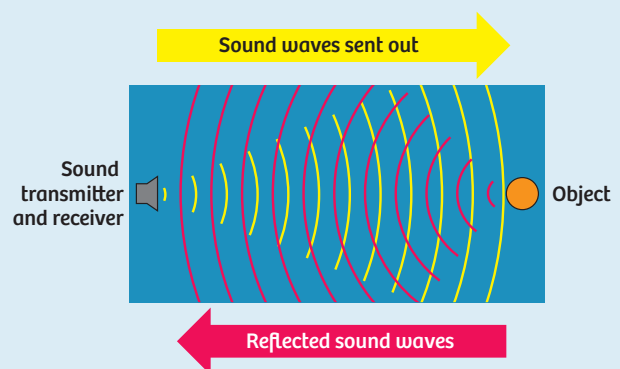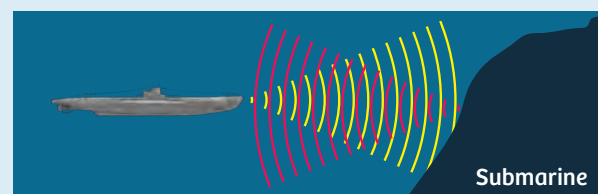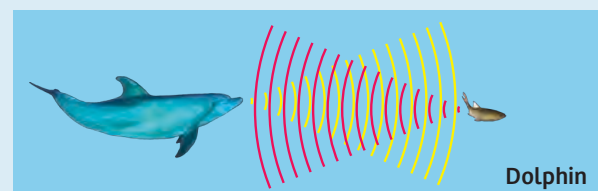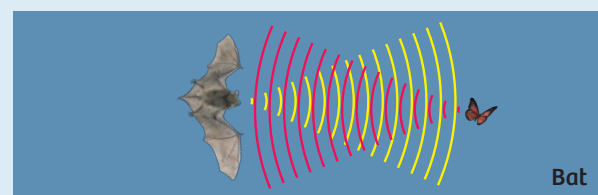

 The ultrasonic sensor has one transmitter and one receiver.

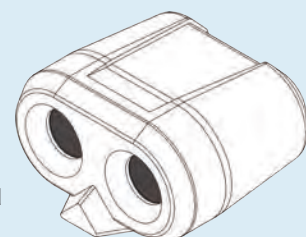



## DOWNLOADING AND USING THE APP

### DOWNLOAD THE APP

You can download the free app for iOS devices from the iOS App Store, or for Android devices from Google Play.

- iOS devices must support Bluetooth 4.0 and must be running iOS 8.0 or later.
- Android devices must support Bluetooth 4.0 and must be running Android 4.4 or later.

To get the app:

 
1. Turn on your tablet or smartphone.
2. If you have a QR code reader installed, you can scan one of the QR codes to right to take you directly to the app download page for your device.
3. Alternatively, you can search for the “Robotics: Smart Machines” app or follow one of these links:  
**iOS:** [www.thamesandkosmos.com/apps/620375/ios](http://www.thamesandkosmos.com/apps/620375/ios)  
**Android:** [www.thamesandkosmos.com/apps/620375/android](http://www.thamesandkosmos.com/apps/620375/android)
4. Follow the steps on the download page to download and install the app on your device.
5. Open the app and the remote control screen will appear.

### REMOTE CONTROL MODE


1. Connect the app to your model by pressing the Bluetooth button in the upper left corner (A).
2. When the connection has been made, the Bluetooth symbol will change color (B) and, if a motor is connected, the motor will drive for a second to indicate the connection has been made.
3. The ultrasonic functionality will now be available if the ultrasonic sensor is connected properly. The concentric circular rings indicate the relative distance to an object in front of the sensor. The ring lights up when an object is detected. Closer objects light up the inner rings; objects that are farther away light up the outer rings. Test it out by moving an object in front of the sensor.
5. You can use the two slider controls (C) to directly control the two motors on your models. Slide the slider up or down with your finger to make the motor spin clockwise or counterclockwise.




### Robotics

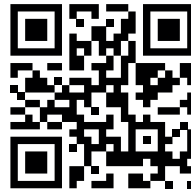

iOS app

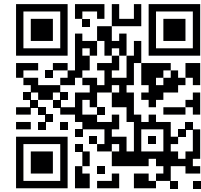 


Android app

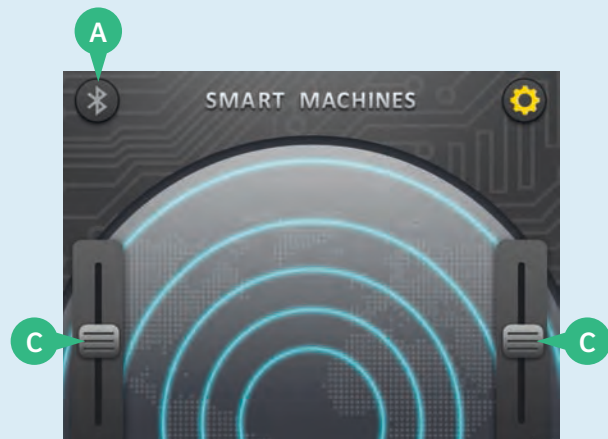 

Object Near

 Object Far

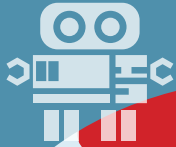

## WRITING PROGRAMS

### PROGRAMMING MODE

 
 
 
 
Press the gear icon (D) to enter the programming mode. When you press the icon, a list of programs appears. You can save up to eight programs. The app comes with demo programs preloaded in Programs 1-7 and Program 8 is blank.

### UNDERSTANDING THE ULTRASONIC DETECTION INTERVALS

1. Enter Program 8 (the blank program). The programming screen appears.
2. The Go button (E) runs the program. When it is pressed, the number in the upper left (F) will start indicating the distance to the object that the sensor is detecting.
3. After you press the Go button, it becomes a Stop button (G) and the program runs. You can see in this example that the sensor is reading a distance of "21." This equates roughly to a distance of 21 centimeters. Press the Stop button.
4. The sensor distance indicator line (H) has adjustable ranges. Different program segments can run in each of these ranges. By default, there are three ranges. The first range marker (I) is set at 30 and the second marker (J) at 50. This means there are four program segments by default:
  - The "Opening" program segment (K) runs once at the beginning when the Go button is pressed.
  - When an object is detected between 0 and 30, the blue 0-30 segment (L) runs.
  - When an object is detected between 30 and 50, the green 31-50 segment (M) runs.
  - When an object is detected between 50 and 100, the purple >51 segment (N) runs.

You can slide the range markers to change the distance ranges. You can also increase the number of distance range segments by pressing the add range marker button (O). You can delete a segment with the delete button (P).

Range markers must be a minimum of 5 distance units apart. You cannot add a new range marker if there is another marker at 90 or higher.

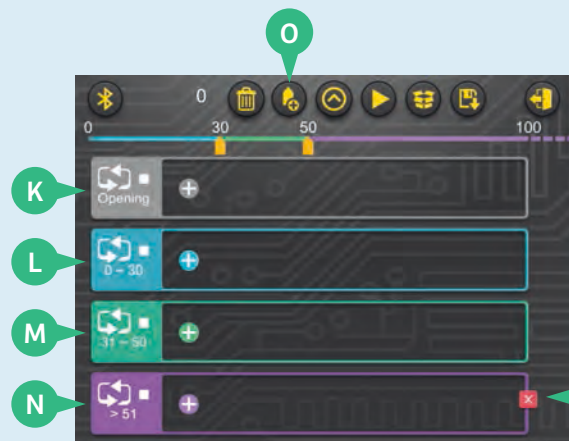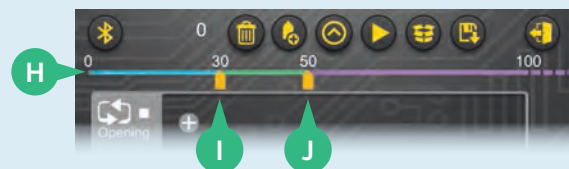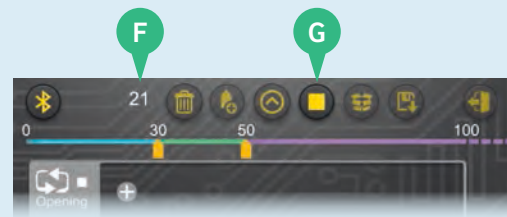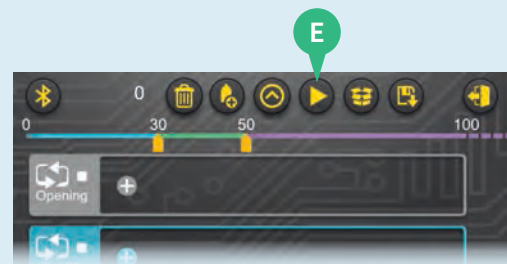


## WRITING A PROGRAM

1. Now you are ready to write your first program.  
Click the gear button (A) to enter the programming mode. Choose a blank program (Program 8 starts out blank).
2. The programming screen appears.
3. Press the plus sign "+" button (B) in one of the program segments to add a command.
4. The commands menu (C) pops up. You can select between three types of commands:

- Choose Motors to add motor commands.
- Choose Notes to add sound commands.
- Choose Rest to add a pause command.

Or press the red X button to exit the commands menu.

 Continued on next page >>>

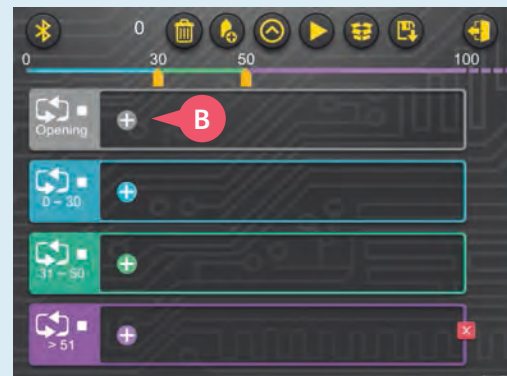


## TROUBLESHOOTING THE SENSOR CONNECTION

If the sensor connection isn't working:

 - >>> Disconnect and then reestablish the Bluetooth connection.
- >>> Make sure the sensor cable is securely plugged into the battery box.
- >>> Exit the program you are in and relaunch it.



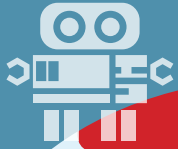

## WRITING PROGRAMS

### PROGRAMMING MOTORS

1. Press the motors command icon and the motor programming window appears (D).
2. In the motor programming window, you can create a command to control motor one (blue) and/or motor two (red) to turn forward or backward. You can choose a relative speed from -4 (fastest in one direction) to 4 (fastest in the other direction).

**Note:** A positive speed (1-4) in the motor command doesn't always mean your model will move forward! You will have to test which direction results in the desired output direction on your specific models, because the orientation of the motor and the gearing will change the direction.

 
 
 
3. With the time slider (E), you can also set the duration for which the motor(s) will turn, from 0.5 to 5.0 seconds.
4. When you are satisfied with your selections, press the green check mark button and the motor block (F) appears in the program segment.

The blocks show which motor(s) (G) the command will turn, and at what speed and in what direction (H) each motor will turn. Below that, it shows how long the motor(s) will turn (I).

The blue gear wheel represents motor one and the red gear wheel represents motor two.

**Tip!** Add red and blue dots or stickers to the battery box and motors so you can easily keep track of which motor you are programming.

5. You can add more command blocks to the same segment by pressing the "+" button (B) again.

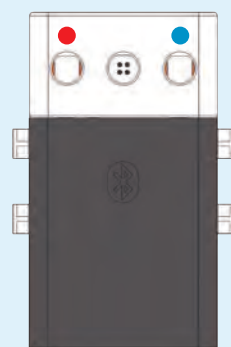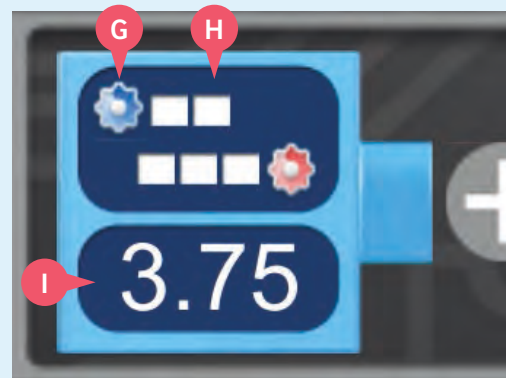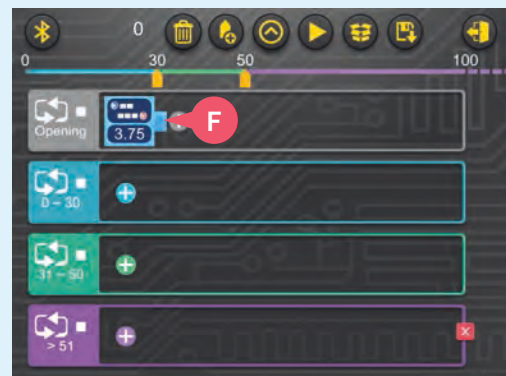

Motor indicator dots

## PROGRAMMING SOUNDS

1. Press the notes command icon and the sound programming window appears (J).
2. In the sound programming window, you can create a command to make sounds. You can choose the pitch (Do, Re, Mi, Fa, Sol, La, Si, and Do) and the duration (0.5 to 5 seconds) for each note command.
3. Press the green check mark button and the note block (K) appears in the program segment.

In this way, you can program a simple melody with multiple note blocks that will play when the program segment runs.



## PROGRAMMING PAUSES

1. The last command option is to add a pause, or rest, to the program. Press the rest command icon and the rest programming window appears (L). You can choose the duration (0.5 to 5 seconds) of the pause in the program. Press the green check mark button and the rest block (M) is added to the program segment.



## WRITING A COMPLETE PROGRAM

 
Following the previous instructions for adding commands, you can now go and write programs for all of the segments. You can think of the different actions you want your robot to perform when the ultrasonic sensor reads objects at different distances in front of it.

Don't be afraid to try a lot of different ideas and play around with different combinations of command blocks in different distance range segments.

## DELETING COMMANDS

To delete a command block, press the block you want to delete to open its programming window. Then press the trash button (N) in the bottom corner.




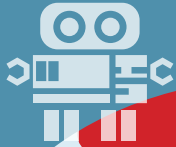

## WRITING PROGRAMS

### DELETE ALL

 
To clear an entire program and set it back to the default blank program mode, press the trash can button (O) in the menu bar. This also resets the range markers to the default settings.

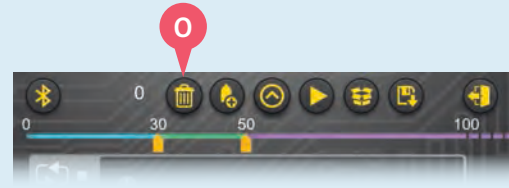

### LOOP CHECKBOX


When the loop checkbox (P) is checked, the program segment will run in a continuous loop, over and over again, when the program segment is active.

 When the loop checkbox is unchecked, the program segment will run just once when the program segment is triggered.

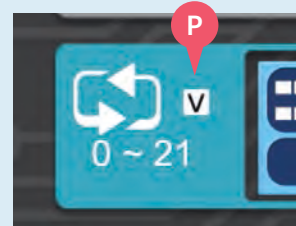

### SWITCHING BETWEEN PROGRAMS

 If you want to move to a different program, click the storage box button (Q) and select which program you want to open.

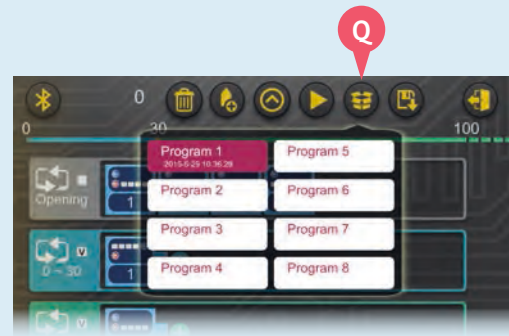

### SAVING PROGRAMS

When you want to save a program you have written, press the disk button (R). The program script will immediately be saved inside the program (1-6) you are currently in. A confirmation screen will appear.



### REVERT TO SAVED

 
To revert to the last saved version of the program and erase all unsaved changes, press the revert to saved button (S).




### EXITING PROGRAMMING MODE

When you want to leave the programming screen, press the door button (T). A window will pop up asking if you are sure you want to leave the programming screen. Press the green check mark button to go back to the main remote screen.



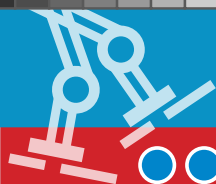


## BIPEDAL DROID

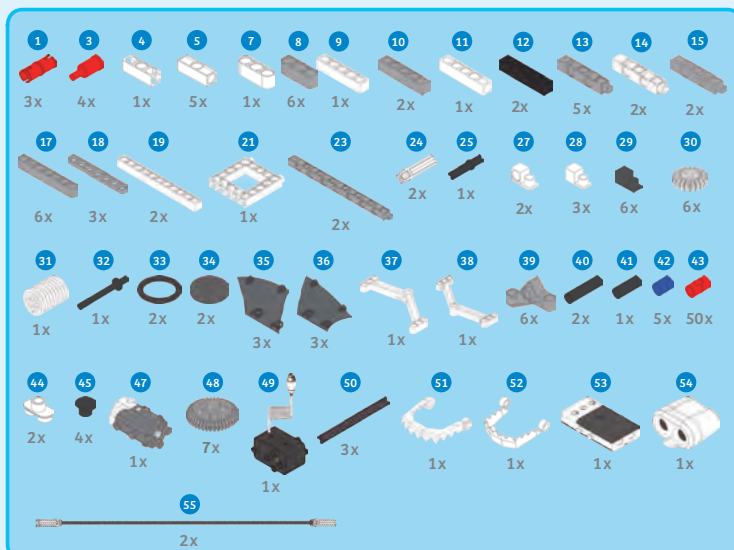 


2

 Right leg

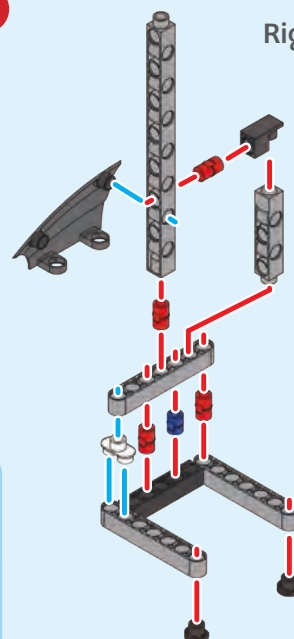


1


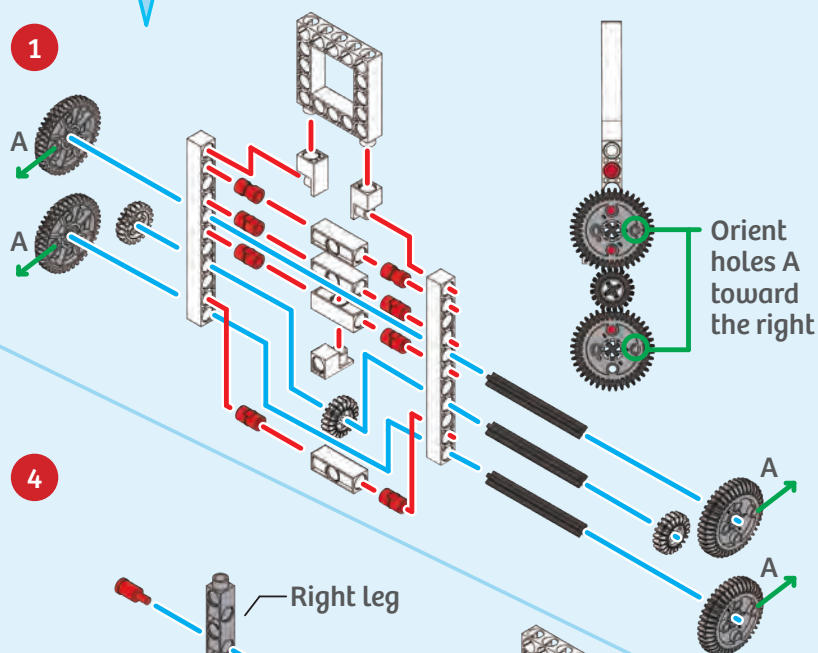 



3

 Left leg

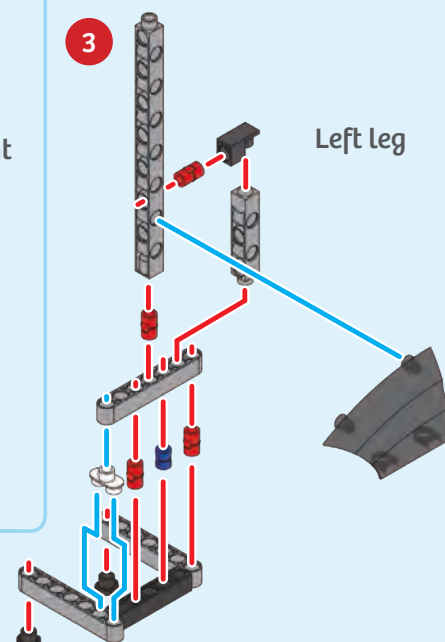

4

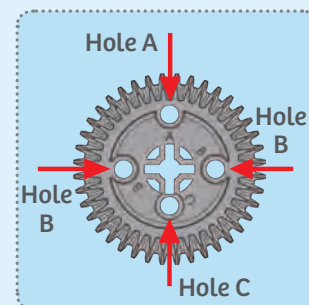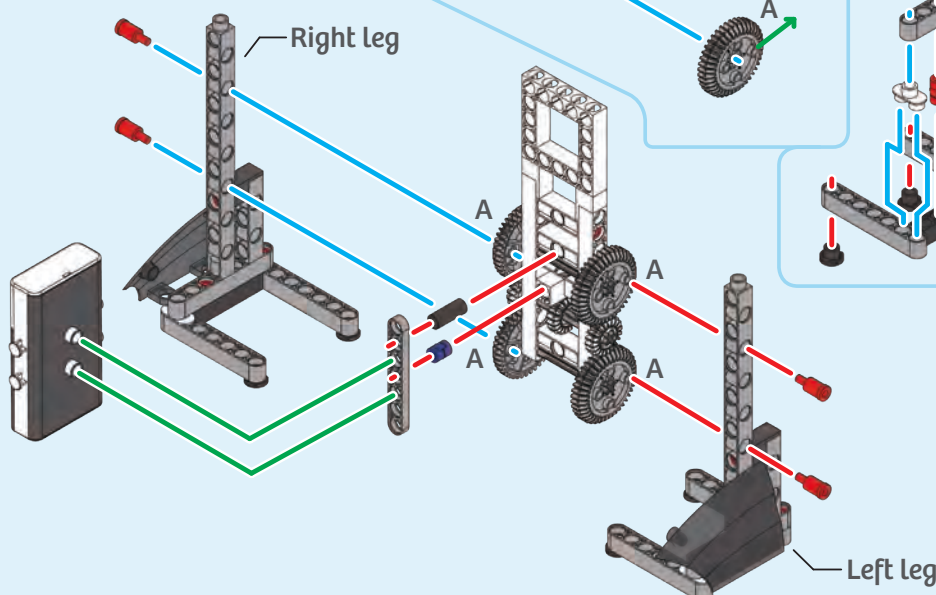  

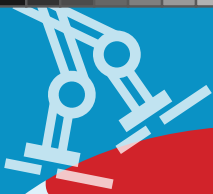 


## BIPEDAL DROID

5






 Left hand

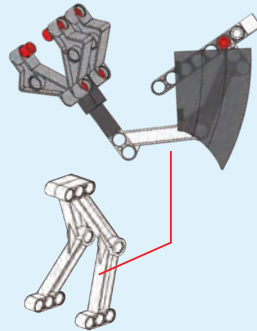


6

   Right hand

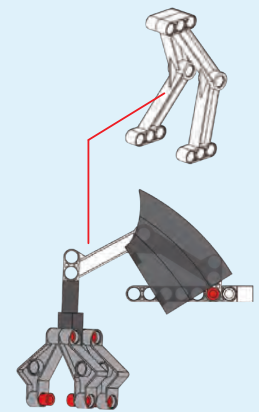


7

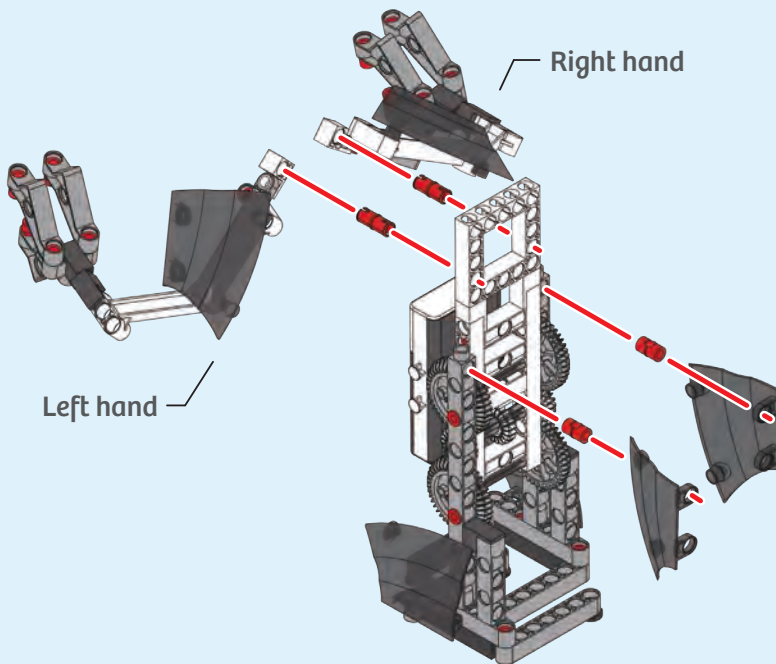 


Right hand

Left hand

 
8

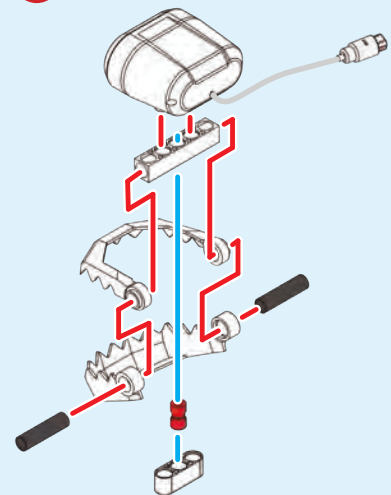


9

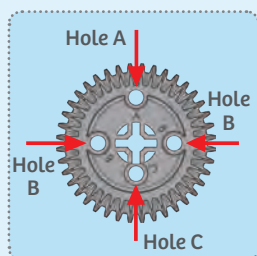 


Connect to hole C

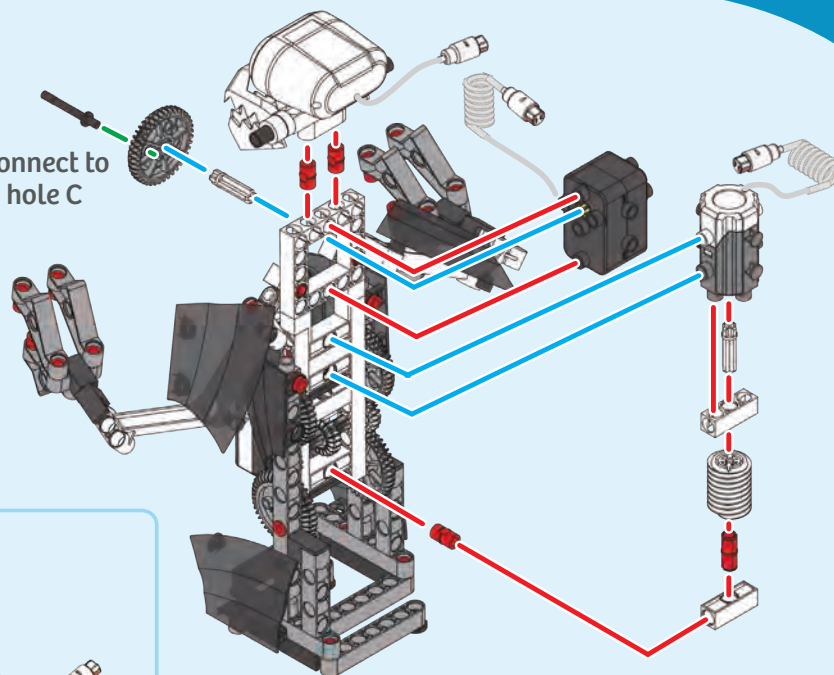 

10

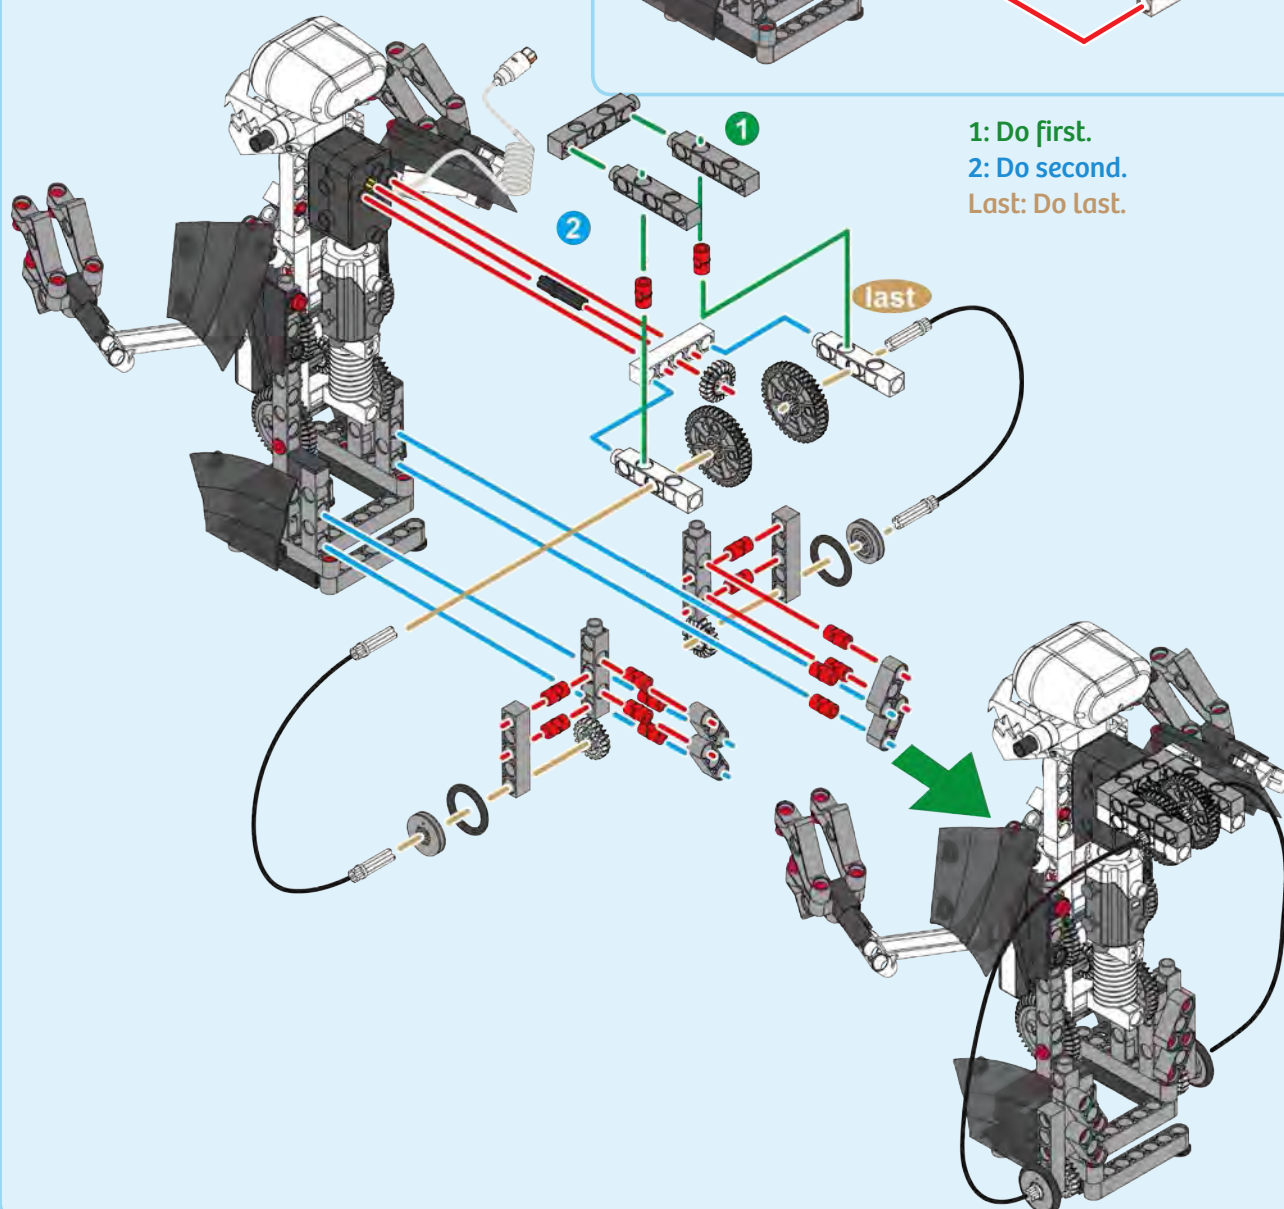 




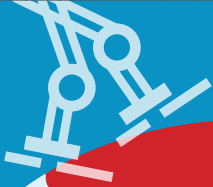 


## BIPEDAL DROID

 11

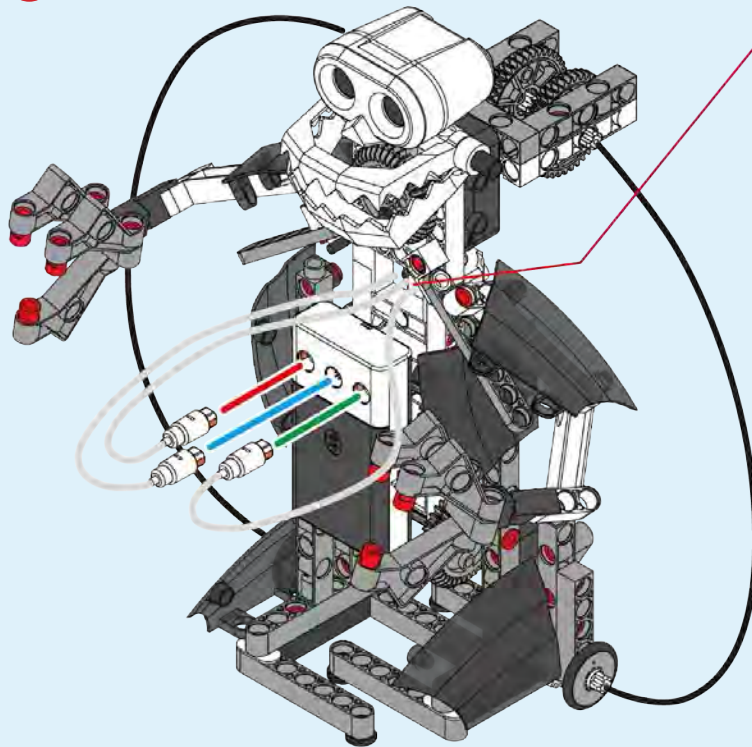


 The three wires pass through the middle frame.

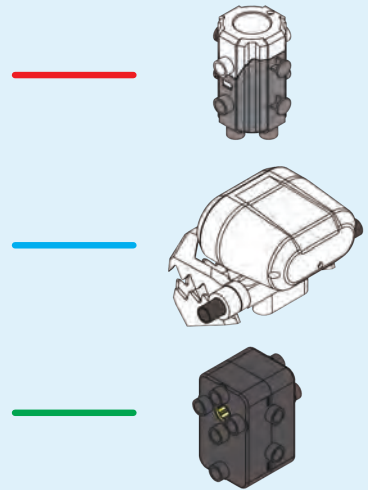

12

 Done!

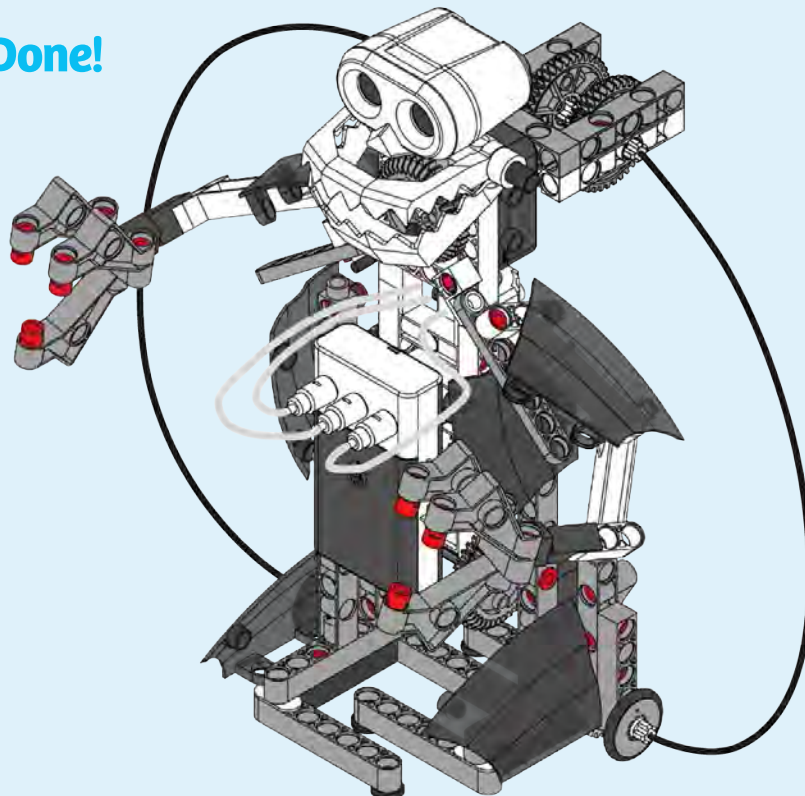


# PROGRAMMING



## SAMPLE PROGRAM FOR THE BIPEDAL DROID

Use this program to make your bipedal droid walk forward until it detects an obstacle with the ultrasound sensor. When the obstacle is detected, the robot will turn to the side. When the robot no longer detects an obstacle, it will walk forward again.

 This program is preloaded in the app under Program 7. Test it out and write down how the robot behaves for each program segment below.

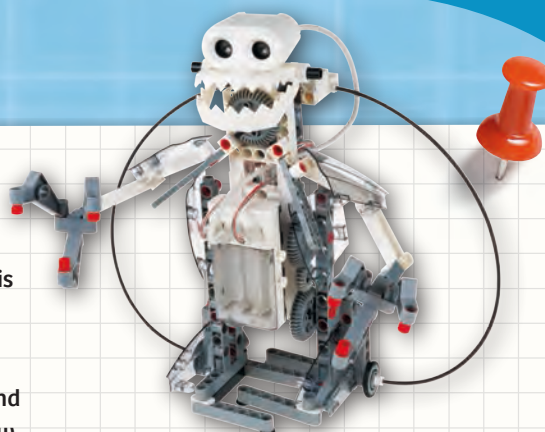

## PROGRAMMING NOTES

### DEMO PROGRAM:

Program 7

### OPENING SEGMENT:

### SEGMENT 0-30:

### SEGMENT 31-40:

### SEGMENT >41: