

Noit 18

User Manual

FCC ID: 2AE45NOIT18

INTRODUCTION

Thanks for choosing the Noit 18, Dual SIM Android smart phone based on 1.2 GHz Dual Core Processor. This smartphone is running on Android OS, v4.0 (Ice Cream Sandwich). If you'd like your phone to live a long and fruitful life, please read this guide carefully and keep it for future reference. You never know when you might need it.

And don't worry if the pictures we use to demonstrate your phone's functions look a little different from what you see on its screen. It's the functions that matter.

Table of Contents

1 Safety	7
1.1	
Safety Precautions	7
1.2	
Using your phone safely	7
2 Understanding your Phone.....	10
Your Phone	



2.1	Description Icons11
2.2	Inserting & Removing the Battery12
2.3	Charging the battery13

2.4	
Power ON/OFF	13
2.5	
Enter Main Menu	13
2.6	
Enter Sub Menu.....	14
2.7	
Use Notification Panel.....	14
2.8	
Expand Main Interface	14
2.9	
Add icons on the main interface	14
2.10	
Move icons on the main interface	14
2.11	
Delete icons on the main interface	14
2.12	
Change wallpapers	15
2.13	
Install APK through File	

Manager	15
3 Using your Phone	16
3.1	
Main Menu & Its Functions	
	16
3.2	
Wi-Fi.....	20
4 Inputting Text.....	21
5 Maintenance.....	22
6 Taking Care of your Device.....	23

1 Safety

1.1 Safety Precautions



Please read through this manual carefully, and act in accordance with these rules, so as to prevent causing any danger or violating any law.

1.2 Using your phone safely



On The Road

Using a phone while driving is illegal in many countries. Please follow local laws and drive safely at all times.



Near Sensitive Electronics

Don't use your phone near sensitive electronic equipment – particularly medical devices such as pacemakers – as it could cause them to malfunction. It can also interfere with the operation of fire detectors and other automatic-control equipment.

For more information about how your phone affects pacemakers or other electronic equipment, please contact the manufacturer or your local distributor.

Your phone may cause interference when used near TVs, radios or automated office equipment.



While Flying

Your phone can cause interference with aircraft equipment. So it's essential you follow airline regulations. And if airline personnel ask you to switch off your phone, or disable its wireless functions, please do as they say.



In Hospital

Your phone may interfere with the normal operation of

medical equipment. Follow all hospital regulations and turn it off when you're asked to by posted warnings or medical staff.



At a Petrol Station

Don't use your phone at petrol stations. In fact, it's always best to switch off whenever you're near fuels, chemicals or explosives.



Around Water

Keep your phone away from water (or any other liquid). It's not a waterproof model.



Making Repairs

Never take your phone apart. Please leave that to the professionals. Unauthorised repairs could break the terms of your warranty.



Broken Antenna

Don't use your phone if the antenna is damaged, as it could cause injury.



Around Children

Keep your mobile out of children's reach. It should never be used as a toy and it might not be good for their health.



Original Accessories

Only use the original accessories supplied with your phone or those approved by the manufacturer. Using unapproved accessories may affect performance, make the warranty void, break national regulations on the use of mobile phones, or even cause injury.



Near Explosives

Turn off your phone in or near areas where explosive

materials are used. Always obey local laws and turn off your phone when requested.



Emergency Calls

To make an emergency call your phone must be turned on and in an area where there's network coverage. Dial the national emergency number and press 'send'. Explain exactly where you are and don't hang up until help has arrived.



Working Temperature

The working temperature for the phone is between -10 Degree and 50 Degree Celcius. Please don't use the phone outside the range. Using the phone under too high or too low temperature might cause problems.



At very high volume, prolonged listening to a mobile phone can damage your hearing.

2 Understanding your Phone

Your Phone



Keys/Touch Points

(1) Power Key: To power on/off Noit 18, press and hold power key for a few seconds on top of your phone. When Noit 18 is ON, press the power key once to activate or

deactivate the screen.

(2)Home key (): Touch the key to return to the home screen.

(3)Options key (): In standby mode, touch the key to set wallpaper, manage apps, access to system settings. Touch it to view menu options.

(4)Back key (): Touch to go back to the previous menu.

(5) Volume Keys: control volume by side volume keys of your phone.

(6) USB jack: connect cable or charger with the jack given on top of your phone

(7) 3.5 mm audio jack: insert earphone here.

2.1 Description Icons

Icons	Descriptions	Icons	Descriptions
	Shows the phone's network signal strength.		Show the phone's battery capacity.
	Speaker has been activated.		You have unread SMS.
	Call on hold		USB storage Turned on.
	The ringing type is set on Vibration.		Flight Mode
	Wi fi is ON		2G network in use.
	You have missed calls.		A clock alarm is active.

Icons	Descriptions	Icons	Descriptions
	In call		Bluetooth ON

2.2 Inserting & Removing the Battery

Inserting the Battery

1. Open the battery cover on the back of your phone.
2. Align the battery's contact points with those of the phone and gently press the battery down into place.
3. Replace the battery cover clicking it back into position.

Inserting the Battery



Closing the Back Cover



Removing the battery

1. Switch off your phone.
2. Open the battery cover. Gently shift the cover and open
3. Lift the battery up and out of your phone.

Open the Back Cover



Removing the Battery



Note: The images may differ with actual product.

2.3 Charging the battery

The rechargeable Li-ion battery that comes with your phone is ready to be used, but is not charged. It is easy to do & can be done in 3 simple steps below:

1. Connect the charger to your phone, and plug it into a socket.
2. The battery indicator in the corner of the screen will scroll to show you it's charging.
3. When fully charged, the battery indicator will stop scrolling.
4. Disconnect the charger from your mobile, and unplug.

2.4 Power ON/OFF

Press the power key to power-ON/OFF the phone.

When you turn your phone on, it'll automatically check the SIM and show the following information on screen:

- **Input SIM1 PIN:** If you've set a PIN for your SIM1.
- **Input SIM2 PIN:** If you've set a PIN for your SIM2.

Note:

The PIN is supplied with your SIM. Please replace it with your own PIN code as soon as possible. Enter the wrong PIN three times, and your SIM will be locked. Then you'll need to contact your network service provider to ask for a PUK code to unlock it. It is applicable for both the SIMs if you are using 2 SIM Cards.

2.5 Enter Main Menu

In Idle mode, press the Menu key to enter the main menu

on the desktop and click the Home key to return.

2.6 Enter Sub Menu

Once at the main menu, click the icon to select the submenu, press **Back Key** to return to the previous menu, and press the **Home Screen** to return to the home screen.

2.7 Use Notification Panel

As a new notification appears in the notification area, slide down in the area to view the contents of the notification.

2.8 Expand Main Interface

The main interface may extend and exceed the screen width to provide more space for newly added shortcuts and tools.

Slide your finger horizontally on the main interface to extend to the left or right area of the main interface.

2.9 Add icons on the main interface

You can long press the icon on the main menu until it's enlarged and the mobile phone vibrates, and copies the icons in the main menu to the main interface.

2.10 Move icons on the main interface

1. Long press the icon on the main interface until it's enlarged and the mobile phone vibrates.
2. Drag the icon to the desired position and then release it.

2.11 Delete icons on the main interface

1. Long press the icon on the main interface until it's enlarged and the mobile phone vibrates.

2. Drag the icon to “Remove” to delete it.

2.12 Change wallpapers

1. Long press “Touch screen” to open the menu.
2. Choose from “Gallery /”Live Wallpapers”/ “Wallpapers”, and Select the wallpaper and press “Set wallpaper” to complete.

2.13 Install APK through File Manager

APK is a supported file format for the Android mobile operating system.

- a)Please copy the downloaded APK file into the SD card, and then insert the SD card into the phone.
- b)In Idle mode, click Main Menu to enter the main menu.
- c)Click “File Manager” to enter the directory of SD card.
- d)Click the APK file you wish to install, and follow the installation wizard.

3 Using your Phone

3.1 Main Menu & Its Functions



Select  to enter the main menu...

Allows you to view a list of features available in your phone-

1. Clock

Allows you to set the Alarm from Clock.

2. Browser

Browse the internet. Search engine- default set as Google.

3. Calculator


Allows you to make tedious calculations quickly.

4. Calendar

View the calendar & add events.

5. Camera

Allows you to click pictures anytime you want. Your Noit 18 has a High Definition camera which ensures you always click good quality of pictures and stores them under the Gallery folder. In Camera, easily choose Camcorder to record Video Files.

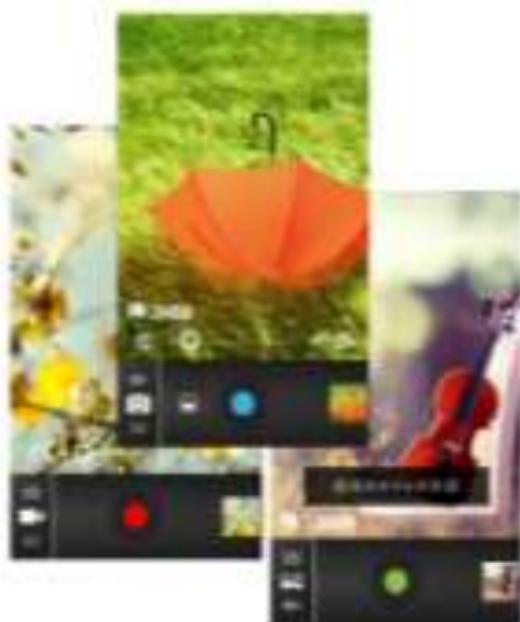


6. Contact

To see your list of Contacts. Access phonebook through this function.

7. Email

Allows you set up your POP/IMAP email accounts.

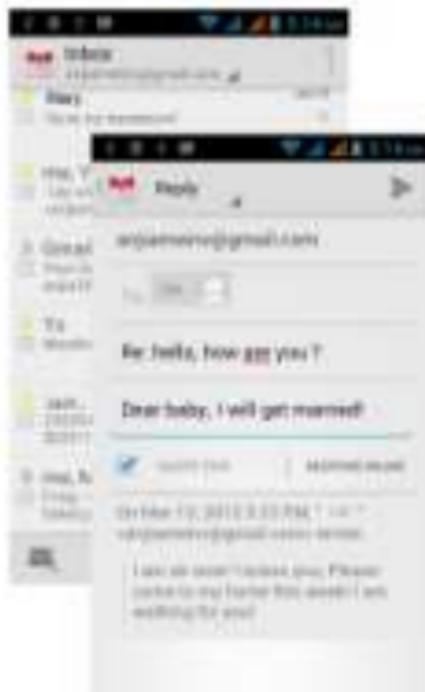

8. Gallery

Allows you to save & view photos & videos.

9. Play Store

Log in to your Gmail account to view all the applications & download from thousands of applications available under the Google Market called Play Store.

Note:

To use this app please connect to an internet connection.

10. Messaging

Allow you to view messages sent & received as a thread.

11. Music

View the list of songs available in your phone. View the artists, albums, playlists & more.



12. Phone

Allow you to make quick outgoing calls.

13. File Manager

You could install the files in APK format & also view your files.

14. Settings

Modify settings under the following-

- Wi-Fi
- Bluetooth
- Data Usage
- Multi SIM Settings
- Sound & Display
- Storage & Battery
- Apps
- Accounts & Sync
- Location Services & Security
- Language & Input
- Backup & Reset
- System Updates
- About phone

15. SIM Toolkit


This service is provided by the operator. It provides many types of personalized message services.

16. Sound Recorder

Allows you to record sounds.

17. Videos

View from list of videos.

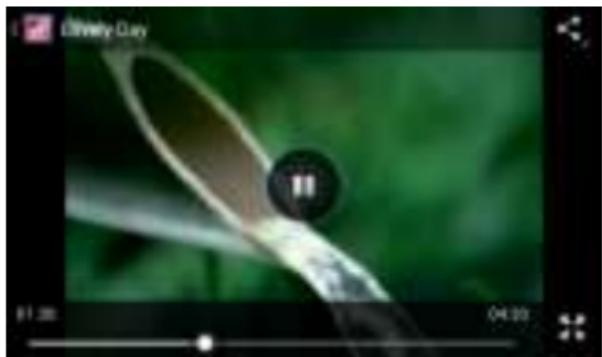

18. Bluetooth

Bluetooth is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters. The Bluetooth devices must be paired before the communication is performed.

3.2 Wi-Fi

Karbonn Noit 18 supports Wi-Fi which allows you to connect with a Wireless connection. This is useful for surfing internet on phone

- a. Enter "Settings" interface & search WIRELESS & NETWORKS. Select the network you want to connect.

4 Inputting Text

Intelligent keyboard

Noit 18 automatically corrects and suggests words as you type.



Cut, Copy and Paste

Touch and hold text content to bring up the magnifying glass, and then slide your finger to move the insertion points. Then choose to cut, copy, or paste. It is very easy to copy text from web pages, email, or text messages.

5 Maintenance

Use a dry soft cloth to wipe general dirt.

Do not use a hard cloth, benzene or thinner to wipe the phone, otherwise, the surface of the phone will be scratched or could even result in the fading of colour.

6 Taking Care of your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Always keep the small parts of the phone away from children.
- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use indoor chargers.

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 86-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back/front of the phone kept 1cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1cm must be maintained between the user's body and the back/front of the phone, including the antenna. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories

that cannot maintain 1cm separation distance between the user's body and the back/front of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSI C95.1> (1992) / <NCRP Report 86> (1986) / <ICNIRP> (1999)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

RF Exposure Information:

This product is in compliance to FCC RF Exposure requirements and refers to FCC website <https://apps.fcc.gov/oetcf/eas/reports/GenericSearch.cfm> search for FCC ID: 2AENOIT18 to gain further information include SAR Values.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C or over maximum 50°C, the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.