


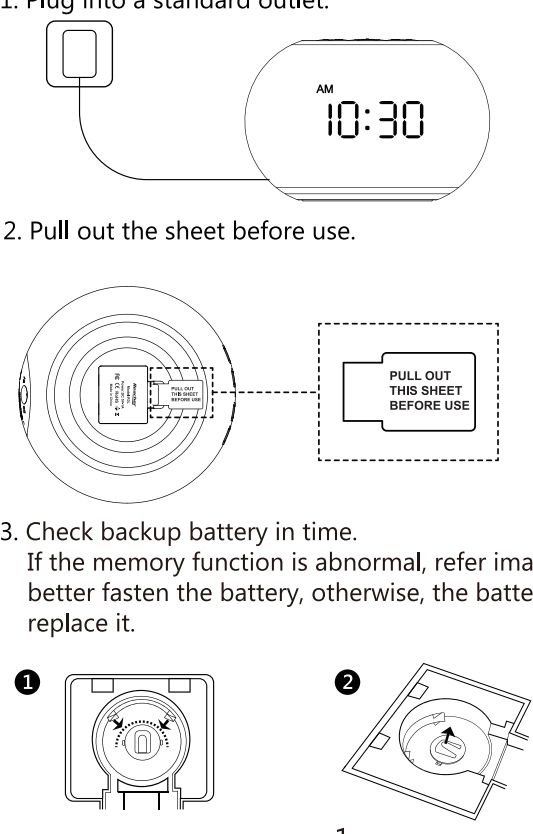
# SIZE:单页尺寸95X130mm,双面印刷, 5折页



Get warranty/support with  
[customer@reachershop.com](mailto:customer@reachershop.com)

### Getting Started


- Plug into a standard outlet.
- Pull out the sheet before use.
- Check backup battery in time.  
If the memory function is abnormal, refer images for better fasten the battery, otherwise, the battery runs out, replace it.




**Pay attention:**

- All operations will auto exit and save settings if there is no operation within 5 seconds.
- Please check "AM" & "PM" indicator when you set time and alarm.

### Overview of Button Functions

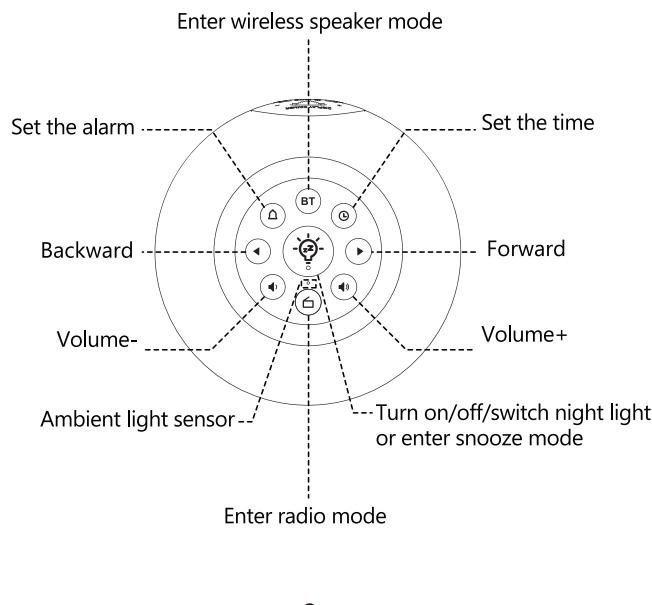

### Front & Back Panel

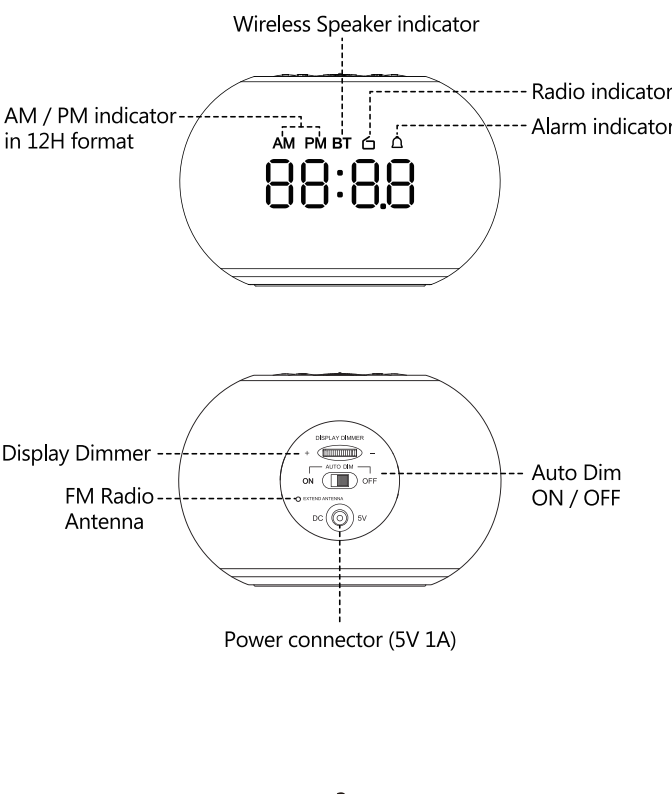

### Time Setting

- Press "⏰" to select hour → minute → time format (12/24H).
- Press "◀" / "▶" to change the selected content.
- Press "⏰" to confirm selected content.

Example:  
Default time is "AM 12:00", but correct time is "AM 12:30". Correct the minute as below.

- Press "⏰" once, "12" flash. Press "⏰" again, "00" flash.
- Press "◀" / "▶" until "00" becomes "30".
- Press "⏰" again, "12H" flash.
- Press "⏰" again to finish setting.

### Alarm Setting

- Press "🔔" to select hour → minute → ringtone(P01-P07).
- Press "◀" / "▶" to change the selected content.
- Press "🔔" to confirm selected content.

#### Alarm Volume Setting

It will sound when ringtone selected, press the "🔊" / "🔊" to adjust volume.

**Attention:**

- Alarm setting is similar to time setting.
- When radio/wireless speaker is OFF, press "🔊" / "🔊" to select the ALARM volume level.

### Alarm On/Off

Hold "🔔" 2 secs to turn ON/OFF the alarm.

### Alarm Pause / Snooze

**Alarm Pause:** Press "🔔" when the alarm goes off or during snooze mode.  
**Snooze:** Press "🔔" to snooze for 9-minute when the alarm goes off.  
(If you do not press any button, it will be keep ringing 30 minutes, then alarm will auto-off and sound in next day.)

### Nightlight Setting

**Turn ON:** Press "💡"  
**Switch Color:** Press "💡" repeatedly.  
**Turn OFF:** Long press "💡".

### FM Radio Play Setting

Please extend the FM antenna on the back of clock.

**Turn ON:** Press "📻".  
**Adjust Radio Volume:** Press "🔊" / "🔊"  
**Turn OFF:** Press "📻".

### Manual Tune FM Channel

Press "◀" / "▶" to choose FM channels and long press to quickly adjust.

### Auto Search FM Channel

- Hold "📻" 2 secs to scan and autosave the scanned stations.
- During the scan, briefly press "📻" to exit the search midway and save the found stations.
- Once the station search is completed, press "◀" / "▶" to select the saved radio station

**Attention:**  
Once auto scanning is completed, if you want manual tuning FM Channel, please RESTORE FACTORY SETTING first. ( Refer to Page 8 )

### Wake Up Radio Alarm Setting


When setting the alarm ringtone(Refer to Page 4), make sure you select P07.

When the radio is on, press and hold "🔔" for 2 secs, "AL" indicator will flash for 3 secs on the screen.

**Attention:**  
After setting, the clock immediately saves this station as Wake Up Radio Alarm Sound(P07).


### Dimmer

**Auto Dimmer**  
Turn on the auto dim switch(on the back panel), will automatically adjust the display's brightness based on ambient light.



**Attention:**  
Do not block the Ambient Light Sensor, otherwise, the display will be very dark.

**Manually Adjust the Display Brightness**  
Slide the "auto dim" to the off position and slide the back wheel.



### Wireless Speaker Setting

**Turn ON:** Press "BT".  
**Connect:** When "BT" flashes, search and select R3LA from the device list to connect.  
**Music Switching:** Press "◀" / "▶".  
**Adjust Volume:** Press "🔊" / "🔊" (The phone can also adjust the volume).  
**Play/Pause:** Press "BT".  
**Reset:** Press "◀" and "▶" simultaneously for 2 secs.  
**Turn OFF:** Long press "BT". ("BT" will disappear)

### Restore Factory Setting

Disconnect the power supply and remove the battery, it will restore factory default setting when plug in the adapter next time.

### Safety Instructions

- To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.
- To avoid damage, never place the unit near radiators, in front of heating vents, under direct sunlight or near water.
- When disconnecting the power supply, pull the plug first.
- Do not pull the cord by itself. Never handle the power plug with wet hands, as this could cause fire or electric shock.
- Do not open the housing.
- Do not twist or pinch the power supply cord. If the plug or power supply cord needs to be replaced, ensure that it complies with the manufacturer's recommendation.

### Support & Warranty

Reacher backs 45-day refund policy and 12-month warranty for products in our store. 7×12H service: [customer@reachershop.com](mailto:customer@reachershop.com). If you have any questions, please feel free to contact us.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.