
MP3451



CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

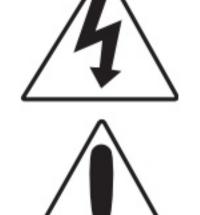


DANGEROUS VOLTAGE: The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

ATTENTION: The exclamation point within an equilateral triangle is intended to alert the user to the

presence of important operating and maintenance (servicing) instructions in the literature accompanying



WARNING: Users of this product are cautioned not to make modifications or changes that are not approved by MEM-CE, LLC., doing so may void the compliance of this product and may result in the loss

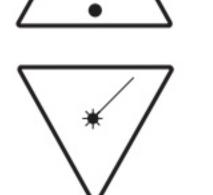

DANGER: This symbol is intended to alert the user to the risk of exposure to invisible and hazardous laser radiation if the cover or back is opened the interlock fails or is defeated. Direct exposure to the beam may damage your eyesight.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT AND FULLY INSERT.

of the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct

- the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.

the appliance

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

CAUTION: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

LASER SAFETY: This unit employs a laser. Only qualified service personnel should attempt to service this device due to possible eye injury. **CAUTION:** USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE PROCEDURE HEREIN MAY RESULT IN

HAZARDOUS RADIATION EXPOSURE.

SURGE PROTECTORS: It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conformé à la norme NMB-003 du Canada.

CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT APPAREIL Á LASER DE CLASSE 1 PRODUCTO LASER DE CLASE 1 CAUTION
INVISIBLE LASER RADIATION
WHEN OPEN AND INTERLOCKS
DEFEATED.
AVOID EXPOSURE TO BEAM



IMPORTANT SAFETY INSTRUCTIONS

- Read these Instructions.
- Keep these Instructions.
 Heed all Warnings.
- 4. Follow all Instructions.
- Do not use this apparatus near water.
 Clean only with a dry cloth.
- 7. Do not block any of the ventilation openings. Install
- in accordance with the manufacturer's instructions.
 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.


- 11. Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not place objects filled with water, such as a vase, on the apparatus.
- 15. The AC mains plug is used as the power disconnect device and it should remain readily accessible and operable during intended use. In order to completely disconnect the apparatus from power, the mains plug should be completely removed from the AC outlet socket

HOW TO USE THE MEMOREX MP3451


Congratulations on your purchase of the Memorex Bluetooth® CD/MP3/WMA Boombox! The MP3451, with built-in Bluetooth® Wireless Technology, makes it easy to take your tunes anywhere. Choose from a variety of music sources, including CD/ CD-R / CD-RW / MP3/ WMA formatted Discs, AM/FM Stereo Radio, Audio devices through Line In port and wireless streaming from Bluetoothenabled devices. Please follow these operational instructions carefully. Save them for future reference. Please follow these operational instructions carefully. Save them for future reference.

POWER SUPPLY

Before first use, check that the rated voltage of the unit matches your local voltage.

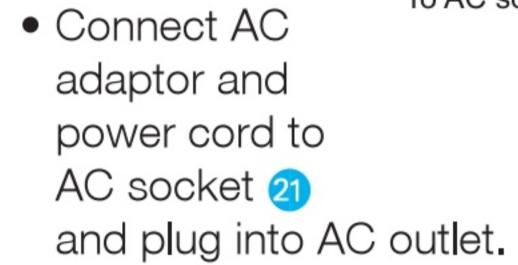

- When using batteries, disconnect the AC power cord. Battery power will automatically cut off when cord is connected.
- Insert 6 "C" size batteries (not included). When the volume decreases, or the sound starts to distort, replace all of the batteries with new ones.

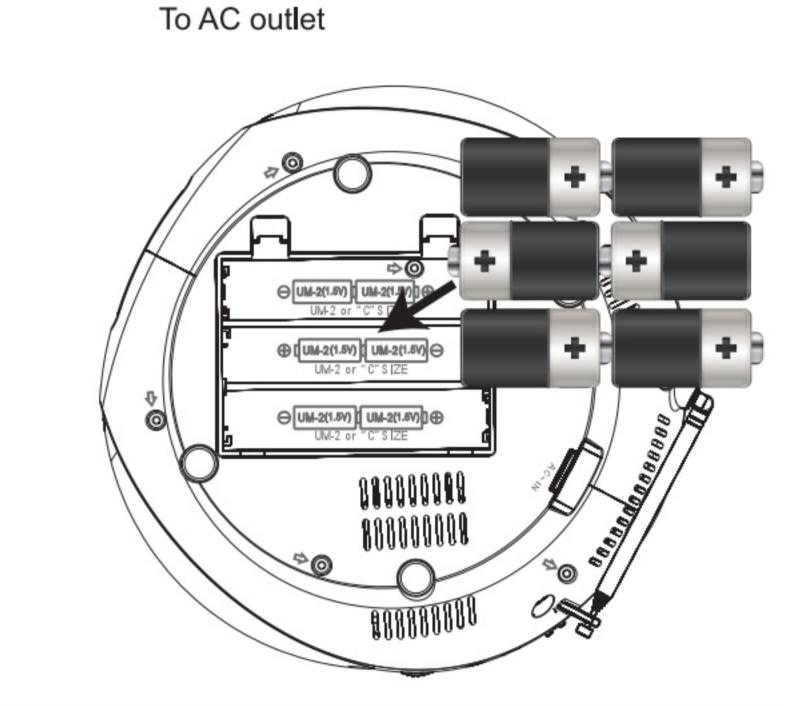

BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:

- Warning Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- 2. Use only the size and type of batteries specified.
- 3. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. A reversed battery may cause damage to the device.
- 4. Do not mix different types of batteries together (e.g. Alkaline, Rechargeable and Carbon-zinc) or old batteries with fresh ones.
- 5. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.6. Do not try to recharge a battery not intended to be recharged; it can overheat and runture.
- 6. Do not try to recharge a battery not intended to be recharged; it can overheat and rupture. (Follow battery manufacturer's directions.)
- 7. Remove batteries promptly if consumed.
- 8. Clean the battery contacts and also those of the device prior to battery installation.

OPERATION

Pair a Bluetooth-Enabled Mobile Device

- 1. Turn on MP3451 by sliding the Function Switch 10 to the BT/RADIO position.
- 2. Slide the BT/Band Switch 15 to the BT position to select the Bluetooth mode (the Stereo/BT indicator 12 will blink and an audible tone will sound). The unit will automatically search for and pair to a previously paired Bluetooth device (if previously paired) and then light solid. You can also press and hold the Stop/BT button 7 for 2 seconds to begin pairing; the Stereo/BT indicator will blink.
- 3. Turn on your mobile device's Bluetooth option in settings to search for a discoverable device with a Bluetooth signal. Select MRX-MP3451 from the device results on your smartphone or tablet.
- 4. You will hear an audible tone indicating the Bluetooth connection is now enabled and the Stereo/BT indicator 12 will light solid when successfully paired.
- 5. Use "0000" if a pairing code is necessary on your mobile device.
- 6. Find your music selection on your mobile device, select play and enjoy!
- 7. While connected via Bluetooth, press the Play/Pause button 9 to Play or Pause and the Skip (4) / (3) buttons to go back or advance tracks. If connection is lost after successful pairing, check to make sure the distance

between speaker and Bluetooth-enabled device does not exceed 33 ft /10 m. MP3/CD Player Operation (CD/MP3/CD-R/CD-RW/WMA)

- 1. Turn on MP3451 by sliding the Function Switch 17 to the LINE IN/CD position.
- 2. Open the CD door by lifting the Open/Close area 6.

HOW TO USE THE MEMOREX MP3451

- 3. Insert a disc with the label side facing up, close door and press Play/Pause button 9.
- 4. Press the Skip ⋈ 4 / ⋈ 3 buttons to play previous or next track. Press and hold the Skip ⋈ 4 / ⋈ 3 buttons to search for track or passage within a track.
- 5. Press the REPEAT button 5 to repeat a single track, REPEAT will appear in the display. Press a second time to repeat all tracks, REPEAT ALL will light solid in the display. Press again to cancel Repeat playback.
- 6. While in the Stop mode, press the Program button 8 to enter the Program setting mode. Select a track using the Skip (4 / ▶) 3 buttons then press the Program button 8. Repeat for up to 20 tracks. Press the Play/Pause button 9 to play the program; PROGRAM will appear in the display. Press the Stop/BT button 7 twice to cancel and clear the programmed tracks.

Note: If the CD skips or will not play, the disc may need to be cleaned. Wipe the disc with a clean cloth. Keep CD lens clean from dust and fingerprints.

Listen to Music Using Radio

Enjoy your favorite AM or FM stations as desired.

- 1. Turn on MP3451 and select the FM mode by sliding the Function Switch to the BT/RADIO position.
- 2. Slide the Band/BT Switch 15 to the AM or FM Stereo position as desired.
- 3. Select a station by rotating the Tuning control 16. When a station with a strong FM signal is playing, the Stereo/BT indicator 12 will light solid.
- 4. FM ANTENNA: Adjust the FM Antenna 1 as desired.

 AM ANTENNA: Rotate the unit for best AM reception.

Headphones Jack

For private listening, insert Headphones with a standard mini plug into this jack 19. The main speakers will be disconnected when the plug is inserted.

Line In Jack

Slide the FUNCTION Switch 17 to the LINE IN/CD position to turn the unit on to the CD/LINE IN mode. Insert one end of an audio cable (not included) into the Line Out jack on your external audio unit and the other end into the Line In jack 22 on this unit; the unit will automatically enter the Line in mode. Start playback of the external unit and its audio output sound will be heard through this unit's speakers.

MAINTAINING YOUR SYSTEM FOR CONTINUED ENJOYMENT

- When not in use, turn unit off.
- Keep the unit away from direct sunlight and excessive heat.
- CLEANING THE CD LENS: If the CD lens is dusty, clean it with a brushblower. Blow several times on the lens and remove the dust with the brush. Finger prints may be removed with a cotton swab moistened with alcohol.
- CLEANING THE UNIT: Do not use volatile chemicals on this unit. Clean by lightly wiping with a soft cloth.
- If an abnormal display indication or an operating problem occurs, disconnect the AC power cord and/or remove the batteries. Wait at least 5 seconds, then reconnect the AC power cord or reinstall the batteries.

TROUBLESHOOTING

Player not working:

- Check the AC connection and/or the batteries are installed properly
- Make sure power is on


Sound not clear or no sound:

- Check volume level
- Check distance between this unit and the connected device (Bluetooth)
- Clean CD lens

No CD Playback:

- Disc is not inserted correctly
- Disc is not compatible
- Make sure CD function is selected
 Make sure the headphones or the LINE IN cable is not connected

LOCATION OF CONTROLS

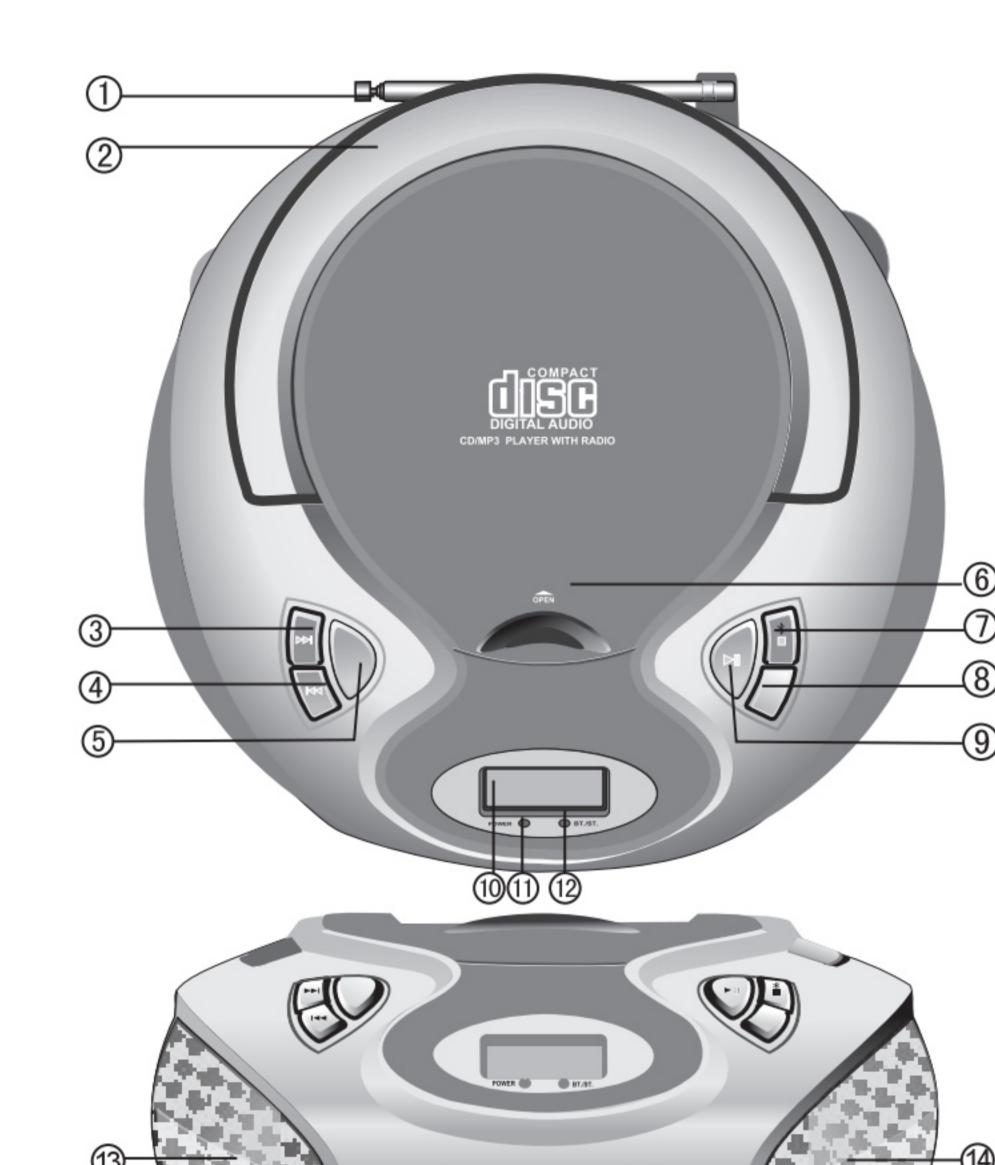

- 1. Antenna
- Carrying Handle
 Skip M Next
- Button

Skip **⋈** Back

- Button
- 5. REPEAT
 Button6. Open/Close CD
- Area
- 7. Stop/BT Button
- 8. Program Button
 9. Play/Pause Button
- 10. Display
- 11. Power Indicator12. Stereo/BT
- Indicator 13. Left Speaker
- 14. Right Speaker
- 15. BT/Band Switch16. Tuning Control
- 17. Function Switch
- 18. Volume Control
- 19. Headphones Jack
- 20. Battery Compartment
- (Bottom of Unit) 21. AC Socket
- 22. Line In Jack

SPECIFICATIONS AND COMPATIBILITY

LIMITED WARRANTY

MEM-CE, LLC. Warrants this product against defects for 90 days from the date of original purchase. MEM-CE, LLC. shall not be responsible for any lost data or other incidental or consequential damages related to this product. Some jurisdictions do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may have other rights which may vary from one state, province or country to another.

Specification are subject to change without notice.

PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO YOUR PLACE OF PURCHASE OR MEM-CE, LLC.

FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE, PLEASE VISIT OUR WEBSITE AT: WWW.MEMOREX-CE.COM OR CONTACT CUSTOMER SERVICE: For customers calling within the United States and Canada, call 1-877-363-6673

MEM-CE, LLC.

11485 Valley View Road, Eden Prairie, MN 55344 USA MEMOREX-CE.COM

Memorex and the Memorex logo are trademarks of Imation Corp and its affiliates. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Imation Corp is under license. All other trademarks are the property of their respective owners.

For additional setup, operating assistance or an electronic version of this user manual, please visit www.MEMOREX-CE.COM