

nyne

Performer

EN PA Speaker
ES Altavoz PA



EN Quick User Guide
ES Guía Rápida del Usuario

nyne.com


QUG-Performer-11-08-2016-V1.0

All rights reserved.
 Nyne Multimedia Inc.
 Property of their respective owners.

All registered and unregistered trademarks are

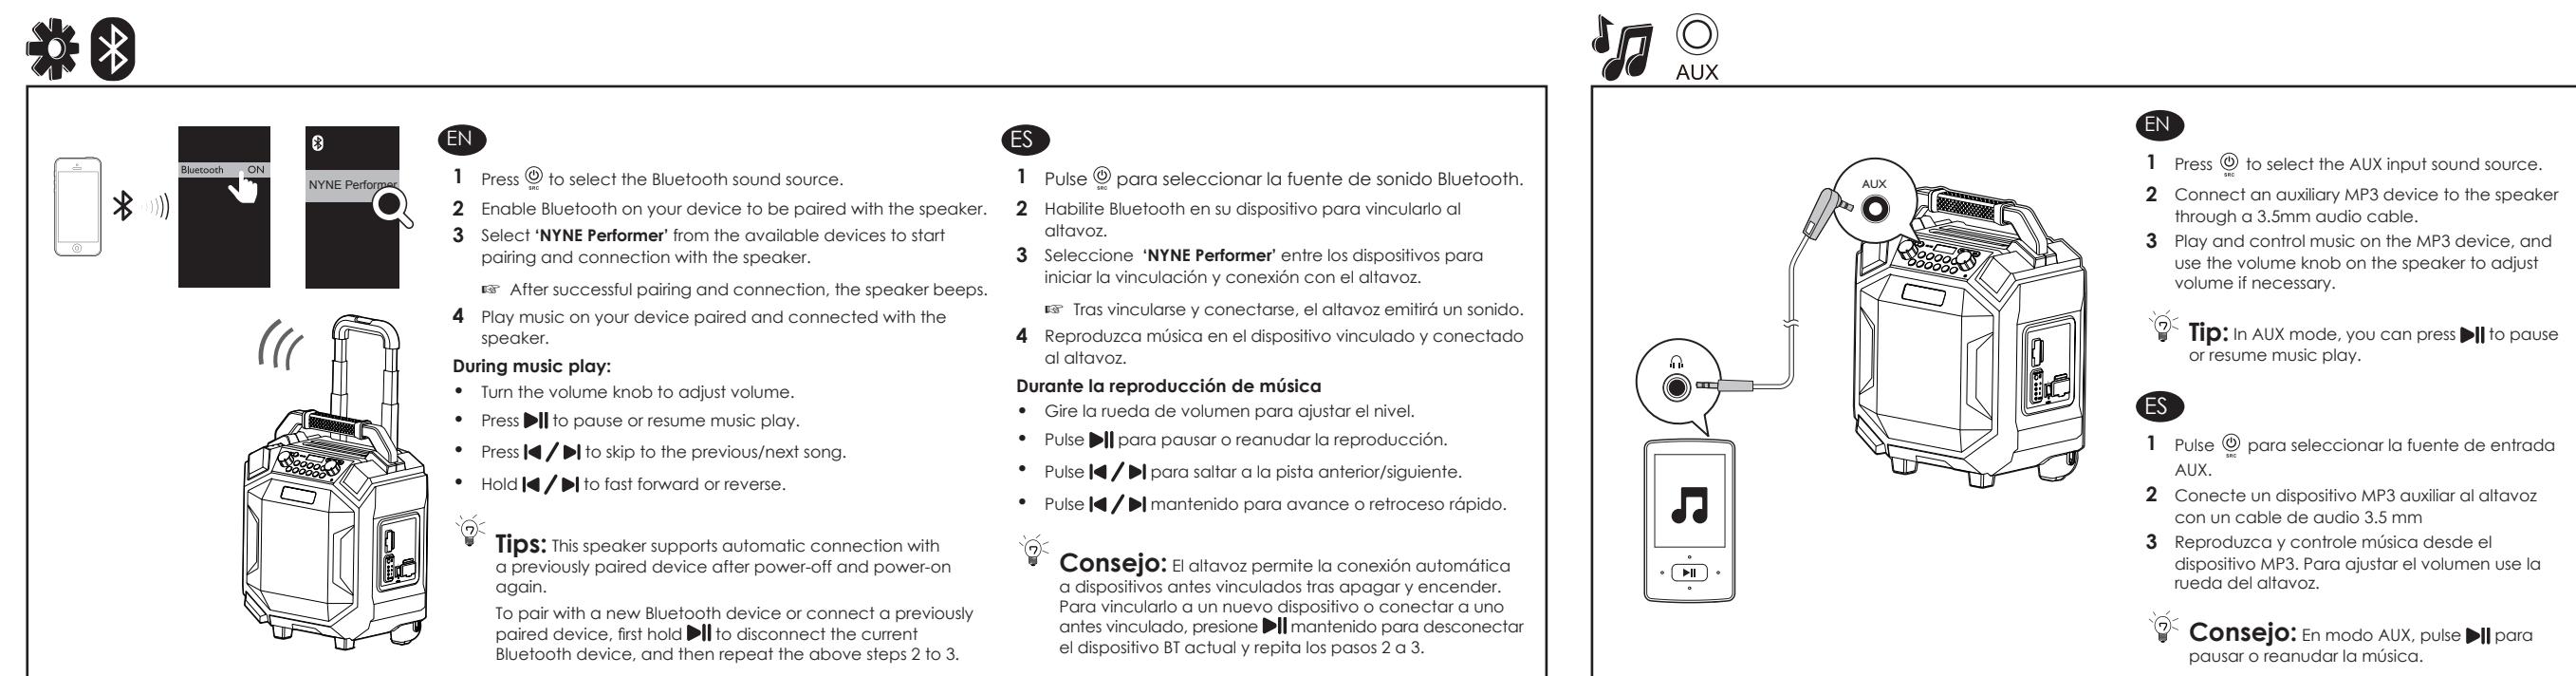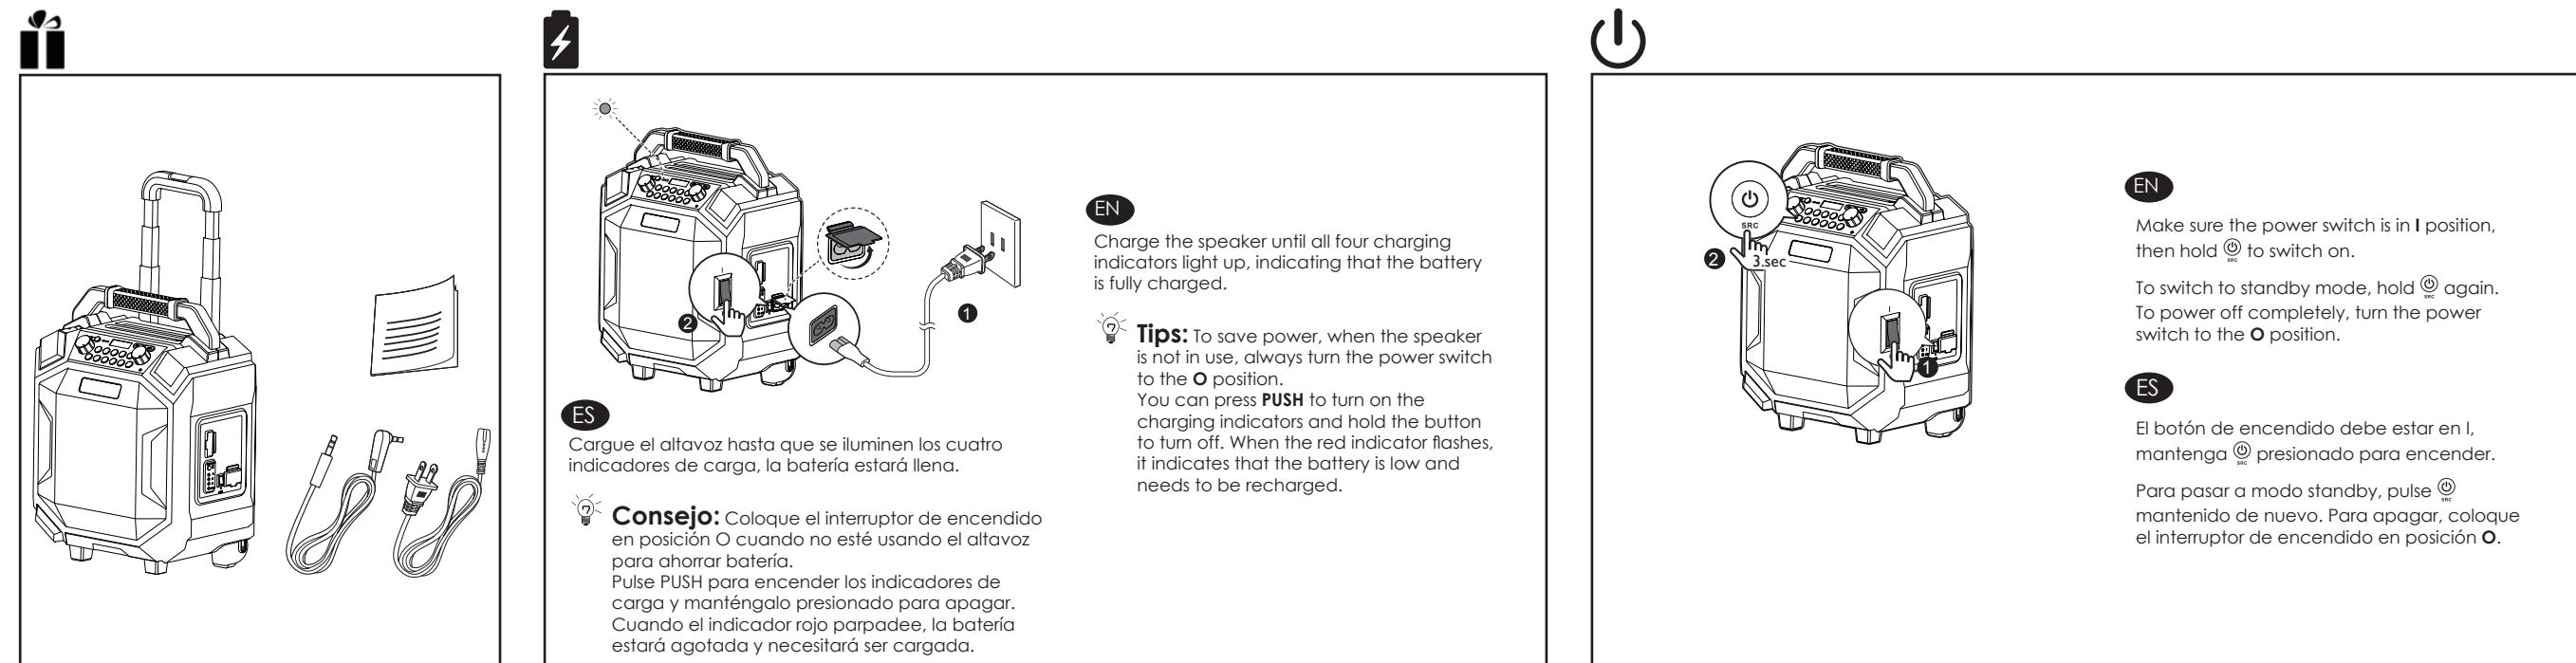auhu



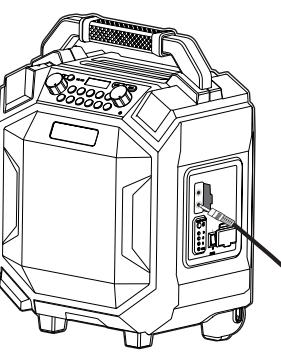

EN

- Connect your guitar to the **MIC** socket.
- Press GT (FREQ) to select the guitar sound source.
- The green guitar indicator lights up.

During play:
Turn the **MIC GUITAR** knob to adjust the guitar volume.


ES

- Conecte guitarra a la toma **MIC GT**.
- Pulse GT (FREQ) Para seleccionar guitarra como fuente de sonido.
- Se ilumina el indicador verde.

Durante la reproducción:
Toque la guitarra con el altavoz.

EN

La rueda **MIC GUITAR** permite ajustar el volumen de la guitarra.

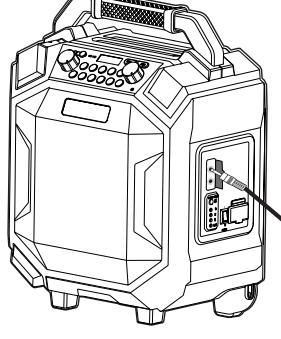

EN


- Connect a microphone to the **MIC** or **MIC GT** socket.
- Sing along through the microphone with the music played through Bluetooth, USB, AUX or the connected guitar (use the **MIC** socket if a guitar is connected).

During play:
Turn the **MIC GUITAR** knob to adjust the microphone volume.

ES

- Conecte un micrófono a la toma MIC o **MIC GT**.
- Cante usando el micrófono mientras reproduce la música de su Bluetooth, USB, AUX o guitarra conectados (use la toma MIC si ha conectado guitarra).

Durante la reproducción:
Gire la rueda **MIC GUITAR** para ajustar el volumen del micrófono.

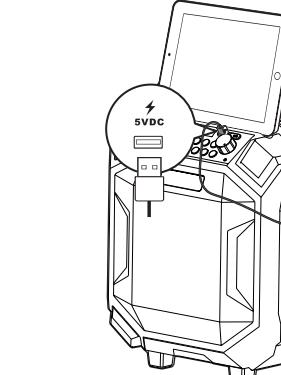

EN

Charge your mobile device through the 5V 1A USB charging socket.

ES

Cargue su dispositivo móvil a través de la toma de carga USB de 5V 1A.

EN

Hold and then release  repeatedly to select one of the 8 available matrix display modes.

Tip: To turn off the matrix display, hold and then release  repeatedly until the matrix display disappears.

ES

Mantenga y suelte  varias veces para seleccionar uno de los 8 modos de matriz.

Consejo: Para apagar la pantalla matriz, pulse y suelte  varias veces hasta que esta desaparezca.

EN

This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

Notice

Any modification (such as removing the speaker grill) to the device, without prior authorization from the manufacturer, may void your warranty and authority to operate the device.

FCC compliance statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television

EN

Important Safety

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of un-isolated, dangerous voltage within the inside of the device that may be of sufficient magnitude to constitute a risk of electric shock to persons.

WARNING: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying the device.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

WARNING: Where the mains plug/appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

Read these instructions before operation.

Keep these instructions for future reference.

Follow all instructions for installation, use and maintenance of the device.

To clean the device, disconnect power first. Clean only with soft and dry cloth.

To ensure compatibility, only use accessories recommended by the manufacturer.

When the device is suddenly moved from cold to warm surroundings, condensation may form in the housing of the device. Before use, leave the device in the warm environment until the moisture evaporates.

Keep the device away from heat sources, such as a radiator, heater, oven, amplifier, naked flames or direct sunlight.

No naked flame sources, such as lighted candles, should be placed on the apparatus.

Never block any ventilation openings. Install in accordance with the manufacturer's instructions.

- Do not expose the device to sand or dust, or cover it with items, such as newspapers, table cloths, or curtains.
- Do not operate the device in an enclosed cabinet. Leave sufficient free space around the device for adequate ventilation.

Do not attempt to repair or service the device yourself. Opening or removing the cabinet may expose you to electric shock, and other hazards. If repair is required, contact your dealer and refer all servicing to qualified service personnel.

Do not use the device if any abnormality occurs. If any smoke or odor becomes apparent, contact your dealer immediately. Do not try to repair the device yourself.

Avoid using dropped or damaged appliances. If the device is dropped and the housing is damaged, the internal components may not function normally. Stop use and contact your dealer for repair. Continued use of the device may cause fire or electric shock.

To reduce the risk of electric shock, do not touch any connector with wet hands.

Never remove the housing of the device.

Never lubricate any part of the device.

Never place the device on top of any other electrical equipment.

This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

Notice

Any modification (such as removing the speaker grill) to the device, without prior authorization from the manufacturer, may void your warranty and authority to operate the device.

FCC compliance statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television

ES

Mantenga y suelte  varias veces para seleccionar uno de los 8 modos de matriz.

Consejo: Para apagar la pantalla matriz, pulse y suelte  varias veces hasta que esta desaparezca.

reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

Recycling

Packaging

Observe the local regulations for how to dispose of the packaging materials.

Instructions for Users on Removal, Recycling and Disposal of Used Batteries

To remove the batteries from your equipment or remote control, reverse the procedure described in the owner's manual for inserting batteries.

For products with a built-in battery that lasts for the lifetime of the product, removal may not be possible for the user. In this case, recycling or recovery centers handle the dismantling of the product and the removal of the battery. If, for any reason, it becomes necessary to replace such a battery, this procedure must be performed by authorized service centers. In the European Union and other locations, it is illegal to dispose of any battery with household trash. All batteries must be disposed of in an environmentally sound manner. Contact your local waste-management officials for information regarding the environmentally sound collection, recycling and disposal of used batteries.

WARNING: Danger of explosion if battery is incorrectly replaced. To reduce risk of fire or burns, don't disassemble, crush, puncture, short external contacts, expose to temperature above 60°C (140°F), or dispose of in fire or water. Replace only with specified batteries.

The symbol indicating 'separate collection' for all batteries and accumulators shall be the crossedout wheeled bin shown below:

In case of batteries, accumulators and button cells containing more than 0.0005 % mercury, more than 0.002 % cadmium or more than 0.004 % lead, shall be marked with the chemical symbol for the metal concerned: Hg, Cd or Pb respectively. Please Refer to the below symbol:

Copyright

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Nyne Multimedia Inc. is under license.

Specifications

The technical specifications are subject to change without prior notice.

Output power 25W

AC input AC INPUT 100 ~ 240VAC

Speaker drivers 6.5"/4ohm/30W + 1.5"/8ohm/10W

S/N >70dB

THD+N <10%

Dimension 13.62 (W) x 18.03 (H) x 9.37 (D) inches

Weight 5.9kg

Audio input 1 x 3.5 mm socket

1 x wireless input (Bluetooth)

1 x USB audio socket

1 x guitar socket

1 x microphone socket

Wireless Bluetooth 2.1 + EDR + CLASS2

Bluetooth profiles HFP, A2DP, AVRCP

Battery capacity 11.1V 2000mAh

Battery type Lithium-ion

Play time 3 - 4 hours at 30% volume

ES

Importante Seguridad

El relámpago con símbolo de flecha dentro de un triángulo equilátero sirve para avisar al usuario de la existencia de tensión peligrosa sin aislar dentro del dispositivo que podría tener magnitud suficiente para constituir un riesgo de descarga eléctrica.

Advertencia: Para reducir el riesgo de descarga eléctrica, no retire la cubierta (ni el panel posterior), ya que podría contener piezas no reparables por el usuario. Ponga la reparación en manos de personal cualificado.

El signo de exclamación dentro de un triángulo equilátero sirve para avisar al usuario de que hay instrucciones de funcionamiento y mantenimiento importantes en la documentación que acompaña al dispositivo.

ADVERTENCIA: Para reducir el riesgo de incendio o descarga eléctrica, no expanga este aparato a la lluvia o la humedad. El aparato no deberá exponerse a goteo o salpicaduras, y no deberán colocarse objetos llenos de líquido, como jarrones, sobre el aparato.

ADVERTENCIA: Cuando se utilice el enchufe principal/conector del aparato como dispositivo de desconexión, el dispositivo de desconexión debe permanecer listo para su uso.

ADVERTENCIA: La batería (batería o baterías o paquete de baterías) no deberá exponerse a calor excesivo, como la luz solar, el fuego o fuentes de calor similares.

Lea estas instrucciones antes de usar el aparato. Guardese estas instrucciones para consultarlas en el futuro. Siga todas las instrucciones de instalación, uso y mantenimiento del dispositivo.

Para evitar que vuele o se caiga, coloque el dispositivo sobre una superficie plana y dura.

Para limpiar el dispositivo, desconecte primero la alimentación. Limpíelo solo con un paño suave y seco.

Para garantizar la compatibilidad, utilice solo accesorios recomendados por el fabricante.

Cuando el dispositivo pase repentinamente de un entorno frío a un entorno caliente, podría formarse condensación en la carcasa. Antes de usarlo, deje el dispositivo en el entorno caliente hasta que se evapore la humedad.

Mantenga el dispositivo alejado de fuentes de calor, como radiadores, calefactores, hornos, amplificadores, llama abierta o luz solar directa.

No deberán colocarse fuentes de llama abierta, como velas encendidas, sobre el aparato.

No bloquee nunca las aperturas de ventilación. Instale el aparato siguiendo las instrucciones del fabricante.

- No exponga el dispositivo a arena o polvo ni lo cubra con objetos como periódicos, mantelos o cortinas.
- No ponga en funcionamiento el dispositivo en un armario cerrado. Deje suficiente espacio libre alrededor del dispositivo para que pueda ventilarse adecuadamente.

No intente reparar o realizar usted mismo tareas de mantenimiento en el dispositivo. Abrir o extraer el armario puede exponerle al riesgo de sufrir una descarga eléctrica y otros peligros. Si necesita reparar el aparato, contacte con su distribuidor y ponga todas reparaciones en manos de personal de mantenimiento cualificado.

No utilice el dispositivo si se produce cualquier anomalía. Si detecta humo o olor, contacte inmediatamente con su distribuidor. No intente reparar usted mismo el dispositivo.

No utilice aparatos que se hayan caído o estén dañados. Si el dispositivo se ha caído y la carcasa está dañada, los componentes internos podrían no funcionar con normalidad. Detenga el uso y contacte con su distribuidor para que lo repare. El uso continuado del dispositivo podría provocar incendios o descargas eléctricas.

Para reducir el riesgo de descarga eléctrica, no toque ningún conector con las manos mojadas.

No extraiga nunca la carcasa del dispositivo.

No lubrique nunca las piezas del dispositivo.

No coloque nunca el dispositivo sobre otros aparatos eléctricos.

Aviso Este equipo es un aparato eléctrico de Clase II o con doble aislamiento. Ha sido diseñado de tal forma que no requiere conectarlo al circuito de tierra eléctrico.

Modificación

Cualquier modificación (como extraer la rejilla del altavoz) en el dispositivo sin el consentimiento previo del fabricante podría anular su garantía y su autorización para utilizar el dispositivo.

<div data-bbox="6