

disco Speaker

Packing list

1. Instruction manual,
2. USB charging cable
3. AUX-line-in audio cable
4. Warranty card

Specifications:

Bluetooth wireless version 2.1+EDR

One speaker, 1 x 3 watt,

Support bluetooth / line-in function

Super bright rotating disco effect

Aux-In Jack

With built-in mic for handsfree call

Music playing time : 1%hour to 2 hours

Built-in rechargeable lithium battery 3.7v, 600mAH

Clear & beautiful sound output

Charging time : 2 hours

Colour : black, red blue

The main functions of the disco speaker

 
1. Support MP3 / WMA / WAV audio format
2. Support Bluetooth music and Bluetooth call
3. Support externalAUX audio input
4. support voice prompt function

Options:

MP3 +USD2.00

USB +USD1.80

Sisvel License +USD0.60

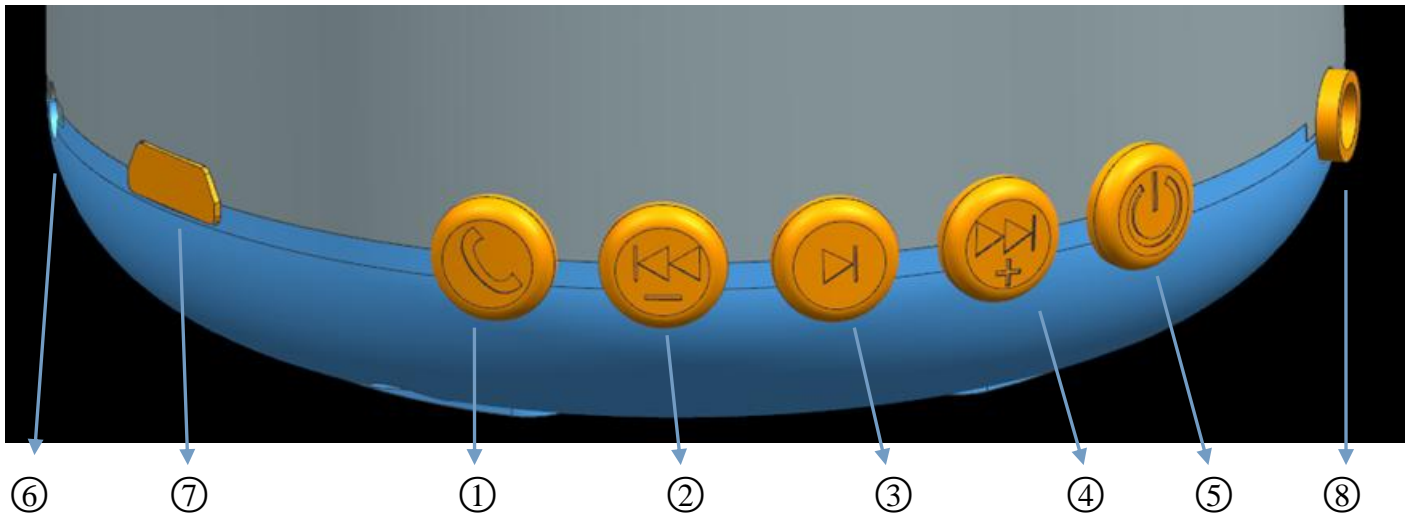

Function

1. Key ① during bluetooth mode, short press is answer phone call. Long press for rejecting incoming calls.
2. Key ② press short for next song, press long to turn down the volume.
3. Key ③ when under bluetooth mode play music, press short for "play/pause".
4. Key ④ press short for last song,press long to turn up the volume.
5. Key ⑤ Power switch: long press button for ON/OFF, After powered on, press short for Open and close the lighting effects
6. ⑥ Guiding light, Blue light flash: Bluetooth is ready to pair and connected successfully
Red light: Red: Charging status (red indicator off when charged)
7. ⑦ Micro USB port: Connect it with PC or charger for charging
8. ⑧ line in mode: it can play audio via it AUX cable to audio device

Function introduction

-Bluetooth

Entry Bluetooth mode, the speaker can research Bluetooth connection and match. Different brands of mobile phone when using bluetooth, the volume adjusted appropriately.

1. Once the Bluetooth connection is established, play music on mobile phone port, short press ② or ④ key can switch to last/next music, long press key can reduce/increase volume, short press key ③ could pause/play music.
2. After successful of Bluetooth connection, when the phone call, short press key ① can answer during phone call, long s

press can hang up the call.

-. LINE IN

Insert LINE IN line; access the external sound source, audio can automatic entry LINE IN mode. Under LINE IN mode, long press ② or ④ key can reduce/increase the volume, short press key can pause/play music.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must be located for operating in conjunction with any other antenna or transmitter.