Size:360x90mm

WIRELESS SPEAKER WITH DISCO LIGHT USER MANUAL

Please read the instruction carefully before use.



*Important Safety Instructions

- · Before using the unit please read the manual carefully.
- Keep this product away from any water, liquid or wet areas.
- This product should not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the device.
- Use in dry locations only.
- Keep this product away from exposed flames, such as candles.
- This product should only be operated from the type of power source indicated on the label.

- Do not place the product in direct sunlight or heat. Keep away from temperatures over 40°C (104°F).
- Make sure the product has plenty of ventilation.
- Do not use a wet cloth on the product. Always use a dry cloth to clean this product and keep it free from dust.
 Do not use chemicals on this product.
- Never try to repair this product yourself, take it to an approved technician.
 Trying to remove panels or repairing the unit yourself could lead to electric shock
- When the unit is not in use, make sure it is correctly turned off and stored in a cool dry place.
 Do not insert foreign objects into the product.
- · Adult Supervision is recommended with children using this product.
- Avoid dropping or standing on the product, as harsh impacts could damage the product.
- Ensure children and infants do not play with plastic bags or any packaging materials.

*Package Contents

•Mini Wireless Disco Ball Speaker •Instruction Manual

*Eostur

- 1. Bluetooth stereo output, Supports A2DP, AVRCP protocol.
- Supports Line-in Function.
- LED Multi-Color Disco Light with a variety of color effects.

*Charging

For best results, fully charge the speaker before its first use.

 Connect the USB charging cord (included) to the USB charging port of the speaker and insert the other end into a USB port on your computer or similar power source. The red LED will turn on, indicating that the battery is being charged. Once the speaker is fully charged, the red LED light will turn off. It will take approximately 2 hours to fully charge the battery.
 Note: To prolong battery life, do not charge for over 4 hours.

*Functions

- ON/OFF: Slide ON/OFF switch to the ON position to power on; Slide ON/OFF switch to the OFF position to power off.
- 2. Connecting an AUX audio line device will automatically be recognized and play music.
- 3. Speakers, Next and Previous song, and the volume is controlled by paired device.

*Pairing the Speaker

- Make sure the speaker and your Bluetooth-enabled device (smartphone or table) are no more than 1 meter (3 feet) apart for the initial pairing process and ensure the speaker is turned off.
- Slide the ON/OFF switch to turn the speaker on. The speaker will first enter Bluetooth Mode and the LED light will light up as well. When you hear an indicator tone and the blue indicator light flashes rapidly the speaker is now in pairing mode.
- 3. The method of pairing varies by device. Please consult your Bluetooth-enabled device's manual for pairing instructions.
- 4. Search for Bluetooth device "BT SPEAKER" and select to pair.
- 5. Once successfully paired, the blue light will remain solid.

*Specification

Output Power: 3W	Frequency Response: 60HZ-20KHZ
Peak current: 300MA	Loudspeaker size: 4Ω3W
Input Power: DC5V/300MA	Size:
SNR:≥80dB	Distortion: ≤1%
Bluetooth Standard:4.2	Input voltage: 3.7V-4.2V

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are

designed to provide reasonable protection against harmful interference in a

residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions,

Imay cause harmful interference to radio communications. However, there is no

quarantee that interference will not occur in a particular installation. If this

equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to

I try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the

receiver is connected.

I-Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance

could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

I(2) this device must accept any interference received, including interference that may cause undesired operation.