

8.5"


# CANVAS<sup>TM/MC</sup>

## PIXEL TREE

PRODUCT NO. 000-0000-0

REMOTE MODEL NO. PIXEL-NM

MODEL NO. 151-3568

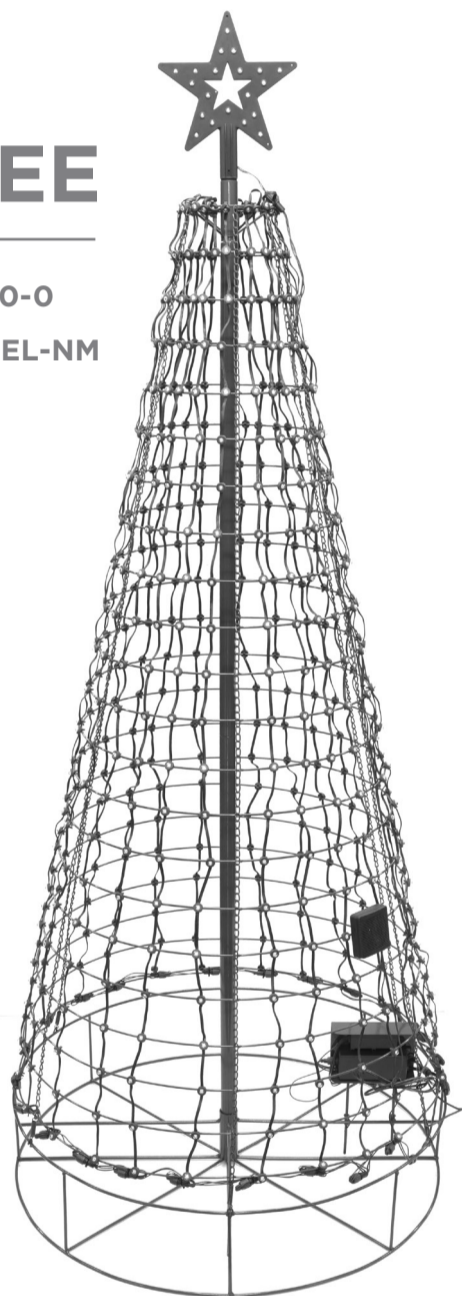

### ASSEMBLY INSTRUCTIONS

Toll-free: 1-888-670-6684

IMPORTANT: Please read this manual carefully before beginning assembly of this product.  
Keep this manual for future reference.

11"

# CANVAS<sup>TM/MC</sup> 2

Table of Contents	3
Important Safety Instructions	2-3
Part List	4
Assembly	5-11
Cleaning and Maintenance	11
Technical Data	11
Warranty	12



Warning! To reduce the risk of serious injury, read the following safety instructions before assembling and using the pixel tree.

**Caution! Always keep children under close supervision while they are using or around this product.**

**Never leave children unattended.**

**WHEN USING ELECTRICAL PRODUCTS, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED INCLUDING THE FOLLOWING:**

**READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**

- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- This seasonal use product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not let LEDs rest on the supply cord or on any wire.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- This is an electrical product—not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
- Do not use this product for anything other than its intended use.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Do not cover the product with cloth, paper or any material not part of the product when in use.
- Do not place lighting string on carpeting, drapes, furniture, or allow it to contact vinyl siding while the power is on.
- Do not perform any maintenance or troubleshoot for bad or broken LEDs while the power is on.
- Caution! To reduce the risk of fire and electric shock: a). Do not install on trees with needles, leaves or branch coverings of metal or materials which look like metal, and b). Do not mount or support strings in a manner that can cut or damage wire insulation.
- Read and follow all instructions that are on the product or provided with the product.

**IMPORANT:** Retain for future reference, and ready carefully.

**3 PRODUCT NO. 000-0000-0 | MODEL NO. 151-3568**

**USE AND CARE INSTRUCTIONS**

- When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees with needles that are brown or break off easily. Keep the tree holder filled with water.
- If the product is placed on a tree, the tree should be well secured and stable.
- Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the LED holders or enclosures, loose connections or exposed copper wire.
- When storing the product, carefully remove the product from wherever it is placed, including tree branches, or bushes to avoid any undue strain or stress on the product conductors, connections, and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.

**CAUTION**

- This lighting string is rated 6 Volt DC.  
Do not replace or modify any connectors on this product. Discard product if connector is damaged. Make sure connectors are fully inserted and any connector rings are twisted until completely secured such that the ring can no longer be turned and the two portions of the connector are completely assembled.
- Do not use a dimmer switch or install any additional Christmas lighting or ornamentation that is powered by a light bulb socket. Doing this may result in damage to your light string or cause personal injury. This action will result in a void of the limited warranty of this product.

This Class [B] digital apparatus complies with Canadian ICES-005.

**CAUTION**


- Do not operate this product while it is still in the packaging.
- Battery is to be inserted with the correct polarity.
- Replace only with 27A 12V battery.
- Exhausted battery is to be removed from the battery holder.
- The supply terminals are not to be short circuited.
- Do not throw battery into fire.
- Battery should never be left in the product when not in use for long periods of time.
- Never allow any plastic part to come in contact with a source of heat or flame.
- This is a Christmas decoration. This is not a toy. Keep out of the hands of small children.

**DISPOSAL AND RECYCLING**

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice. This applies to the battery as well.


# CANVAS<sup>TM/MC</sup> 4

1

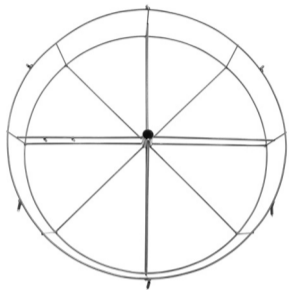

Tree base - 1


6

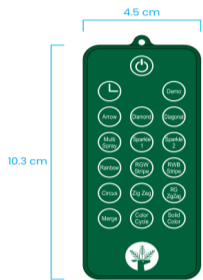

Remote control - 1

2

Collapsible lighted tree frame with 5 pre-programmed songs control box and a power box - 1

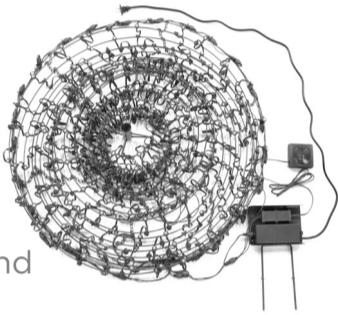

3



Lighted star frame - 1

4



Support pole - 2

5



Lawn stake - 4

**5** PRODUCT NO. 000-0000-0 | MODEL NO. 151-3568

No tools required (Hammer optional).  
2 people recommended for assembly.  
Retain carton for storage.

**Step 1**


Requires **1**

Determine the final display location before assembling the tree. The Tree must be placed on level ground. Place the tree base **1** in the desired location.

**Step 2**

Requires **1, 2**

Center and then place the lighted tree frame **2** over the top of the tree base **1**. Be sure that the light string cord is not under the tree base **1**

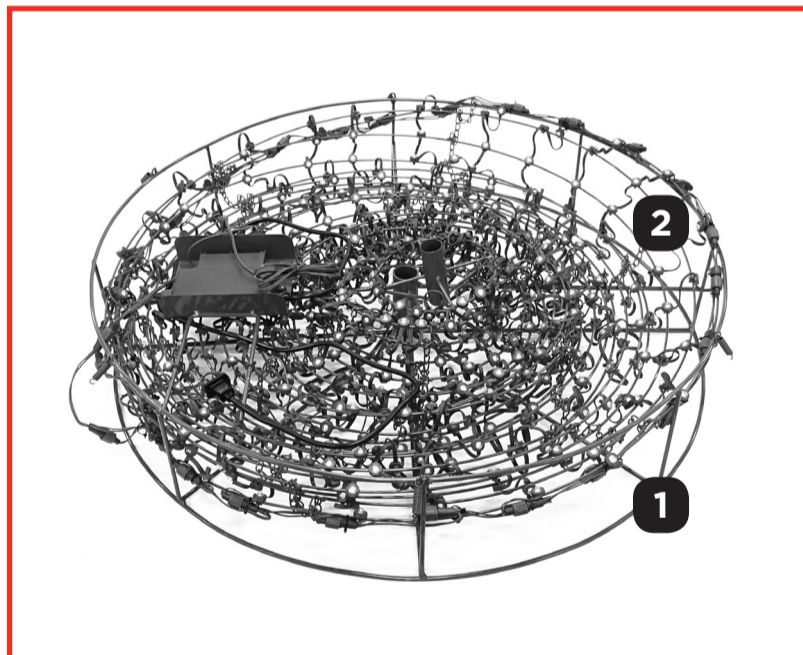


# CANVAS<sup>TM/MC</sup> 6

### Step 3

Requires 1, 4


Insert the bottom pole section 4 (tapered end up) into the tree base 1 as illustrated.

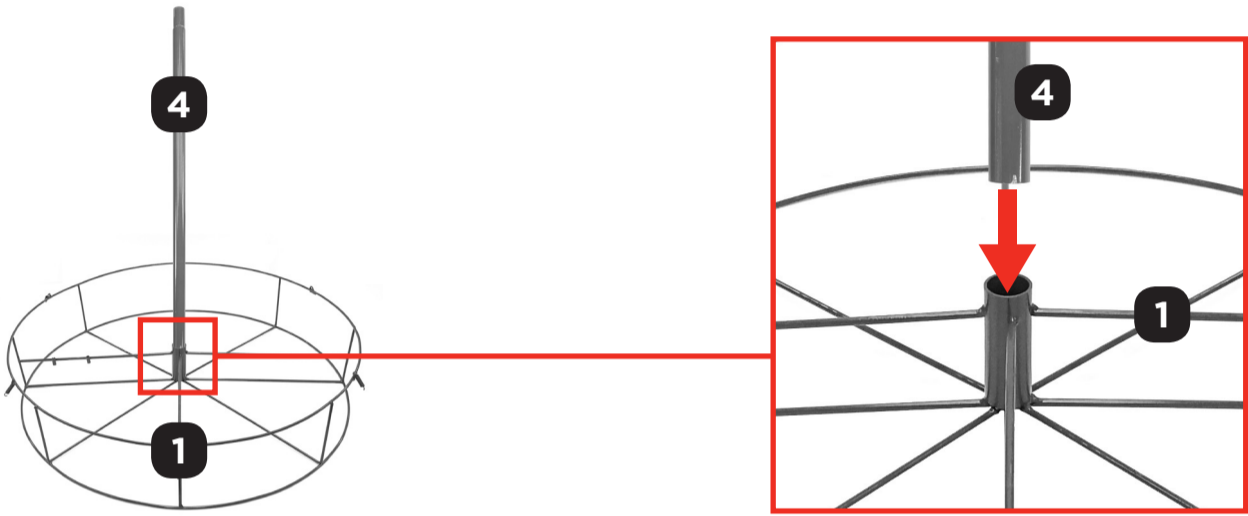

### Step 4

Requires 1, 2, 4

Align the top pole 4 (tapered end up) toward the center of the tree frame 2 next to the bottom pole 4

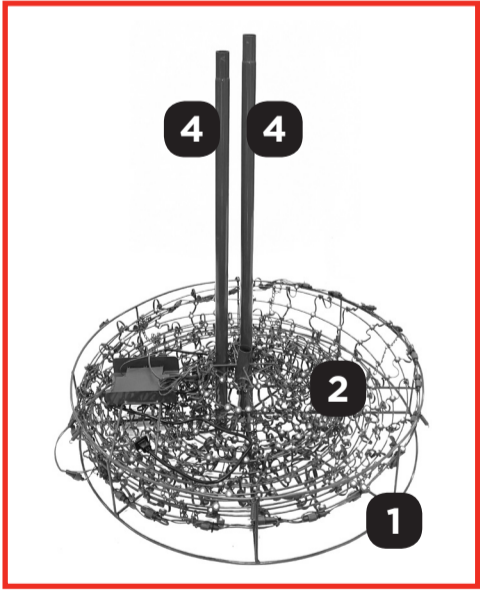



ASSEMBLY

7 PRODUCT NO. 000-0000-0 | MODEL NO. 151-3568

**Step 5**

Requires **2, 4**


Raise the tree frame **2** by lifting from the tree top point and place over the top pole **4**. Insert the top pole **4** into the pole cap located on the inside top of the tree frame **2**

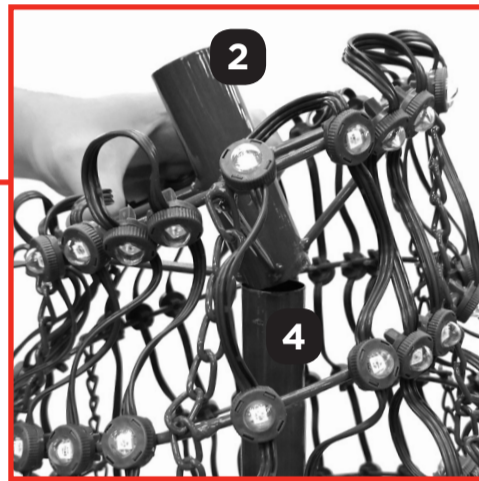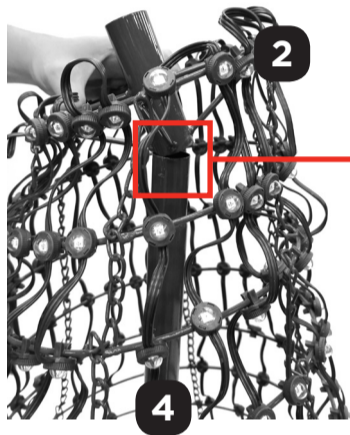

**Step 6**

Requires **1, 2, 4**

Proceed in lifting the tree frame **2** and place the top pole **4** on top of the bottom pole **4** which is already secured in the tree base **1**

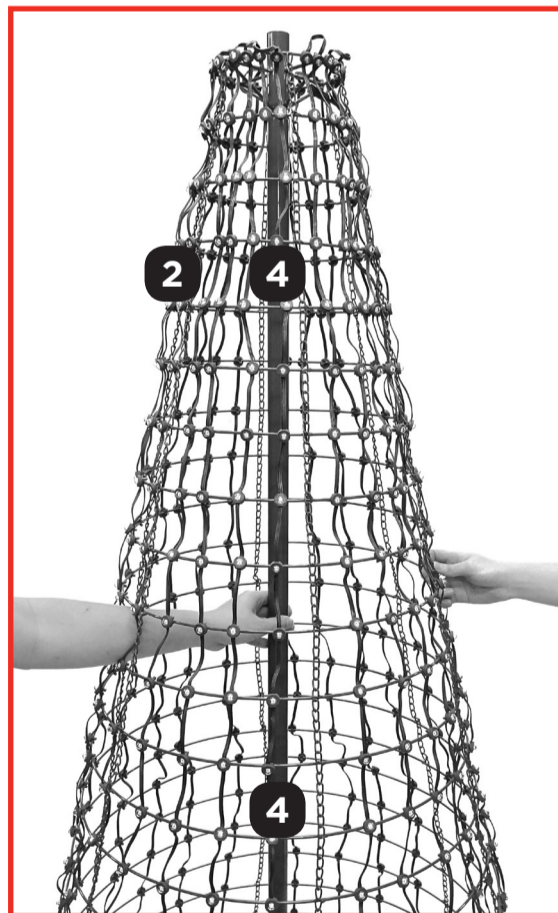




## Step 7

Requires **1, 2, 6**

This tree includes 5 pre-programmed songs control box **2**. The control box **2** enables the user to play with or without music by using the remote **6**

When the tree is turned OFF and then turned back on it will default to the light show with music automatically.

NOTE: Mounting pegs have been affixed to the 5 pre-programmed songs control box **2** in order to provide elevation; enabling accessibility to the control box and power box **2**, due to the potential of a snowfall. Proceed in mounting the 5 pre-programmed songs control box **2** onto the tree base **1** into the two eyelets provided.

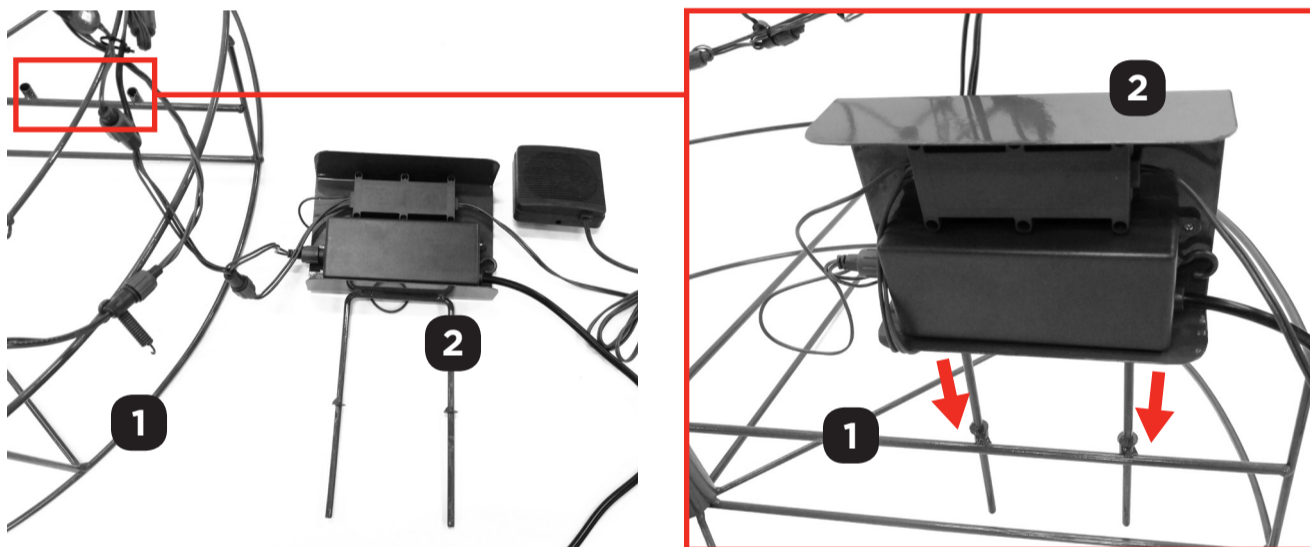


## Step 8

Requires **1, 2**

The tree base **1** has spring hooks located on the outer edge of the tree base **1**. Connect each spring hook to the corresponding chain on the tree frame **2**

Check to make sure that the chain links are straight and even prior to attaching to the base.




Straighten any twists in the links prior to attaching.

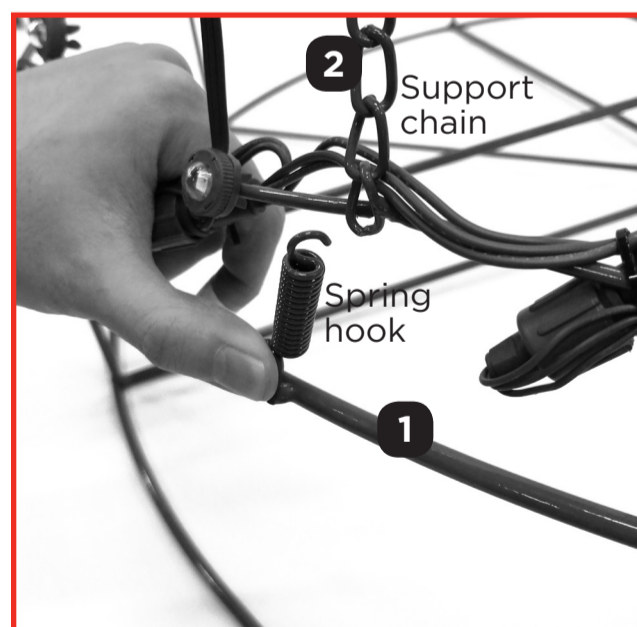



9 PRODUCT NO. 000-0000-0 | MODEL NO. 151-3568

To release a twist if chain link is already attached, unhook chain link from the base, apply pressure to the top and bottom of the frame at the section where the twist is located. Move link back into place and then release the frame. Re-hook chain link to the base.

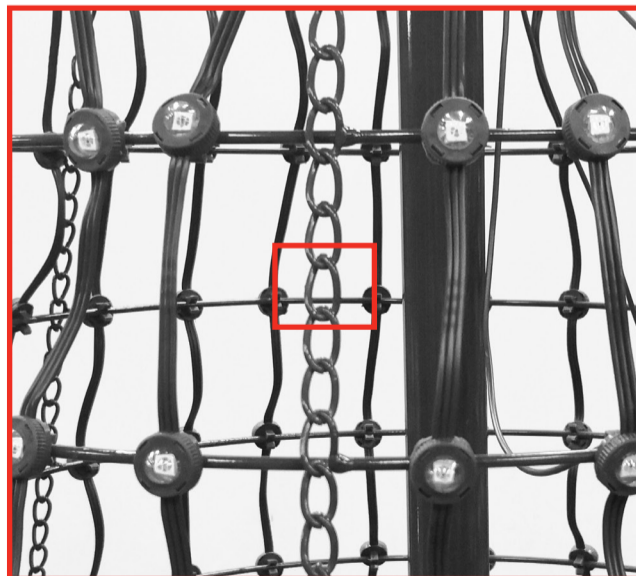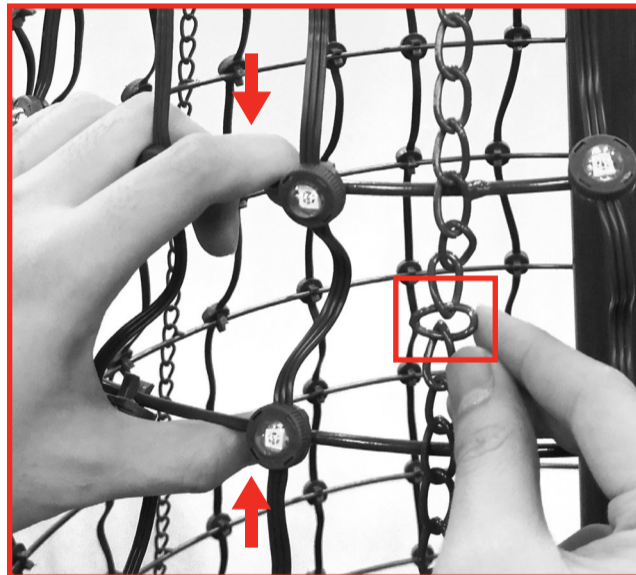
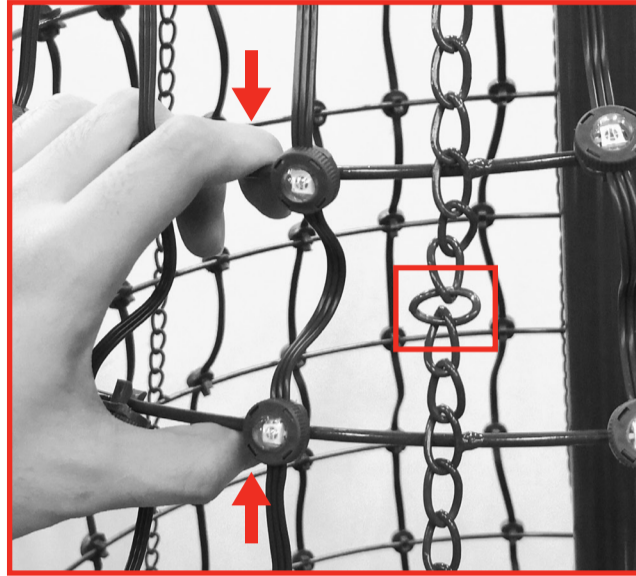


# CANVAS™/MC 10

## Step 9

Requires **2, 4**


Mounting the speaker box to the tree frame **2** as shown.

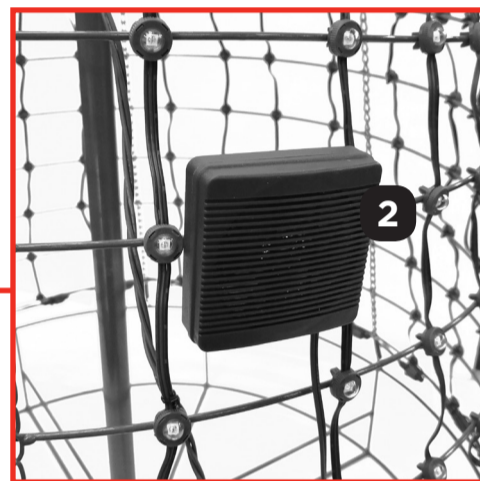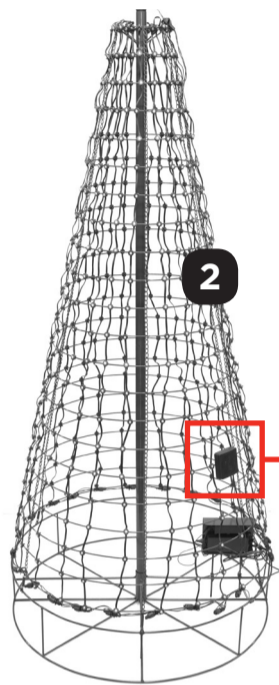

## Step 10

Requires **3**

Place the star **3** to the top of the tree.

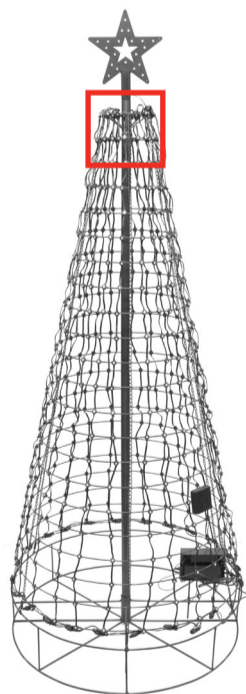


ASSEMBLY

**11** PRODUCT NO. 000-0000-0 | MODEL NO. 151-3568

**Step 11**

To illuminate, fully insert the plug into a working GFCI outlet or an outdoor rated extension cord.

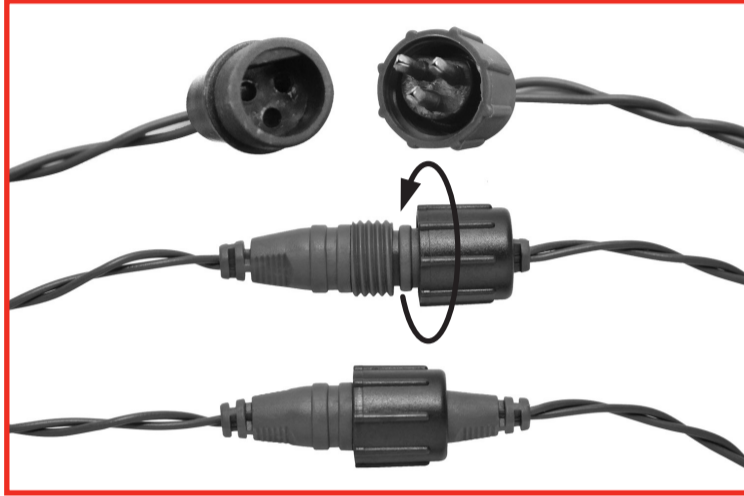

**Step 12**

Requires **1**, **5**

Push or gently hammer support stakes **5** into the ground securing the tree base **1**. Angle each stake 45 degrees toward the center of the tree.



# CANVAS™/MC 12

## REMOTE CONTROL OPERATION

Requires **6**

- Light shows can be played with or without music
- Includes handheld remote control

5 unique programs each synchronized to a song:

- Jingle Bells
- Silent Night
- First Noel
- We wish you a Merry Christmas
- Joy to the World

NOTE: timer feature: 6 hr on, 18 hr off time



ASSEMBLY

- Failure to light; unplug the product and check to see that the GFCI outlet is functioning.
- A section fails to light; unplug the product and check all light string connections. This product uses low voltage coaxial connections. To connect the light strings; align the male end to the female connectors as shown and connect them together. Slide the screw cover from the “male” connector over the “female” connector and tighten.
- If you continue to have difficulty with the light on your sculpture please contact our customer service department through one of the methods listed below. A trained representative will assist you in troubleshooting the issue you are currently encountering. If we determine that a light strand needs to be replaced one will be shipped to you.

## DISASSEMBLY & STORAGE

- Leave assembled if storage room permits or disassemble, placing all components in the original carton.
- Store in cool, dry location away from sunlight.

MAINTENANCE

**13 PRODUCT NO. 000-0000-0 | MODEL NO. 151-3568**

Dimensions (L x W x H)	000 x 000 x 000 cm
	000 x 000 x 000"
Product weight	00 kg
	000 lb

**FCC Warning**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**IC WARNING**

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:

(1) This device may not cause interference; and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This **CANVAS™** product carries a two (2) year warranty limited warranty. Santa's Best agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

**Customer Service Center hours:**

September 1st to November 11th - 7 days a week from 10:00 am to 6:00 pm CST

November 12th to December 20th - 7 days a week from 10:00 am to 10:00 pm CST

CLOSED THANKSGIVING DAY

December 21st to August 31st - Weekdays only from 10:00 am to 4:30 pm CST  
CLOSED US HOLIDAYS

Live Chat Hours:

September 1st to November 11th - 7 days a week from 10:00 am to 6:00 pm CST

November 12th to December 11th - LIVE CHAT CLOSED - Call our trained US-based Customer Service Center @ 1-888-831-6656

December 12th to August 31st - Weekdays only from 10:00 am to 4:30 pm CST

CLOSED US HOLIDAYS

Email us from the "Contact Us" link on our homepage. [www.santasbest.com](http://www.santasbest.com)