

GARDEN PIXEL LIGHTS

 
Please follow the instructions below in order to properly assemble and store your Garden Pixel Lights.

ASSEMBLY INSTRUCTIONS:



No tools required.

Retain carton for storage.

- Carefully remove all parts from the carton. Your Garden Pixel Lights should include the following (Fig 1):
 - 15 pcs staked Garden Pixel Lights
 - 1 control box with speaker
 - 1 remote control

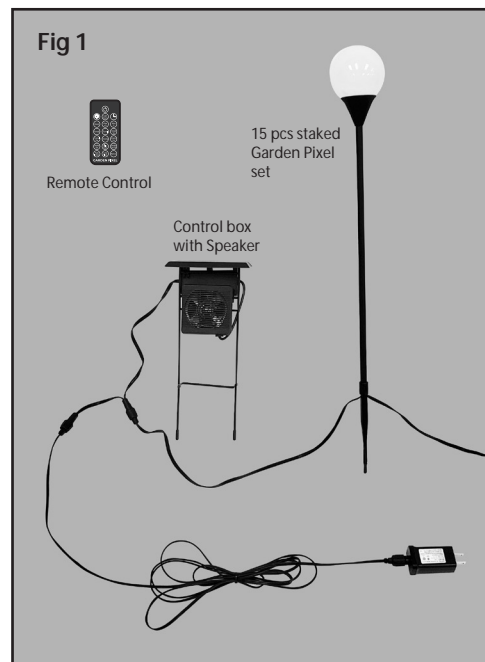

  - Remove the protective caps (Fig 2a & 2b).

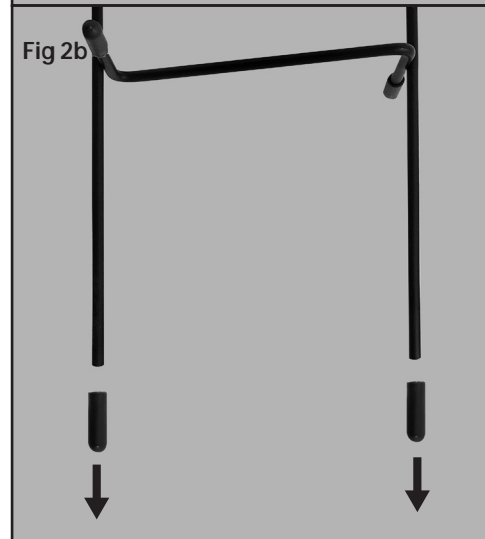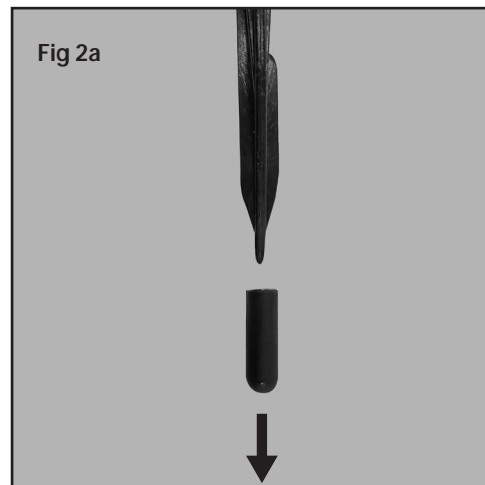


LED20

- In your desired location; begin to position your 15 pc staked Garden Pixel Lights; spacing accordingly to your preferred placement & design. Grasp each staked Garden Pixel Light near the lowest point possible and push downward into the ground (Fig 3a).

NOTE: Each Garden Pixel Light has 36" of spacing wire.



 - Now place your control box with speaker in a position in order to direct the sound to your desired location. Position and push downward into the ground (Fig 3b).

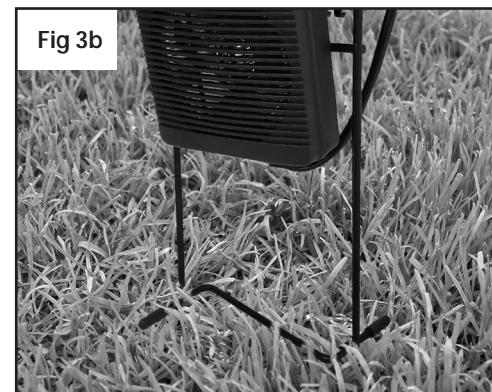

- To illuminate; insert the plug into a working GFCI outlet or an outdoor rated extension cord.



- You have completed the installation of the Garden Pixel Lights set (Fig 4).

REMOTE CONTROL OPERATION

Your 15 Garden Pixel Light's 131 Function capability is controlled solely by the use of the remote control provided (Fig 5).

A CR2025 Battery is included within the remote control. Before operating the remote; remove the thin plastic film that has been inserted - by slightly pulling downward away from the lower portion of the remote control.



Fig 5

SPECIAL FEATURES:

BRIGHTNESS CONTROL:

- Press the "Brightness" button 5 times; to achieve your preferred level of brightness - Select either a low, medium or high brightness level.

NOTE: Only the "Steady" function has this brightness control capability.

TIMER FEATURE:

- Press the "Timer" button; the lights will flash **GREEN** 3 times - Indicating that the 6 hour "On" / 18 hour "Off" timer has now been activated.

Note: The lights will automatically resume back to the "On" position - 24 hours from when it was initially activated.

- Press the "Timer" button again, the lights will flash **RED** 3 times - Indicating that the timer feature has now been deactivated.

LIGHT COUNT:

2 special pattern programs have been installed into your 15 pc Garden Pixel Light Set.

NOTE: An additional 2 special pattern programs are available upon connecting a second 15 pc Garden Pixel Set.

When you press the Light Count button, blue lights will flash once; indicating that the 1st special pattern has now been activated.

When you press the Light Count button again, blue lights will flash twice; indicating that the 2nd special pattern has now been activated.

Upon a second 15 pc Garden Pixel Light Set being added-on; a third and fourth special pattern program is now available.

NOTE: The maximum connect-ability of your 15 pc Garden Pixel Light Set is (2) sets. A total of 30 Garden Pixel Lights.

○○○○○○○○○○○○○○○○

Pattern 1
(1 x 15)

○○○○○○○○○○○○○○○○
○○○○○○○○○○○○○○○○

Pattern 2
(2 x 15)

○○○○○
○○○○○
○○○○○

Pattern 3
(3 x 5)

○○○○○
○○○○○
○○○○○
○○○○○
○○○○○

Pattern 4
(5 x 6)

BLUE TOOTH:

- In order for your Garden Pixel Lights to synchronise with your phone's music selections; first press the "Blue Tooth" button located on the remote control provided.

Located in the "Settings" section of your phone; select "Blue Tooth", select device "LED_UP" in order to connect. Once connected; make your music selection accordingly.

131 LIGHTING COMBINATIONS:

Color / Function	Steady	Wipe Out	Wipe In	Tornado	Funnel	Tornado Too	Funnel Too	Chasing	Chasing Too	Shooting Star	Shooting Star Too	Fade In/Out	Jump Flash	Rainbow
1. Red	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
2. Green	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
3. Blue	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
4. Purple	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
5. Yellow	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
6. Teal	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
7. Warm White	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
8. Multi 3 Color	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
9. Multi 7 Color	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
10. Multi 15 Color	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
Total no. of functions	10	10	10	10	10	10	10	10	10	10	10	10	10	1

 
TROUBLESHOOTING

- If the Garden Pixel Light does not illuminate press the on/off button on your remote control. If failure to light persists, the battery within the remote control, may need to be replaced. Insert a standard CR2025 battery.

NOTE: The 15 Garden Pixel Light's 131 function lighting capability is controlled solely by the use of the remote control provided.

NOTE: By reducing the distance from your Garden Pixel Lights; you may achieve better remote control reception.

- If an individual Garden Pixel Light fails to light; you are able to remove said light by unthreading the coaxial connections. You can then reconnect the Garden Pixel Lights that are still operating, again, by the male and female coaxial connections (Fig 6).

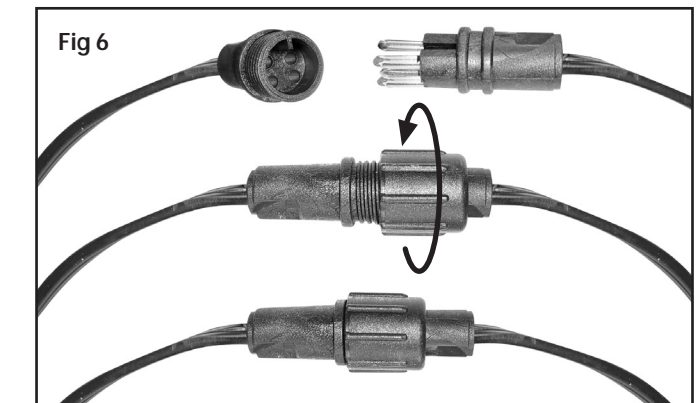

DISASSEMBLY & STORAGE

- Leave assembled if storage room permits or disassemble, placing all components in the original carton.
- Store in cool, dry location away from sunlight.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: ↓
 — Reorient or relocate the receiving antenna. ↓
 — Increase the separation between the equipment and receiver. ↓
 — Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. ↓
 — Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.