

WalkBox 1

Portable wireless speaker
Instruction Manual

 Bluetooth®   Dirac



raphi 
www.raphie.cn

Contents

Safety Warnings	1
Caution	1
Explanation of Graphical Symbols	1
WARNINGS	1
Battery Precautions	2
Unpacking	3
Product Overview	4
Front View	4
Bottom View	4
Connections	5
Connecting to AC power	5
AUX Connection	6
Charging from the USB Charging Port	6
General Operation	7
Power ON/OFF	7
Volume Adjusting	7
Bluetooth® Operation	7
NFC Operation	8
AUX Operation	8
Technical information	9
Maintenance	9
Troubleshooting	9



Safety Warnings



Caution:

To reduce the risk of electric shock, do not dismantle the product and do not expose the apparatus to rain or moisture. Nouser-serviceable parts inside. Refer servicing to qualified personnel only.

Explanation of Graphical Symbols:

-  The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.
-  The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNINGS:

1. Read Instructions — All the safety and operating instructions must be read before the product is operated.
2. Retain Instructions — The safety and operating instructions should be kept for future reference.
3. Heed warnings — All warnings on the product and in the operating instructions should be adhered to.
4. Follow instructions — All operating and use instructions should be followed.
5. Installation — Install in accordance with the manufacturer's instructions.
6. Power sources — This product should be operated only from the type of power source indicated by the marking adjacent to the power cord entry. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.
7. Grounding or polarization — the product is not required to be grounded. Ensure the plug is fully inserted into the wall outlet or extension cord receptacle to prevent blade or pin exposure. Some versions of the product are equipped with a power cord fitted with a polarized alternating line plug (a plug having one blade wide than the other). This plug will fit onto the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
When using an extension power-supply cord or a power-supply cord other than that supplied with the appliance, it should be fitted with the appropriate molded plugs and carry safety approval appropriate to the country of use.
8. Power cord protection — Power supply cords should be routed so that they are not likely to be walked on, kinked or pinched by items placed on or against them, paying particular attention to cords from plugs, receptacles and the point where they exit from the appliance.
9. Overloading — Do not overload wall outlets, extension cords or multiple sockets, as this can result in a risk of fire or electric shock.
10. Ventilation — The product must be properly ventilated. Do not place the product on a bed, sofa, or other similar surface. Do not cover the product with any items such as tablecloths, newspapers, etc.
11. Heat — The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products) including amplifiers that produce heat. No naked flame sources, such as lighted candles, should be placed on the apparatus.
12. Water and moisture — To reduce the risk of fire or electric shock, do not expose the product to rain, dripping, splashing or excessive moisture such as in a sauna or bathroom. Do not use this product near water — for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool and the like.
13. Object and Liquid Entry — Never push objects of any kind into this product through openings, as they may touch dangerous voltage points or short-circuit parts that could result in a fire or electric shock. Never spill liquid of any kind on the product. Do not place any object containing liquid on top of the product.
14. Cleaning — Unplug the product from the wall outlet before cleaning. The cabinet of the subwoofer may be cleaned by dusting with a dry cloth. If you wish to use an aerosol cleaning spray, do not spray directly on the cabinet; spray onto the cloth. Be careful not to damage the drive units.
15. Attachments — Do not use attachments not recommended by the product manufactures, as they may cause hazards.

 
16. Moving the product — A product and cart combination should be moved with care. Quick stops, excessive force and uneven surfaces may cause the product and cart combination to overturn.
17. Unused periods — The power cord of the appliance should be unplugged from the outlet during lightning storms or when the apparatus is left unused for a long period of time.
18. Servicing — Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
19. Please remove the power plug from the main power source or wall power source when not in use. When plugged in to a power source, the system is in standby mode, so the power is not entirely cut off.
20. Replacement parts — When replacement parts are required, ensure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
21. Mains fuses — For continued protection against fire hazard, use fuses only of the correct type and rating. The correct fuse specification for each voltage range is marked on the product.
22. Do not turn up the volume while listening to a section with very low level inputs or no audio signals. If you do, the speaker may be damaged when a peak level section is suddenly played.
23. The only means of completely disconnecting the product from the power supply is by removing the power cord from the wall outlet or the product. The wall outlet or the power cord entry to the product must remain freely accessible at all times while the product is in use.
24. Try to install the product near a wall socket or extension cord and shall be easily accessible.
25. The highest environmental temperature suitable for this product is 40

Battery Precautions:


1. The battery is only intended for use with the power supply or charger provided with the speaker. Refer to charging instructions in the speaker owner's guide. Do not continue charging the battery if it does not reach full charge within the 10 hours. Overcharging may cause the battery to become hot, rupture, or ignite. If you see any heat deformation or leakage, properly dispose of the battery.
2. Do not attempt to charge the battery in temperatures outside the range of 32°-104°F (0°-40°C).
3. Keep batteries out of the reach of children and pets.
4. If the battery begins to leak, do not allow the liquid to come in contact with your skin or eyes. If contact has been made, wash the affected area with plenty of water and seek medical advice immediately.
5. Do not expose the product or battery to excessive heat, including direct sunlight or fire and storage or use inside cars in hot weather, where it can be exposed to temperatures in excess of 140°F (60°C). Doing so may cause the battery and power supply to generate heat, rupture, or ignite. Using the product in this manner also may result in a loss of performance and a shortened life expectancy.
6. If the battery is damaged and ignites, do not use water to extinguish flames. Instead, use a functioning fire extinguisher.
7. Do not step on, throw, or drop batteries or the power supply or expose them to a strong shock. Do not pierce, crush, dent, or deform the batteries or power supply in any way. If either becomes deformed, properly dispose of it.
8. Do not short-circuit batteries. Avoid storing them around metal objects such as keys, pocket change, paper clips, and jewelry.
9. Do not dismantle, open, or shred the battery.
10. The battery is intended to be used only with the RAPHIE product and the power supply provided, or RAPHIE power supply or charger designed for use with this product.
11. This product is intended to be used only with the power supply provided, or RAPHIE power supply or charger designed for use with this product.
12. The cells in the batteries perform best when operating at normal room temperature, 70°F (20°C).
13. Replace the speaker battery only with a genuine replacement battery from RAPHIE or an authorized RAPHIE dealer. RAPHIE cannot warrant the safety and compatibility or assure the operability of batteries from other manufacturers for use in operating this product. DO NOT attempt to use the speaker battery to power other electronics. Doing so may result in permanent damage to your speaker and/or personal injury.
14. In case of not using for more than 72 hours, it is recommended to keep the battery protection switch in the "OFF" position, to save the battery power.
15. If the battery status indicator shows the first frame, please promptly to the speaker charged. Recommended charging time is 3 hours, the power status indicator blinks. When charging the battery, you can still use the speaker.
16. Never completely discharge the battery. Using the product in this manner also may result in a loss of performance and a shortened life expectancy.
17. Please observe all local regulations, the timely and proper disposal of used batteries. Do not incinerate. If you want to return the batteries for recycling, please contact RAPHIE or your RAPHIE dealer details, please refer to the contact information in the box, or visit RAPHIE website: WWW.RAPHIE.CN.

UnPacking

Open the packing,the following items are included:
(if any item appears to be damaged, do not attempt to use it. Contact your authorized dealer immediately for help.)

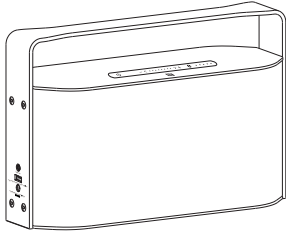

Main Unit

 


Owner's Guide



3.5mm to 3.5mm
Stereo Audio Cable



 
AC Power Supply Cable



AC Power Supply


Product Overview

 • Front View

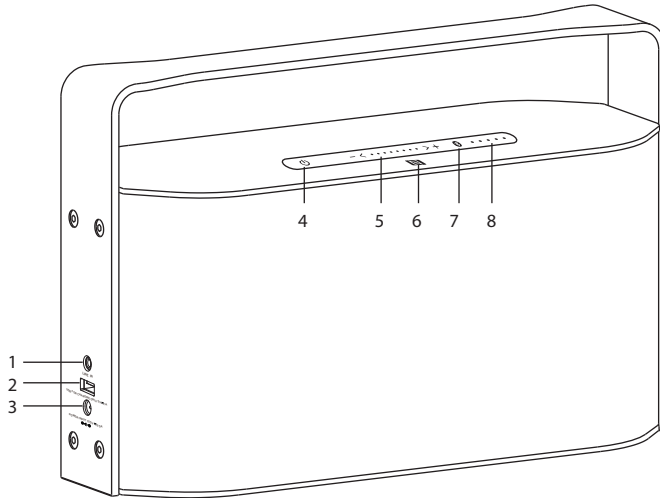

1. **LINE IN** Socket
Connects to an external audio device.
2. **USB FOR CHARGING ONLY 5V \equiv 1A**
Charging Port
For charging external devices only.
3. **POWER INPUT 13.5V \equiv 3.5A \oplus - \ominus**
Socket
4. Standby ϕ Button
Switch the unit between the On and Standby mode.
5. Volume +/- Buttons
Press + to increase the volume.
Press - to decrease the volume.
Slide from - to + to increase the volume.
Slide from + to - to decrease the volume.
6. **NFC** area
7. **Bluetooth** \mathcal{B} Indicator
8. Battery Status
Show the power status of the unit

 • Bottom View

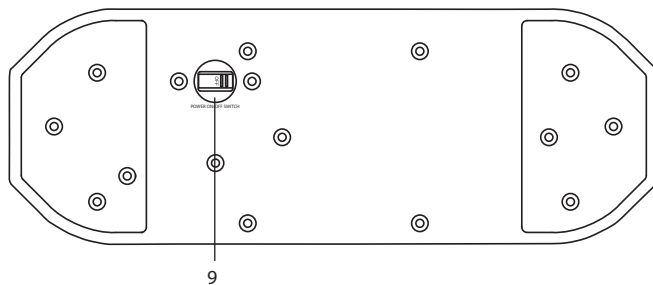


9. **POWER ON/OFF SWITCH**

Connections

Connecting to AC (Mains) Power

- This unit is designed to operate with an AC power supply or with the built-in battery.
- Connecting the unit to any other power source may cause damage to the unit. Connect the AC Power cable to the AC Power Supply, and then connect the other end of the AC Power Supply, to the **POWER INPUT 13.5V** $\overline{\text{---}}$ **3.5A** \ominus \oplus Socket of the unit. Plug the AC Power Supply into a live AC (mains) outlet. It starts battery charging and the unit is now ready to use.
- Charge the internal battery for 8 hours before first time use. Do not overcharge the unit. Disconnect the AC Power Supply from the AC (mains) outlet to stop charging.
- If the unit will not be used for more than 72 hours, slide the **POWER ON/OFF SWITCH** to **OFF** position to save battery power.
- To switch the unit off completely, slide the **POWER ON/OFF SWITCH** to **OFF** position and unplug the AC Power plug from the AC (mains) outlet.

 
To the AC (mains) outlet

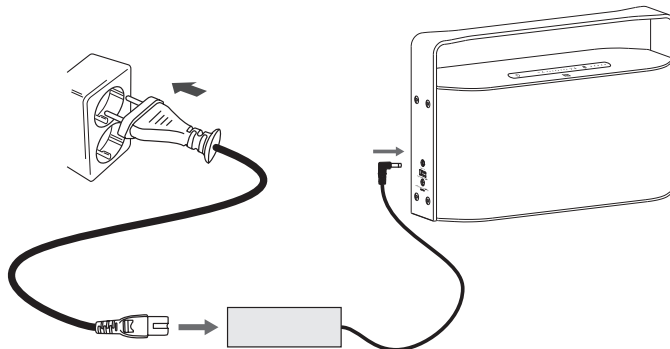


The surface of the unit may get hot if used at maximum volume for a prolonged period of time. Avoid body contact with the base of the unit whilst operating.

AUX Connection

 Use a 3.5mm to RCA stereo audio cable to connect the audio device's audio output sockets to the unit's **LINE IN** Socket.

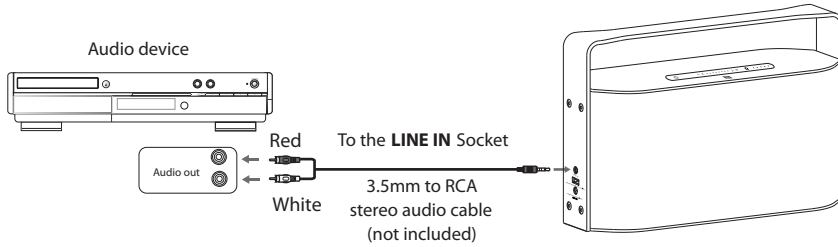

 
Use a 3.5mm to 3.5mm stereo audio cable to connect the mobile device's headphone socket to the unit's **LINE IN** socket.

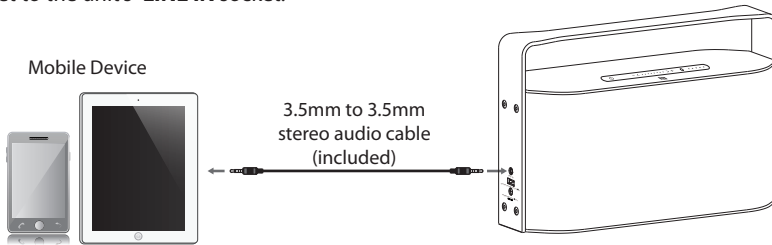

Charging from the USB Charging Port

The **USB FOR CHARGING ONLY 5V $\overline{\text{---}}$ 1A** Charging Port is designed only for charging mobile devices (e.g. MP3 player, mobile phone, etc). It supplies 5V DC at a charging current of up to 1000mA (1A).

 Use a USB cable (not included) to connect mobile device to the **USB FOR CHARGING ONLY 5V $\overline{\text{---}}$ 1A** Charging Port of the unit and the mobile device will start charging.

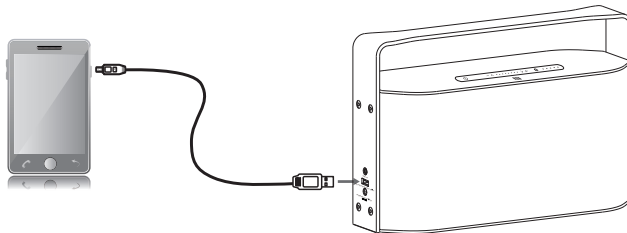

Only use the **USB FOR CHARGING ONLY 5V $\overline{\text{---}}$ 1A** Charging Port to charge small mobile devices. Never use this port for any other purpose.

General Operation

• Power ON/OFF

When you first connect the unit to the AC (mains) outlet, the unit will be in Standby mode.

- Press ϕ for about 3 seconds to switch on the unit. The ϕ button will light up.
- Press ϕ for about 3 seconds to switch the unit back to Standby mode. The ϕ button will turn off.
- To switch the unit off completely, slide the **POWER ON/OFF SWITCH** to **OFF** position and unplug the mains plug from the AC (mains) outlet.



- When the unit is idle for approximately 20 minutes, it will automatically switch to standby.
- Do not use near to fire, flame or heat source or under direct sunshine.

• Volume Adjusting

- Press + on the unit, or slide from – to + on the unit to increase the volume.
- Press – on the unit, or slide from + to – on the unit to decrease the volume.

Bluetooth® Operation

The unit has a Bluetooth function that can receive a signal within 8 metres.

Pairing the unit with a Bluetooth device to listen to music:

 
1. While in the **ON** mode, the unit is entering the bluetooth pairing mode.
2. Activate your Bluetooth device and select the search mode.
3. “WalkBox” will appear on your Bluetooth device list.
4. The **Bluetooth** ⌘ button will light up after successfully connected.
5. To disconnect from the Bluetooth connection, disable the function from your Bluetooth device.

- Your Bluetooth device may disconnect if the signal strength is weak, but it will re-enter pairing mode automatically.
- For better signal reception, remove any obstacles between the unit and the Bluetooth device.
- This unit can only be paired with one Bluetooth device at one time.
- Compatibility with all devices and media types is not guaranteed.
- Some mobile phones with the Bluetooth function may connect and disconnect as you make and end calls. This is not an indication of a problem with your unit.

NFC Operation

NFC is a one touching way of pairing your Bluetooth device via NFC to your speaker.

1. Activate NFC on your mobile device.
2. Place the NFC sensor area on the device close to the unit's NFC sensor area (it will work best within 10 mm) to connect your device to the unit.
3. Place the NFC sensor area on the device close to the unit's NFC sensor area again to disconnect Bluetooth connection.

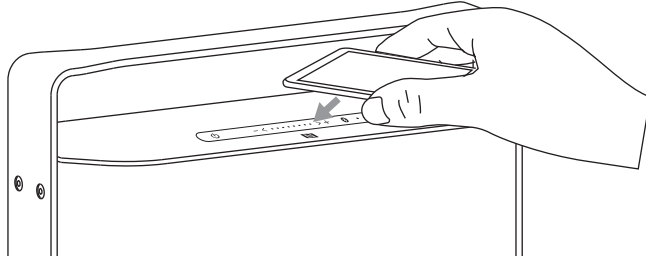

If you are trying to pair your speaker to a mobile device and your mobile device shows the message 'failed', then switch the unit off completely, wait 1 minute then switch the unit back on. Try pairing again using bluetooth or NFC modes.

AUX Operation

1. There is a **LINE IN** Socket located at the side of the unit.
2. Disconnect the unit from any bluetooth connection, the bluetooth indicator will turn off, the unit is then ready to connect to other analogue audio devices.
3. Connect the input to another audio device via an appropriate audio cable with the **LINE IN** socket.
4. Press **VOL +/-** to adjust the volume control for your desired sound output level.
5. In **AUX** mode, operate your audio device directly for playback features.

- When connecting the external audio device, refer to the owner's manual of the external device, as well as the manual.
- Examples of External Audio Device that can be connected to the unit are: Portable MP3 Players, Cassette Players, Mini Disc Players, DVD Players, etc.

Technical information

Model: **WalkBox 1**

Power Supply: **AC 100V–240V ~50/60 Hz**

Power Consumption: **56 W**

ECO Standby Power Consumption: **< 0.5 W**

Output Power: **5W x 2 +10W**

USB Power: **5V/1A**

Feature Connectivity: **USB FOR CHARGING ONLY 5V/1A** Charging Port x 1, **AUX LINE IN** Socket x 1

Dimension: **310 mm (W) x 117 mm (D) x 205 mm (H)**

Net Weight: **~4.2 kg**

Note: Features and specifications are subject to change without prior notice.

Maintenance

- To clean the unit, wipe the case with a slightly moist, lint-free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray aerosol at or near the unit.



Ensure the unit is fully unplugged from the mains socket before cleaning.

Troubleshooting

Problem	What to do
No power	<ol style="list-style-type: none">1. Ensure the power cable is connected securely at both ends.2. Make sure the POWER ON/OFF SWITCH is ON.3. Make sure that the ON mode is selected.
The unit does not respond when pressing any buttons	The unit may freeze up during use . Unplug the unit from the AC (mains) outlet, slide the POWER ON/OFF SWITCH to OFF . Then plug in and Switch on the unit again to reset the unit.
USB port not charging	Make sure the charging current of the mobile device is compatible with the unit's charging current(not above 1000mA or 1A). Otherwise, use the mobile device's own charging adapter for charging.
Can't find "WalkBox1" on my Bluetooth device	Ensure the Bluetooth function is activated on your Bluetooth device.

Other

“raphie” are trademarks or registered trademarks of raphie Corporation.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of raphie is prohibited. raphie operates a policy of continuous development. raphie reserves the right to make changes and improvements to any of the products described in this document without prior notice.

“Bluetooth” are owned by the Bluetooth SIG, Inc.

“Dirac” are owned by the Dirac Research AB.

“N” the N Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.

All other trademarks, service marks and trade names are the property of their respective owners. And any use of such marks by raphie is under license.

To the maximum extent permitted by applicable law, under no circumstances shall raphie or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. raphie reserves the right to revise this document or withdraw it at any time without prior notice.

For the most current product info, please refer to www.raphie.cn.

The availability of products may vary by region. For more info, contact your raphie dealer. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.