

KUMI Mi 1

English User Guide

1 Foreword

Thank you for choosing this mobile phone – you have made a wise choice, congratulations!

Our cellular phones are approved for GSM networks and meet stringent European standards. Your phone may be used internationally with various networks depending on your roaming arrangements with your service provider.

To use this phone you must subscribe to a GSM service from a provider. We have included many features in this device but their function depends on the features available with your subscribed wireless network.

Please contact your service provider for more information.

This User Manual is published by the manufacturer without any warranty. Revisions and improvements resulting from typographical errors, inaccuracy of current information, and improvements to the device or software may be done without any prior notification, but will be incorporated into newer editions. More information and help on your phone may be available at the manufacturer's website. The manufacturer reserves all rights to the contents herein.

Copyrights and trade marks mentioned in this document remain with their respective owner, Reproduction, transfer, storage, or distribution in whole or in part of copyrighted materials without prior written permission is expressly prohibited. We strongly recommend you carefully read and understand this manual before using your phone in order to keep it under best conditions for your effective usage and utmost satisfaction.

2 Safety

Never attempt to disassemble your phone. You alone are responsible for how you use your phone and any consequences of its use.

As a general rule, always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

Do not use your phone in damp areas (bathroom, swimming pool...). Protect it from liquids and other moisture.

Do not expose your phone to extreme temperatures lower than - 10°C and higher than + 55°C.

The physicochemical processes created by chargers impose temperature limits when charging the battery. Your phone automatically protects the batteries in extreme temperatures.

Do not leave your phone within the reach of small children (certain removable parts may be accidentally ingested).

3 Knowing the Keys

1. Left soft key/Right soft key: Implement the functions shown in the lower left /right hand corner.

2. Call/Answer (Green) Key

Press after dialing to connect.

Press if there is an incoming call to answer.

Press from standby to go to call records list.

3. End/Power key: Long press to switch phone on/off; Press to end, reject call; or to exit a menu.

4. OK key: Confirm or accept selection in menu access.

Press from standby to enter the selected shortcut function.

5. Navigator keys: Press the

up/down/left/right direction in menu to scroll, browse or in edit page to move cursor. In idle mode, press the up/down/left/right direction keys to select the shortcut function showed on the top of the screen, and then press the OK key to confirm.

6.1-9 alphanumeric keys: in standby mode you can long press the key to call corresponding number.

From Standby: Long press “2” to “9” key to dial speed dial numbers (as defined in the menu [Phonebook/Speed dial]).

Long press “0” start the SOS.

Press “+” to input “*” symbol for international access in the dialing interface.

7. # (Pound) Key: long press from standby to activate or deactivate silent and meeting mode.

4 Preparing Your Phone

4.1 Installing SIM Card

Before installing or removing the SIM card, make sure the phone is switched off, and remove the back cover and battery.

Note: Find SIM card's groove in the back of phone and slide it completely there. During installation, please make sure that the chip is facing downwards and pay attention to slot direction.

4.2 Installing Memory Card

This phone supports the memory card function. Please ensure the memory card is inserted correctly before using.

Please be careful when using the memory card, especially when inserting and removing it. Some memory cards must be formatted in PC before it is used for the first time.

Please regularly backup information in the cards on other equipment when you use cards like T-flash!

Improper use or other uncertain factors may cause the damage or loss to the content in the cards.

4.3 Installing Battery

1. Align the battery chip with the metallic salient point in battery jar, insert the battery and press top of the battery downwards as per the arrow direction until it is inserted into the battery jar.

2. Slide battery cover into back of the phone until it is locked.

4.4 Removing Battery

First switch off the phone and make it face downwards, push the battery cover to top of the phone, get its top and remove it.

Note: All settings or information stored in SIM card and the phone may be lost when the battery is removed.

Please remove the battery when the phone is switched off, because it may suffer from abnormality if you remove the battery when it is switched on.

4.5 Charging Battery

insert one end of the charger, i.e., the charging plug into attachment mode and the other end into electrical outlet. If the phone is switched on and the battery power icon stripes in right hand of the screen are rolling, then it is charging; if the stripes are full and have stopped rolling, it is fully charged. If the phone is switched off when charging, a large charging sign will display in screen. After charging is finished, just pull out the plug.

Note: 1. When the battery is low; the phone display will show a warning message. Recharge the battery as soon as possible to avoid inconvenience of the phone shutting

off during a call. Your phone will power off automatically if the voltage becomes too low. Prolong use of battery in low charge state will adversely affect the quality and life of the battery.

2. To ensure normal operations, please use approved chargers.

3. Do not remove the battery when charging.

4. Before you first use, please charge the battery for at least 4 hours. It will achieve maximum efficiency after several charge and discharge cycles.

keyor press the Green key to make a call when done to connect.

available under specific conditions):

4.6 Memory card

You can select the memory card with various capacities as required and read its content only when inserted into the phone.

5 Menu functions

5.1 Contacts

Stores and manages contacts that you often use.

There are two locations where you can store the names and numbers that you regularly use, in the SIM memory and in the phone memory. The volume of contacts can be saved in SIM card depends on SIM capacity. Enter the Phonebook list via the menu, including all records saved in the phone and the SIM card. There are different icons before different records indicating its memory location.

As you are browsing, you could enter a character, or number and jump to contacts whose names (as saved in the phonebook) starting with or most closely matching with the characters entered.

After searching for the name, press the **Call/Answer** key to dial the number of record, and press the **End/Power** key to end dialing. Press the **OK** key to view details of the record, press the **Left soft key** [Options] to access the menu options:

·Add new contact

This menu allows you to add the new record to the SIM card or the Phone.

First you need to select storage: To SIM or To Phone.

To SIM: Select this option, press the **OK** key or press the **Left Soft key** [Edit] to enter name input interface and input the corresponding name, then press the **OK** key or press the **Left soft key** [Options] to select 'Done' and confirm.

Press the Navigator key to switch to number column, enter the phone number directly and confirm, finally press the **OK** key or the **Left soft key** [OK] and confirm to save, adding records to the SIM card will be done.

5.2 Messages

5.2.1 Inbox

Received messages can be stored either in phone or in SIM memory, and are accessed here.

When you have received a message, the tones or vibration (as defined in the menu [User profiles/Profile options/Customize/Tone setup/Message tone]) to alert you and message mark will also be shown on the screen. Press the **Left soft key** [Read] or the **OK** key to read the new message, press the **Right soft key** [Back] to return, and you can access the inbox to read the new message.

If the message memory is full, the indication "Memory full" and the message icon will be shown on the screen and flashed. Before you

can receive new messages, delete some of your old messages in the inbox folder. If the capacity of new messages is beyond the capacity of the inbox, the information will be lost and incomplete.

In message list, press **the OK key** or **the Left soft key** [Options] to make the following menu setting: Reply, Call sender, Forward

5.2.2 Drafts

Incompletely composed and saved messages can be organized and accessed here.

5.2.3 Outbox

If message is sent fails, the sent SMS will be saved to Outbox.

In sent message list, press **the OK key** or **the left key** to read the selected message.

5.2.4 Sent messages

If message is sent successfully, the sent SMS will be saved to Outbox.

5.2.5 SMS settings

Set and save SMS service parameters of SIM card.

5.3 Call center

5.3.1 call logs

This phone can record all answered calls, dialed calls, missed calls and rejected calls as well as their call time. Only when related function is supported by network and phone is switched on and in network service area, it can record the answered and missed calls.

Call records may be accessed by pressing **the Call/Answer (Green) Key** from standby or accessing through the menu. There are different icons before different records.

- All calls

Display All calls logs.

- Dialed calls

Display list of all/dialed calls

- Missed calls

Display list of all/missed calls.

- Received calls

Display list of all/received calls.

5.3.2 Call settings

- **Advanced settings:** Set the call function in this item, such as blacklist, auto redial, call time reminder, auto call record, connect notice, answer mode and magic voice.

5.4 Settings

5.4.1 Relatives numbers

Set the appropriate number, in standby mode you can long press the key to call corresponding number

5.4.2 SOS

Set the help phone in Settings

5.4.3 Dual SIM settings

You can choose to set different SIM card

5.4.4 Phone settings

- Time and date

- Set time/date: use the left or right navigator key to move the cursor to position and use numeric key pad to enter value and the up or down navigator key to select between setting time and setting date fields, press the OK key when done to save.

- Set format: Set the format of the time and date.

- Update with time zone: choose this option, you can on or off update with time zone.

- Auto update time: Automatically update to local time according to SIM card

- **Language:** You can select the operation language of the phone.

- **Pref. input method:** Set phone's default input method every time it enters edit mode according to your usage habit.

- Display

- Wallpaper: Personalize your display according to your preference.

- Screen auto lock: Set screen lock time automatically

- **Shortcuts:** You can set shortcuts here

- **Dedicated keys:** You can set the shortcut keys of the navigation keys here

- **Flight mode:** Turn on and off flight mode

- **Misc. settings:** setting LCD backlight

5.4.5 Security settings

You can set up to the network data transmission and setting end key lock on/off

5.4.6 Connectivity

Set Bluetooth function.

You can transfer data, such as music to other device using Bluetooth. Search the device and receive/transfer data. The received data is automatically stored in the directory.

5.4.7 Reset

- Use this function to restore factory settings. The initial password is 1122

5.5 Thermometer

This function can measure the body temperature, align the measuring probe to the forehead and then click to measure.

Press OK key to view the record.

5.6 Multimedia

5.6.1 Image viewer

Entering this option, you can conveniently view photo list saved in album, press **the OK key** to view the selected photo, press **the Left soft key** [Options] to make the following operations: Delete, mark, rename picture information and other functions

5.6.2 Video player

This menu allows you to playback videos stored in your phone or memory card. Note: the phone supported to play the video with .avi/.mp4/.3gp format.

Enter video preview interface, press the OK key to play video, press up to play in full screen

5.6.3 Audio player

Play the audio files saved in the phone or memory card.

In playing interface, press OK keys to select play, press the * key and # key to adjust player volume.

Press the Left soft key [List] to enter playing list interface, press the Left soft key [Options] to access the operation menu of MP3 player.

5.6.4 Sound recorder

Use this function to record audio files. The phone support AMR. The recording file you stopped would be stored in file list automatically.

5.6.5 FM radio

FM radio is supported by the phone.

In FM radio interface, Press the Left/Right navigator keys to forward/backward the channel auto search

Use the * key and # key to adjust the volume. Press the OK soft key can pause the FM playback, Press the Left soft key [Options] to access the following menu: Channel list, Manual input, FM record, Auto search, Help, Open speaker and Settings.

Note: 1. When background play function is activate, you can listen the tuner in standby or other menu interface.

Note: 2. Quality of radio subscription is possibly influenced by environment like indoor or under shield. You can improve this situation as following: stand closer to the window, adjust the position of earphone line or adjust the channel manually.

5.7 Profiles

The mobile phone provides multiple user profiles, so that you can customize some settings to adapt to the specific events and environments.

Customize the user profiles according to your preference and then activate the user profiles. The user profiles fall into four scenarios: General, Silent, Meeting, Outdoor. In the standby mode long press # can switch

scenarios.

5.8 Tools

Calculator: The calculator can add, subtract, multiply and divide. To use the calculator, Press the up and down key to select +, -, ×, ÷ respectively.

Calendar: Select the calendar menu, and the screen will display the calendar of that month, with date of that day shown by a special color.

Alarm: You can activate one, multiple or all of them as needed. For each alarm clock, the ringing date and the ringing time can be set.

World clock: Set the city and time you want on the phone

Files manager: Manage your own files here

5.9 Internet service

You can use the function to view web pages and search for information on the web before you connecting to the internet. When you open Internet, your home page opens. The web address (URL) of the current page is displayed at the top of the window.

6 Input Methods

This phone provides diversified input modes for you to enter letter information when editing SMS and adding phonebook.

Use the # key to switch between different input methods and there is corresponding input method icon at the bottom of the screen.

6.1 ABC (abc) input Method

General operation methods of English input method:

1. Each key is used to input several characters. Fast and repeatedly press key until your required character appears.

2. When you need to input English punctuation and some special signs, press the [1] numeric key to call out special sign input

boxin English input status (include English capitalization).

3. Press the # key to switch input methods.

4. In majuscule or minuscule input status, once press the [0] key to input blank.

7 Caring for Battery

This phone uses a rechargeable battery as power source, when the charge is weak, recharge immediately to protect the battery life. It is best to drain the battery charge first.

When not using the charger, unplug it from the power source and the phone. Over charging will shorten the battery life. Not leave the charger connected to the unit or battery for more than a week.

Temperature affects battery charge capacity. Your battery may need to be warm up or cool down before charging. If the battery temperature is lower than 0°C and higher than +45°C, it will not recharge.

Use the battery as it is originally intended. Do not short circuit the battery by connecting the positive and negative terminals with a conductor.

Do not use a damaged battery.

The battery will not perform properly and its life will be shortened if exposed to extreme temperatures.

Do not place the battery in fire, follow local laws and ordinances in disposing used battery

8 Environment

Packaging

To facilitate the recycling of packaging materials, please obey the sorting rules instituted locally for this type of waste.

Batteries

Spent batteries must be deposited at the

designated collection points.

The product

The crossed-out waste bin mark affixed to the product means that it belongs to the family of electrical and electronic equipment.

To promote the recycling and recovery of waste electrical and electronic equipment (WEEE) and at the same time safeguard the environment, European regulations require you to obey the sorting rules instituted locally for this type of waste.

9 Technical Specifications

Note: Actual operating conditions depend on the local network environment, SIM, and user behavior.

Warning: Any consequence caused by misuse, abuse, or not following any and all of the above-written suggestions and instructions shall not hold the producer in any way responsible to any degree.

Announcement: The manufacturer reserves the right to change or upgrade specifications or software versions without prior or separate notice. Trade marks mentioned or used in this material belong to their respective owners.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR) information:

This Tablet PC meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Smartphone has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the phone kept 10mm from the body.

To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 10mm separation distance between the user's body and the back of the phone. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.