

**CRAIG**

## PORTABLE SKULL SPEAKER

### Owner's Manual


PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

**Model: CMA3765**


**FCC NOTICE:**  
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC STATEMENT:**  
1. This device complies with Part 15 of the FCC Rules  
Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) This device must accept any interference received, including interference that may cause undesired operation.  
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

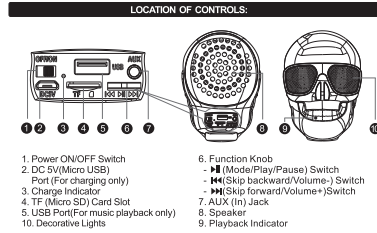

**POWER SOURCE:**  
The unit has a built-in Li-Ion rechargeable battery, charge it before first time use or when it is drained as follows:  
1. Connect the small plug from the supplied USB Connection Cable to the DC 5V (Micro USB) Port on the rear of unit.  
2. Connect the full size USB plug from the supplied USB Connection Cable to the USB Port on the Personal Computer or USB Charger (Computer and USB Charger not included).

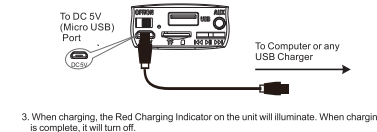

**NOTES:**  
1. When charging, you can also play and listening music at the same time.  
2. Your battery will last longer if you're following these simple guidelines for caring and storing:

A. Before first time use, recharge the unit approximately 5 hours until the unit is fully charged.  
B. Charge and store the unit within the temperature range of 5°C-35°C (40°F-95°F).  
C. Do not overcharge (longer than 24 hours). Excessive charging or running the unit completely flat will damage battery. Battery life will be extended if you keep the battery fully charged.  
D. Battery life naturally shortens slowly over time.  
E. The rechargeable battery incorporated in this product is not user replaceable.

**OPERATION:**

**General Operation:**  
1. Recharge the built-in Li-Ion battery as previously instructed.  
2. Slide the Power ON/OFF Switch to "ON" position to power on the unit. The Blue Indicator and Speaker Decorative Lights will illuminate.  
3. Press and hold the "Mode" Button to switch to desired playback mode. The unit will sound a prompt with your selection (see list below):

Playback Modes:	Voice Prompt:
BT (Bluetooth)	Bluetooth ready for connection
USB	USB
TF (Micro SD) Card	Memory Card
AUX (In)	Aux in

**Note:**  
If the AUX In plug, TF (Micro SD) Card and/or USB Device had NOT been inserted into the unit, the correspondence selection will not available.

4. During playback, slide the "Volume" Switch repeatedly to adjust volume level as desired.  
5. When finished listening, slide the Power ON/OFF Switch to "OFF" position to shut off the unit.

**BT Mode:**  
BT (Bluetooth) pairing:  
For first time use or re-pairing the unit to a new BT Device, pair as follows:  
1. Power on the unit and enter to BT mode as previously instructed. You will hear an audible prompt say "Bluetooth ready for connection" and the Blue Indicator on the front of unit will illuminate and blink.  
2. Power on the external BT Device and enter to BT search mode. Start pairing following the on screen instructions from the external BT Device. When paired, the unit will sound a prompt "Bluetooth connected" and the Blue Indicator will stop blinking.  
3. If pairing is complete you may now play music with your external BT Device.  
4. During playback:  
• Slide the "Volume" Switch repeatedly to adjust volume level  
• Press the "Mode" Button on the unit to pause, press again to resume normal playback.  
• Slide and hold the "Mode" Switch to skip tracks.  
5. When finished listening, slide the Power ON/OFF Switch to "OFF" position to shut off the unit.

**Notes:**  
• When the external BT Device searches for the unit, our model number "CMA3765-PDO" will appear on the display of external BT Device.  
• If while pairing you are asked for a code please try "0000" or "1234".

**Normal operation after pairing:**  
1. Power on the external BT Device and enter to BT playback mode.  
2. Power on the unit and enter to BT mode as previously instructed. You will hear an audible prompt say "Bluetooth ready for connection" and the Blue Indicator on the front of unit will illuminate and blink.  
3. Wait a few seconds until the unit is automatically paired to the external BT Device. The unit will sound a prompt "Bluetooth connected" and the Blue Indicator will stop blinking.  
4. After pairing is complete you may now play music with your external BT Device.

**USB:**  
To play the music in USB Device:  
1. In power off mode, connect the USB Device into the USB Port on the rear of unit as illustrated below:

2. Power on the unit and enter to USB mode as previously instructed:  
• You will hear an audible prompt say "USB".  
• Music in the USB Device will be played back automatically.

3. During playback:  
• Slide the "Volume" Switch repeatedly to adjust volume level.  
• Press the "Mode" Button on the unit to pause, press again to resume normal playback.  
• Slide and hold the "Mode" Switch to skip tracks.

4. When finished listening, slide the Power ON/OFF Switch to "OFF" position to shut off the unit.

**TF (Micro SD) Card:**  
To play the music in TF (Micro SD) Card:  
1. In power off mode, insert the TF (Micro SD) Card (not included) into the TF (Micro SD) Card Slot on the rear of unit with contacts facing down as illustrated below:

2. Power on the unit and enter to TF (Micro SD) Card mode as previously instructed:  
• You will hear an audible prompt say "Memory Card".  
• Music in the card will be played back automatically.

3. During playback:  
• Slide the "Volume" Switch repeatedly to adjust volume level  
• Press the "Mode" Button on the unit to pause, press again to resume normal playback.  
• Slide and hold the "Mode" Switch to skip tracks.

4. When finished listening, slide the Power ON/OFF Switch to "OFF" position to shut off the unit.

**Notes:**  
• Up to 16 GB TF (Micro SD) Card/USB Device supported.  
• When inserting the TF (Micro SD) Card/USB Device, make sure the direction you selected is correct. Never insert violently to avoid damaging the TF (Micro SD) Card/USB Device or the unit. If it doesn't work, please check if the direction is correct.  
• Before replacing TF (Micro SD) Card/USB Device, make sure the unit has been powered off.  
• You also need to download the desired music in MP3 format into the TF (Micro SD) Card/USB Device before insert into the unit.

**AUX (In):**  
Listen from an external Audio Player such as MP3 Player, Discman... etc.  
1. In power off mode, connect one end of the supplied Audio Connection Cable to the AUX Out/Line Out/Phone Jack on the external Audio Player.  
2. Connect the other end of the cable to the AUX (In) Jack on the unit as illustrated below:

3. Power on the unit and enter to AUX (In) mode as previously instructed. You will hear an audible prompt say "Aux in".  
4. Play the music on the connected Player as usual. (Make sure the volume level of the connected Audio Player is turned to high level.)

5. During playback:  
• Slide the "Volume" Switch repeatedly to adjust volume level.  
• Press the "Mode" Button on the unit to pause, press again to resume normal playback.  
6. When finished listening, slide the Power ON/OFF Switch to "OFF" position to shut off the unit.

**TROUBLE SHOOTING GUIDE:**

Check the following before requesting service:

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Can't power on	Built-in battery drained The unit in power off mode	Recharge the battery as page 1-2 Slide the Power ON/OFF Switch to "ON" position to power on the unit
No sound or sound weak	Volume of the unit was set to minimum position Volume level of paired/connected device is in low level	Increase the volume level by slide the "Volume" Switch repeatedly Raise the volume level of the paired/connected device
Sound distortion	Volume level of the paired/connected device too high	Reduce the volume level by slide the "Volume" Switch repeatedly Reduce the volume level of the paired/connected device
BT not functioning	The external BT device had NOT paired to the unit The external BT device too far from the unit	Pair the external BT device to the unit as page 2-3 Place the external BT device close to the unit

**GENERAL SPECIFICATIONS:**

Power Source:	Built-in DC 3.7 V, 1200 mAh (4.44 Wh) rechargeable Li-Ion Battery/recharge by DC 5 V through the DC-5V (Micro USB) Port
Impedance of Speakers:	5W/2Ω
Audio Power:	3W (RMS)
BT Version:	5.0
BT Operation Distance:	≤32 Feet in open area

**PACKAGE INCLUDES:**  
1 x Owner's Manual  
1 x USB Connection Cable (For Charging only)  
1 x Audio Connection Cable with 3.5 mm plugs

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE

**LIMITED WARRANTY**

Craig warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 90 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$7 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.  
1160 NW 163 Drive  
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.  
Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

To Obtain Service on your Product  
email: service@craigelectronics.com

Printed in China CMA3765\_WC\_E0FK1\_HOOS