

SIZE: 70x158mm

MAGNAVOX

Portable waterproof Speaker

MMA3639, A023

®

OWNER'S MANUAL

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

1

FCC NOTICE:


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING:

To assure continued operation, follow the attached installation instructions and use only shield cables when connecting to other devices. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

LOCATION OF CONTROLS:

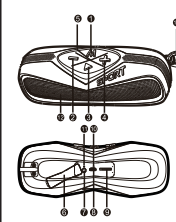

- 1. M Button
2. - Button
3. ► Button
4. + Button
5. White Indicator
6. Rubber Cover (This cover is for water and dusts Ingress Protection; always make sure it is completely closed)
7. LINE IN Jack
8. Micro USB Port (For charge only)
9. Micro SD Card Slot
10. Red Charging Indicator
11. Reset Button (Inside the hole)
12. Built-in Microphone
13. Metallic Buckle

POWER SOURCE:

The unit has a built in Li-ion rechargeable battery, recharge it before use or when the battery is drained as follows:

- 1. Open the Rubber Cover on the rear of unit.
2. Connect the Micro USB Plug from the supplied USB Connection Cable to the Micro USB Port.
3. Connect the full sized USB Plug from the supplied USB Connection Cable to the USB Port on Computer or USB Charger (Not included).Charging will automatically start.
• During charging, the Red Charging Indicator on the rear of unit will illuminate. When finished, it will turn off.
• During charging, you can also play and listen music at the same time.



To Computer or any USB Charger

NOTES:

The Rubber cover is for water and dusts Ingress Protection; always make sure it is completely closed.

IMPORTANT:

Your battery will last longer if you're following these simple guidelines for charging and storing.
A. Before first time use, charge it approximately 4 hours until the unit is fully charged.
B. Recharge and store the unit within the temperature range of 5°C-35°(40°F-95°F).

2

- C. Do not charge longer than 24 hours. Excessive charging or running the unit until battery fully drains will damage battery. Battery life will be extended if you keep the battery fully charged.
D. Battery life naturally shortens slowly over time.
E. The rechargeable battery incorporated in this product is not user replaceable.

OPERATION:

BT (Bluetooth) pairing:

First time use or re-pairing the unit to a new BT Device, pair as follows:

- 1. Power on the unit by pressing and holding the M Button on the top of the unit approximately 1 second until the White Indicator on the top of unit is illuminate and blink. The unit will enter to BT (Bluetooth) mode automatically. (If Micro SD Card and/ or Audio Connection Cable was inserted into the unit. Unplug them from unit before power on or press the M Button repeatedly to switch to BT mode.)
2. Power on the external BT Device and enter to BT searching mode. Start pairing following the on screen instructions from the external BT Device. After paired, the unit will sound a prompt tone and the White Indicator will stop blinking.
3. If pairing is complete you may now play music and answer calls with your external BT Device.
4. During playback:
• Press the ► Button on the unit to pause, press again to resume normalplayback.
• Press and holding the + or - Buttons to adjust volume level as desired.
• Press and release the + or - Buttons repeatedly to skip tracks.
• Press the M Button repeatedly to switch to other playback mode.
5. If the unit is paired to a Cell Phone and a call is incoming during an active music session, press the ► Button to pause the music playback. Then speak to the built- in microphone to answer the call. When your call is complete, press the ► Button to disconnect or end the call and resume to music playback.
6. When finished listening, press and hold the M Button to shut off the unit.

3

Notes:

- When the external BT Device searched the unit, our model number "MMA3639" will appear on the display of external BT Device.
• If while pairing you are asked for a code please try "0000" or "1234".

Normal operation after pairing:

- 1. Power on the unit by pressing and holding the M Button on the top of the unit approximately 1 second until the White Indicator on the front of unit is illuminate and blink. The unit will enter to BT (Bluetooth) mode automatically. (If Micro SD Card and/ or Audio Connection Cable was inserted into the unit, press the M Button repeatedly to switch to BT mode.)
2. Wait a few seconds until the unit is automatically paired to the external BT Device
3. After pairing is complete, the unit will sound a prompt tone and the White Indicator will stop blinking. You may now play music and answer calls with your external BT Device.

LINE IN:

To listen from an external Audio Player such as a MP3 Player, Discman ...etc.

- 1. Open the Rubber Cover on the rear of unit.
2. Connect one end of the supplied Audio Connection Cable to the AUX Out/Line Out/Phone Jack on the external Audio Player.
3. In power on mode, connect the other end of the cable to the LINE IN Jack as the illustrated below. The unit will turn to LINE IN mode automatically.

To AUX Out/Line Out/ Phone Jack on the external Audio Player

 


- 4. Play the music on the connected Player as usual. (Make sure the volume level of the connected Audio Player is turned to high level.)
5. During playback:
• Press the ► Button to mute the sound, press again to turn the sound back.
• Press and holding the + or - Buttons to adjust volume level as desired.
• Press the M Button repeatedly to switch to other playback mode.
6. When finished listening, press and hold the M Button to shut off the unit.

4

Micro SD Card:

- 1. Open the Rubber Cover on the rear of unit.
2. Insert the Micro SD Card into the Micro SD Card Slot with contact finger face to up as the illustrated follows:



- 3. Power on the unit by pressing and holding the M Button on the top of the unit approximately 1 second. The unit will plays the song/music on the Micro SD Card automatically.
4. During playback:
• Press the ► Button to mute the sound, press again to turn the sound back.
• Press and holding the + or - Buttons to adjust volume level as desired.
• Press and release the + or - Buttons repeatedly to skip tracks.
• Press the M Button repeatedly to switch to other playback mode.
5. When finished listening, press and hold the M Button to shut off the unit.

Notes:

- Up to 16 GB Micro SD Card the unit support to play.
• Before replacing Micro SD Card, make sure the unit has been powered off.
• When inserting the Micro SD Card, make sure the direction you selected is correct. Never insert violently to avoid damaging the Micro SD Card or the unit.
• If it doesn't work, please check if the direction is correct.
• You also need to download the desired music in MP3 format into the Micro SD Card before insert into the unit.

RESET:

If the unit is halt or abnormal operation, press the Reset Button by a small screw driver (not included) to shut it off. Press and holding the M Button approximate 1 second to power on it again.

5

TROUBLESHOOTING:

Check the following before requesting service:

Table with 3 columns: SYMPTOM, POSSIBLE CAUSE, POSSIBLE SOLUTION. Rows include: Can't power on, No sound or sound weak, Sound distortion, BT not functioning.

SPECIFICATIONS:

Table with 2 columns: Specification Name, Value. Rows include: Power Source, Dusts/Water Ingress Protection Level, Impedance of Speakers, Audio Power, BT Version, BT Operation Distance.

PACKAGE INCLUDES:

- 1 x User's Manual
1 x USB Connection Cable (For charge only)
1 x Audio Connection Cables with 3.5mm Plugs

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE.

6

LIMITED WARRANTY

Craig Electronics warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$12 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit cannot be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

This product has been manufactured by and is sold under the responsibility of Craig Electronics Inc. and Craig Electronics Inc is the warrantor in relation to this product. MAGNAVOX and SMART. VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

To Obtain Service on your Product
email:service@craigelectronics.com

Printed in China MMA3639_WC_E0FK1_B0WU