

SIZE: 115x165mm

Portable Speaker  
A026  
User manual

IMPORTANT SAFETY INSTRUCTIONS

CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN. CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

FCC Statement: This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: --Reorient or relocate the receiving antenna. --Increase the separation between the equipment and receiver. --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. --Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. FCC Radiation Exposure Statement: This modular complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

- 1. Read these instructions: All the safety and operating instructions should be read before the product is operated.
2. Keep these instructions: The safety and operating instructions should be retained for future reference.
3. Heed all warning: All warnings on the product and in the operating instructions should be adhered to.
4. Follow all instructions: All operating and use instructions should be followed.
5. Do not use this apparatus near water: Do not use the product near water and moisture. For example, near a bathtub, washbowl, kitchen sink and laundry tub, in a wet basement, or near a swimming pool.
6. Clean only with dry cloth: Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or hear source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
8. Do not install near any hear sources such as radiators, hear registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.

12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, or has been dropped.

 
15. Power Source: The product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.

16. Power lines: An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

17. Overloading: Do not overload wall outlets and extension cords as this can result in a risk or fire or electric shock.


18. Object and liquid entry: Never push objects of any kind into the product through as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

19. Outdoor antenna grounding: If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electrical Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna discharge product, connection to grounding electrodes and requirements for the grounding electrodes.

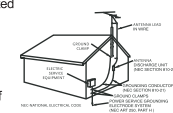

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of uninsulated 'dangerous voltage' within the product's enclosure, that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.

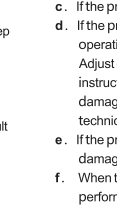


- 1. LED Indicator
2. + Button
3. Built-in Microphone
4. - Button
5. Power ON/OFF Button
6. Micro USB Port (For charge only)
7. AUX IN Jack
8. RUBBER COVER (This cover is for water and dusts Ingress Protection, always make sure it is completely closed)

20. Service: Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
21. Replacement parts: When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer of those that have the same characteristics as the original part. Unauthorized substitutions may result in fire or electric shock or other hazards.
22. Safety check: Upon completion of any service or repairs to this product ask the service technician to perform safety checks to determine that the product is in proper operation condition.
23. Wall or ceiling mounting: The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
24. Damage requiring service: Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
a. When the power-supply cord or plug is damaged.
b. If liquid has been spilled or objects have fallen into the product.
c. If the product has been exposed to rain or water.
d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will require extensive work by a qualified technician to restore the product to its normal operation.
e. If the product has been dropped or the cabinet has been damaged.
f. When the product exhibits a distinct change in performance--this indicates a need for service.

25. Note to CATV system installer: This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding, and in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.
Note: Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way such as the following: the power-supply cord or plug has been damaged, liquid has been spilled into the unit, the unit has been exposed to rain or moisture, the unit has been dropped or the unit does not operate normally.

POWER SOURCE:

 
- The unit has a built in Li-ion rechargeable battery, recharge it before use or when it is drained as follows:
1. Open the Rubber Cover on the top unit. (This cover is for water and dusts Ingress Protection, always make sure it is completely close.)
2. Connect the Micro USB Plug from the supplied USB Connection Cable to the Micro USB Port.
3. Connect the full sized USB Plug from the supplied USB Connection Cable to the USB Port on the supplied USB Charger to start charging.
• During charging, the Red Indicator on the front of unit will illuminate. When finished, it will turn off.
• This AC/USB Adaptor is intended to be correctly orientated in a vertical or floor mount position.
• To save energy, unplug the AC/USB Adaptor from the wall outlet if you will not use it for an extended period of time.
• During charging, you can also play and listen music at the same time.

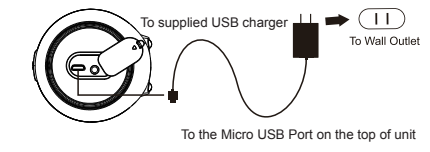

Notes:

- Your battery will last longer if you're following these simple guidelines for charging and storing.
A. Before first time use, charge it approximately 4 hours until the unit is fully charged.
B. Recharge and store the unit within the temperature range of 5°C-35°C (40°F-95°F).
C. Do not charge longer than 24 hours. Excessive charging or running the unit until battery fully drains will damage battery. Battery life will be extended if you keep the battery fully charged.
D. Battery life naturally shortens slowly over time.
E. The rechargeable battery incorporated in this product is not user replaceable.

 LOCATION OF CONTROLS:

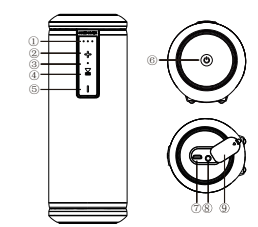

- 1. LED Indicator
2. + Button
3. Built-in Microphone
4. - Button
5. Power ON/OFF Button
6. Micro USB Port (For charge only)
7. AUX IN Jack
8. RUBBER COVER (This cover is for water and dusts Ingress Protection, always make sure it is completely closed)

OPERATION:

- BT (Bluetooth) pairing: First time use or re-pairing the unit to a new BT Device, pair as follows:
1. Power on the unit by pressing and holding the ⏻ Button on the bottom of the unit approximately 3 seconds. The unit will enter to BT (Bluetooth) mode automatically. The Blue Indicator on the front of unit will illuminate and blink.
2. Power on the external BT Device and enter to BT searching mode. Start pairing following the on screen instructions from the external BT Device. After paired, the unit will sound a prompt tone and the Blue Indicator will stop blinking.
3. If pairing is complete you may now play music and answer calls with your external BT Device.
4. During playback:
• Press the ⏸ Button on the unit to pause, press again to resume normal playback.
• Press and holding the + or - Buttons to adjust volume level as desired.
• Press and release the + or - Buttons repeatedly to skip tracks.
5. If the unit is paired to a Cell Phone and a call is incoming during an active music session, press the 📞 Button to pause the music playback then speak to the built-in microphone to answer the call. When your call is complete, press the 📞 Button to disconnect or end the call and resume to music playback.
6. When finished listening, press and hold the ⏻ Button to shut off the unit.

Notes:

 
- When the external BT Device searched the unit, our model number "MMA3628" will appear on the display of external BT Device.
• If while pairing you are asked for a code please try "0000" or "1234".

Normal operation after pairing:

- 1. Power on the unit by pressing and holding the ⏻ Button on the bottom of the unit approximately 3 seconds. The unit will enter to BT (Bluetooth) mode automatically. The Blue Indicator on the front of unit will illuminate and blink.
2. Wait a few seconds until the unit is automatically paired to the external BT Device. (The Blue Indicator will stop blinking).
3. After pairing is complete you may now play music and answer calls with your external BT Device.

AUX (in):

- To listen from an external Audio Player such as a MP3 Player, Discman ...etc.
1. Open the Rubber Cover on the top of unit. (This cover is for water and dusts Ingress Protection, always make sure it is completely closed after open).
2. Connect one end of the supplied Audio Connection Cable to the AUX Out/Line Out/Phone Jack on the external Audio Player.
3. In power on mode, connect the other end of the cable to the AUX (in) Jack as the figure below. The unit will turn to AUX IN mode automatically. The Green AUX (in) Indicator will illuminate.

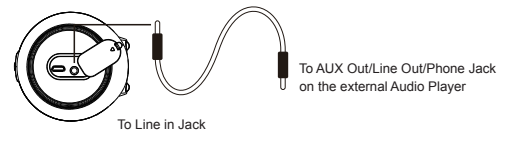

- 4. Play the music on the connected Player as usual. (Make sure the volume level of the connected Audio Player is turned to high level.)
5. During playback:
• Press the 📞 Button to mute the sound, press again to turn the sound back.
• Press and holding the + or - Buttons to adjust volume level as desired.
6. When no longer in use, press and hold the ⏻ Button to shut off the unit.

Note: If the Audio Connection Cable was plugged into the AUX (in) Jack, the Bluetooth function will auto cut. Unplug the Cable from the AUX (in) Jack before use Bluetooth function.

TROUBLESHOOTING:

Table with 3 columns: Symptom, Cause, and Solution. Rows include: Can't power on (Built in battery drained), No sound or sound weak (Volume of unit was set to minimum position, Volume level of paired/connected device is in low level), Sound distortion (Volume level too high, Volume level of the connected/paired device too high), BT not functioning (The external BT Device had NOT paired to the unit, The external BT device too far from the unit).

GENERAL SPECIFICATION:

Table with 2 columns: Specification and Value. Rows include: Power Source (Built-in DC 3.7V, 2000 mAh(7.4Wh) Li-ion rechargeable battery; Recharge by DC 5V 1A through Micro USB Port), BT Version (4.1), BT Effective range (Up to 32 feet in open area), Audio Power (5 Watts Per channel (Total 10 Watts RMS)), Impedance of speaker (2 x 6 W, 4 ohm).

ACCESSORIES:

- 1 x User's Manual
1 x USB Connection Cable (For charge only)
1 x Audio Connection Cables with 3.5mm Plugs
1 x AC/USB Adapter (Input: AC 100-240V~; 50/60Hz; 0.2A Max; Output: DC 5V; 1000mA)

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE.