

# MAGNAVOX

## PORTABLE SPEAKER

with Color Changing RGB Lights and Bluetooth® Wireless Technology


### OWNER'S MANUAL

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

#### MODEL: MMA3967

- of unit will illuminate and blink.
  - Wait a few seconds until the unit is automatically paired to the external BT Device. The unit will sound a prompt "Bluetooth connected" and the Blue Indicator will stop flashing.
  - After pairing is complete, you may now play music with your external BT Device.
- FM Radio:**
- Power on the unit and enter to Radio mode as previously instructed. You will hear an audible prompt say "Radio".
  - Press and hold the **+** or **-** buttons repeatedly to automatically search and store all available FM radio stations by press the **MEMO** Button. The unit will automatically search and store all available FM radio stations. During Playback, press and hold the **+** or **-** Buttons repeatedly to select and play the desired stored radio station.
  - Press and release the **+** or **-** Buttons to adjust skip tracks.
  - When finished listening, press and hold the **BT** Button approximately 3 second to shut off the unit.
- IN (Aux) Line In:**
- To listen from an external Audio Player such as MP3 Player, Discman, etc.
- In power of mode, connect one end of supplied Audio Cable to the AUX (Aux) Out/Line Out/Phone Jack on the external Audio Player.
  - Open the Rubber Cover on the back of the unit.
  - Connect the other end to the IN (Aux) Line In Jack on the back of unit as illustrated below.

- Power on the unit and enter to AUX mode as previously instructed. You will hear an audible prompt say "Line In".
- Play the music on the connected Player as usual. (Make sure the volume level of the connected Audio Player is turned to high level.)
- Press and hold the **+** or **-** Buttons to make the sound, press again to return to normal playback.

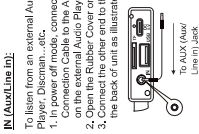

**FCC NOTICE:** This device has been tested and found to comply with the limits for Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This device does not emit and cannot radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no interference to radio communications. If you are experiencing interference to radio or television reception, which can be caused by this equipment, you are encouraged to try the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Plug the equipment into a circuit on a different branch of the main power line.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC STATEMENT**

This device complies with Part 15 of the FCC Rules. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FCC WARNING:**

To assure continued operation, follow the attached instructions when connecting to other devices. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FCC STATEMENT:**

This device complies with Part 15 of the FCC Rules. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- LOCATION OF CONTROLS**
- Button
  - Button
  - Button
  - Button
  - IN (Aux) Line in Jack
  - TF (Micro SD) Card Slot
  - TF (Micro SD) Card Slot
  - Indicators
  - TF (Micro SD) Card Slot
  - TF (Micro SD) Card Slot
  - TF (Micro SD) Card Slot

**POWER SOURCE**

The unit has a built-in Li-Ion rechargeable battery, charge it before first time use or when it is drained as follows:

- Open the Rubber Cover on the back of unit.
- Insert the supplied Rechargeable Battery into the Battery Compartment on the back of the unit.
- Connect the full size USB Plug from the supplied USB Connection Cable to the USB Port on the Personal Computer and the USB Charger (Computer and USB Charger not included).
- When charging, the Red Charging Indicator on the back of unit will illuminate.
- When fully charged, the Red Charging Indicator will turn off.



- Notes:**
- When charging, you can also play and listen to music at the same time.
  - Your battery will last longer if you are following these instructions.
  - Before first time use, recharge the battery for approximately 3 hours until the unit is fully charged.
  - Charge and store the unit within the temperature range of 0°C - 35°C (32°F - 95°F).
  - Do not charge the unit for more than 24 hours. Excessive charging or running the unit fully charged completely flat will damage battery. Battery life will be extended if you use the unit within the recommended temperature range.

keep the battery fully charged.

D. Battery life naturally shortens slowly over time.

E. The rechargeable battery incorporated in this product is not user replaceable.

**General Operator:**

- Recharge the built-in Li-Ion battery as previously instructed.
- Press and hold the **BT** Button on the bottom of the unit for 3 seconds. The Blue Indicator on the back of unit will illuminate.
- Press the **BT** Button repeatedly to switch to desired playback mode. The unit will sound a prompt with your selection (see list below).

Playback Modes:	Voice Prompt:
BT (Bluetooth)	Bluetooth ready for connection
FM (Radio)	Radio
IN (Aux) Line In	Line In
USB	USB
Micro SD Card	Memory Card

**Notes:**

If the Audio Connection Cable, TF (Micro SD) Card and/or USB Device has NOT inserted into the unit, the corresponding indicator will not illuminate.

- During playback, press and hold the **BT** Button to resume to normal playback.
- Press and hold the **+** or **-** buttons repeatedly to adjust volume level as desired.
- Press and hold the **+** or **-** buttons repeatedly to skip tracks.
- When finished listening, press and hold the **BT** Button approximately 3 second to shut off the unit.

**BT Mode:**

First time use or re-pairing the unit to a new BT Device, pair as follows:

- Power on the unit and enter to BT mode as previously instructed. You will hear an audible prompt say "Bluetooth ready for connection" and the Blue Indicator on the back of unit will illuminate and blink.

- Power on the external BT Device and enter to BT search mode. Start pairing following the on screen instructions from the external BT Device. When paired, the Blue Indicator will stop flashing.
- Press and hold the **+** or **-** buttons repeatedly to skip tracks.
- If pairing is complete you may now play music with your external BT Device.
- Press the **BT** Button to pause; press again to resume to normal playback.
- Press and release the **+** or **-** buttons repeatedly to adjust volume level as desired.
- Press and hold the **+** or **-** buttons repeatedly to skip tracks.
- When finished listening, press and hold the **BT** Button approximately 3 second to shut off the unit.

**TWS Connection**

Approximately 3 second to shut off the unit.

- Power on two units at the same time.
- Press and hold the **BT** Button on the back of the unit, and wait for a few seconds. Press two unit will enter into TWS pairing mode, you will hear a prompt sound. The Blue Indicator on the back of unit of one of the unit will start to blink. The Blue Indicator on the back of the other unit will enter into BT pairing mode as previously instructed.
- If pairing is complete, you may now play music with your external BT Device.

**Notes:**

- When the external BT Device searched the unit, our model number "MMA3967" will appear on the display (if available).
- If asked for a code please try "0000" or "1234".

**Normal operation after pairing:**

- Power on the external BT Device and enter to BT search mode. Start pairing following the on screen instructions from the external BT Device. When paired, the Blue Indicator will stop flashing.
- Press and hold the **+** or **-** buttons repeatedly to skip tracks.
- If pairing is complete you may now play music with your external BT Device.
- Press the **BT** Button to pause; press again to resume to normal playback.
- Press and release the **+** or **-** buttons repeatedly to adjust volume level as desired.
- Press and hold the **+** or **-** buttons repeatedly to skip tracks.
- When finished listening, press and hold the **BT** Button approximately 3 second to shut off the unit.

- During playback, press and hold the **BT** Button to pause; press again to resume to normal playback.
  - Press and hold the **+** or **-** buttons repeatedly to adjust volume level as desired.
  - Press and hold the **+** or **-** buttons repeatedly to skip tracks.
  - When finished listening, press and hold the **BT** Button approximately 3 second to shut off the unit.
- Notes:**
- Do not use the unit in the rain or in wet conditions.
  - When inserting the TF (Micro SD) Card, make sure the direction you selected is correct. Never insert violently to avoid damaging the TF (Micro SD) Card/USB Device or other components.
  - Before replacing TF (Micro SD) Card, make sure the unit has been powered off.
  - You also need to download the desired music in MP3 format into the Micro SD Card before insert into the unit.

#### TROUBLE SHOOTING GUIDE

Start/Stop	Possible Cause	Possible Solution
Can't power on	Battery is fully charged	Recharge the battery under 25 hours
No sound or sound weak	Volume of the unit is set too low	Press the <b>+</b> or <b>-</b> buttons repeatedly to increase the volume level
Sound distortion	Volume level is set too high	Press the <b>+</b> or <b>-</b> buttons repeatedly to decrease the volume level
Not working	The external BT device is not paired with the unit	Pair the external BT device to the unit
Radio reception is poor	The location of the unit is not ideal	Move the unit to a location with better reception
No radio station received	The location of the unit is not ideal	Move the unit to a location with better reception

**GENERAL SPECIFICATIONS:**

Power Source	Built-in Li-Ion 200mAh (2.7V) Rechargeable Battery (Charging time: 2-3 hours)
Dimensions of speaker	50mm (W) x 50mm (H) x 30mm (D)
Audio Power	2W (RMS) (Total 4W, BMS)
FM Radio Frequency	67.5 - 108MHz
BT Version	4.0
BT Operation Distance	Up to 30 feet / 10m in open area

#### PACKAGE INCLUDES:

- 1 x Owner's Manual
  - 1 x Audio Connection Cable with 3.5mm Stereo Plugs
- SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE**

**UNIT'S WARRANTY**

Craig warrants this product to be free from manufacturing defects in materials and workmanship for a period of 12 months from the date of purchase. If a defect is discovered, please return the product to the store where it was purchased for exchange, or mail the unit in the original packaging material with all accessories to: Money Order for \$2 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make a U.S. bank. Ship your product freight prepaid. You will be repaired, replaced or if the unit can not be repaired or replaced, a refund of the purchase price will be given to you within 30 days of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.  
PO Box 279130, Tempe, AZ, 85287-9997

This warranty is void if the product has been a) Used in a commercial application or rental; b) Damaged through misuse, accident, or other causes; c) Modified or altered in any way; d) Repaired by an unauthorized repair center; e) Damaged because it is not a genuine product of Craig Electronics Inc. This warranty does not apply to accessories, software, or other equipment not included in the original packaging. The warranty is void if the product has been used in a commercial application or rental; b) Damaged through misuse, accident, or other causes; c) Modified or altered in any way; d) Repaired by an unauthorized repair center; e) Damaged because it is not a genuine product of Craig Electronics Inc. This warranty does not apply to accessories, software, or other equipment not included in the original packaging.

This warranty is not transferable and only applies to the original purchaser of the product. The warranty is void if the product has been used in a commercial application or rental; b) Damaged through misuse, accident, or other causes; c) Modified or altered in any way; d) Repaired by an unauthorized repair center; e) Damaged because it is not a genuine product of Craig Electronics Inc. This warranty does not apply to accessories, software, or other equipment not included in the original packaging.

Under no circumstances shall Craig be liable for any loss or consequential damages, including profits, loss of use of the product, or other damages, which may result from the use of this product. Some states do not allow limitations on implied warranties or exclusion of consequential damages. Therefore, these restrictions may not apply to you.

This product has been manufactured by and is sold under the trademark of MAGNAVOX and SMART, VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

To Obtain Service on your Product:  
email: magnavox@craigelectronics.com