

MAGNAVOX

PORTABLE STEREO SPEAKER

OWNER'S MANUAL

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

MODEL: MMA3998

FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC WARNING:

To assure continued operation, follow the attached installation instructions and use only shield cables when connecting to other devices. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

LOCATION OF CONTROLS




1. ⚡ Button / M Button
2. - Button
3. ⏸ Button
4. + Button
5. Type-c Port (For charging only)
6. Charging Indicator
7. AUX (Aux/ Line in) Jack
8. USB Port (For charging the external USB Device only)
9. Power ON/OFF Switch
10. TF (Micro SD) card slot

POWER SOURCE

The unit has a built-in Li-ion rechargeable battery, charge it before first time use or when it is drained as follows:

 1. Connect the small plug from the supplied USB Connection Cable to the Type-c Port on the back of unit.
2. Connect the full size USB Plug from the supplied USB Connection Cable to the USB Port on the Personal Computer or USB Charger (Computer and USB Charger not included).
3. When charging, the RED Indicator on the back of unit will illuminate.
4. When charging is complete, the Red Indicator will turn off.

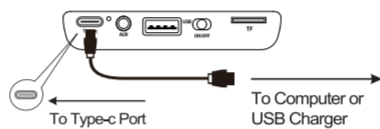

Notes:

1. When charging, you can also play and listen to music at the same time
2. Your battery will last longer if you're following these simple guidelines for caring and storing:
 - A. Before first time use, recharge the unit approximately 3 hours until the unit is fully charged.
 - B. Charge and store the unit within the temperature range of 5°C - 35°C (40°F - 95°F).
 - C. Do not overcharge (longer than 24 hours). Excessive charging or running the unit until battery fully drains will damage battery. Battery life will be extended if you keep

- D. Battery life naturally shortens slowly over time.
- E. The rechargeable battery incorporated in this product is not user replaceable.

OPERATION:

General Operation:

1. Recharge the built-in Li-ion battery as previously instructed.
2. Slide the Power ON/OFF Switch to "ON" direction to power on the unit. The Blue Indicator on the top of buttons will illuminate and blink.
3. Press and hold the ⚡ Button to switch to desired playback mode. The unit will sound the prompt with your selection

Playback Modes:	Voice Prompt:
BT (Bluetooth)	Bluetooth ready for connection
FM Radio	Radio
Aux (Aux/Line In)	Line in
USB	USB
Micro SD Card	Memory Card

Note:

If the Audio Connection Cable; TF (Micro SD) Card and/ or USB Device had NOT inserted into the unit, the corresponding selection will not available.

4. During playback:
 - Press the ⏸ Button to pause; press again to resume to normal playback.
 - In AUX(Aux/Line in) mode, press it to mute the sound, press again to turn the sound back on.
 - Press and release the + or - buttons repeatedly to adjust volume level as desired.
 - Press and hold the + or - buttons repeatedly to skip tracks. (It will not functioning in AUX mode)
5. Press the ⚡ Button repeatedly to set or reset the blinking mode of the Decorative Lights as desired.

Notes: It will not functioning in FM Radio mode.
6. When finished listening, slide the POWER ON/OFF Switch to "OFF" direction to shut off the unit.

BT Mode:

BT (Bluetooth) pairing:

First time use or re-pairing the unit to a new BT Device, pair as follows:

1. Power on the unit and enter to BT mode as previously instructed. You will hear an audible prompt say "Bluetooth ready for connection" and the Blue Indicator

- on the top of buttons will illuminate and blink.
2. Power on the external BT Device and enter to BT search mode. Start pairing following the on screen instructions from the external BT Device. When paired, the unit will sound a prompt "Bluetooth connected" and the Blue Indicator will stop blinking.
3. If pairing is completed, you may now play music and answer the phone with your external BT Device.
4. During playback:
 - Press the ⏸ Button to pause; press again to resume to normal playback.
 - Press and release the + or - buttons repeatedly to adjust volume level as desired.
 - Press and hold the + or - buttons repeatedly to skip tracks.
5. If the unit is paired to a Cell Phone:
 - When a call is incoming during an active music session:
 - Press the ⏸ Button then speak into the Microphone to answer the call. When your call is complete, press the ⏸ Button to disconnect or end the phone call and resume to music playback.
 - Or, press and hold the ⏸ Button approximately 1 second to decline the incoming phone call then resume to music playback.
 - Quick press the ⏸ Button twice to redial the last telephone number your cell phone called.

Notes:

- When the external BT Device searched the unit, our model number "MMA3998" will appear on the display of external BT Device.
 - If while pairing you are asked for a code please try "0000" or "1234".
6. When finished listening, slide the POWER ON/OFF Switch to "OFF" direction to shut off the unit.

Normal operation after pairing:

1. Power on the external BT Device and enter to BT playback mode.
2. Power on the unit and enter to BT mode as previously instructed. You will hear an audible prompt say "Bluetooth ready for connection" and the Blue Indicator on the top of unit will illuminate and blink.
3. Wait a few seconds until the unit is automatically paired to the external BT Device. The unit will sound a prompt "Bluetooth connected" and the Blue Indicator will stop blinking.
4. After pairing is completed, you may now play music with your external BT Device.

 
FM Radio:

1. Power on the unit and enter to Radio mode as previously instructed. You will hear an audible prompt say "Radio".
2. For first time use(or relocated the unit to a new location), search and store the available FM radio stations by press the ⏸ Button. The unit will automatically search and store all available FM radio stations then play the 1st stored FM station.Press and hold the + or - Buttons repeatedly to select and plays the desired stored radio station.
3. During playback, press and release the + or - Buttons to adjust volume level as desired.
4. When finished listening, slide the POWER ON/OFF Switch to "OFF" direction to shut off the unit.

AUX (Aux/Line in):

To listen from an external Audio Player such as MP3 Player, Discman... etc.


1. In power off mode, connect one end of supplied Audio Connection Cable to the AUX Out/Line Out/Phone Jack on the external Audio Player.
2. Connect the other end to the AUX (Aux/Line In) Jack on the back of unit as illustrated below:

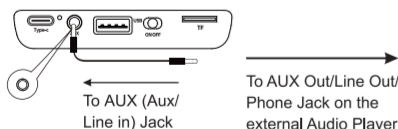

3. Power on the unit and enter to AUX mode as previously instructed. You will hear an audible prompt say "Aux In".
4. Play the music on the connected Audio Player as usual. (Make sure the volume level of the connected Audio Player is turned to high level.)
5. During playback: Press the ⏸ Button to mute the sound, press again to turn the sound back.
6. When finished listening, slide the POWER ON/OFF Switch to "OFF" direction to shut off the unit.

USB:

 To play music in a USB device:
1.In power off mode, connect the USB Device (not included) into the USB Port on on the back of unit as illustrated below:

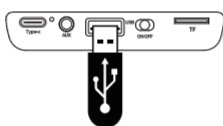

2. Power on the unit and enter to USB mode as previously instructed:
 - You will hear an audible prompt say "USB".
 - Music in the USB Device will be played back.

During playback:

 
- Press the ⏸ Button to pause, press again to resume to normal playback.
- Press and release the + or - buttons repeatedly to adjust volume level as desired.
- Press and hold the + or - buttons repeatedly to skip tracks.

3. When finished listening, slide the POWER ON/OFF Switch to "OFF" direction to shut off the unit.

TF (Micro SD) Card:

To play the music in TF (Micro SD) Card:

1. In power off mode, insert the TF (Micro SD) Card (not included) into the TF (Micro SD) Card Slot on the back of unit with contacts facing down as illustrated below:



2. Power on the unit and enter to TF (Micro SD) Card mode as previously instructed:
 - You will hear an audible prompt say "Memory Card".
 - Music in the card will be playback automatically.
3. During playback:
 - Press the ⏸ Button to pause; press again to resume to normal playback.
 - Press and release the + or - buttons repeatedly to adjust volume level as desired.
 - Press and hold the + or - buttons repeatedly to skip tracks.
4. When finished listening, slide the POWER ON/OFF Switch to "OFF" direction to shut off the unit.

Notes:

- Up to 16 GB TF (Micro SD) Card supported.

- When inserting the TF (Micro SD) Card , make sure the direction you selected is correct. Never insert violently to avoid damaging the TF(Micro SD) Card/USB Device or the unit. If it doesn't work, please check if the direction is correct.
- Before replacing TF(Micro SD) Card , make sure the unit has been powered off.
- You also need to download the desired music in MP3 format into the TF (Micro SD) Card before insert into the unit.

TROUBLE SHOOTING GUIDE

Check the following before requesting service:

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Can't power on	Built-in battery drained	Recharge the battery as page 2-3
	The unit in power off mode	Slide the POWER ON/OFF Switch to "ON" direction to power on the unit. The blue indicator on the top of unit will illuminate.
No sound or sound weak	Volume of the unit was set to minimum position	Increase the volume level by press and release the + Button repeatedly
	Volume level of paired/ connected device is in low level	Rise the volume level of the paired/connected device
Sound distortion	Volume level too high	Reduce the volume level by press and release the - Button repeatedly
	Volume level of the paired/ connected device too high	Reduce the volume level of the paired/connected device
BT not functioning	The external BT device had NOT paired to the unit	Pair the external BT device to the unit as page 3-4
	The external BT device too far from the unit	Place the external BT device close to the unit
Radio reception not good	The location not good for radio reception	Reassemble the unit to other direction/location to improve reception
No radio station received	The unit was moved in a new location or the available FM stations had not stored into the unit	Press the ⏸ Button to search and store all the available FM stations again

GENERAL SPECIFICATIONS:

Power Source	Built-in DC 3.7V, 1200mAh (4,44WH) rechargeable Li-ion Battery; recharge by DC 5V through the (Type-c) Port
Impedance of Speakers	4 ohm

Audio Power	3W per Channel (Total 6W, RMS)
FM Radio Frequency	87.5 - 108MHz
BT Version	5.0
BT Operation Distance	Up to 32 Feet in open area

PACKAGE INCLUDES:

- 1 x Owner's Manual
- 1 x USB Connection Cable (For Charging Only)
- 1 x Audio Connection Cable with 3.5 mm Stereo Plugs

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE

LIMITED WARRANTY

Craig warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$3 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
PO Box 279130, Miramar, Fla. 33027-9997

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment. Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

This product has been manufactured by and is sold under the responsibility of Craig and Craig is the warrantor in relation to this product. MAGNAVOX and SMART. VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

To Obtain Service on your Product
email: magnavox@craigelectronics.com

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.