



## Bluetooth® Speaker Tower User Manual



MODEL: BMESB005

## CONTENTS PAGE

Contents Page	2
Safety Instructions	3
Important Safety Precautions	4
Contents	5
Specifications	5
Device Overview	7
Basic Operation	12
Frequently asked Questions	19

## SAFETY INSTRUCTIONS

- Dry location use only.
- The speaker should not be exposed to dripping or splashing liquids. Objects filled with liquids, such as vases, should not be placed near or over the product.
- Do not attempt to disassemble this unit. When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original parts. Refer servicing to qualified personnel.
- Do not use the product in an extremely dry environment.
- Do not store next to a heat source or in dirty, humid or wet places. Keep it out of direct sunlight.
- Do not put the product in high temperature places (over 40°C).
- Do not subject the product to harsh impacts. Do not drop the

unit to avoid damage.

- Press the buttons gently. Pressing them too hard can damage the product.
- Disconnect from the power source before cleaning.
- Keep the unit clean
- Use a dry soft cloth to clean this speaker.
- This product is not intended for commercial use. Household Use Only.

## IMPORTANT SAFETY PRECAUTIONS

To prevent electric shock; do not use this plug with an extension cord receptacle or other outlets unless the blades can be fully inserted to prevent exposure. To prevent fire or shock hazard; do not expose this appliance to rain or moisture.

Use a dry soft cloth to clean this appliance. Do not dismantle the product or use alcohol, thinners or benzene to clean the surface of the product.

Attention: We have done our best to produce a complete and accurate manual. However, we cannot ensure that there are no errors or omissions during the printing process.

## CONTENTS

Please make sure that the items shown below are included in the package. Should an item be missing, please contact the local retailer from which you purchased this product.

 
- Bluetooth Mini Speaker Tower 1 piece
- Remote Control 1 piece
- Power Adaptor 1 piece
- Audio Cable 1 piece
- User Manual 1 piece

## PRODUCT SPECIFICATION

- Up to 10 meter Bluetooth transmission range
- Frequency Range: FM 87.5 - 108 MHz
- 30 pre-set FM radio channels
- Output power: 2 x 2W RMS
- LED Display
- 3.5mm Aux input
- Power Supply: AC/DC Adaptor Output 5V 1000mA
- Using only the power supply adaptor provided by the manufacturer or its authorized agent.

## DEVICE OVERVIEW

### BLUETOOTH MINI SPEAKER TOWER

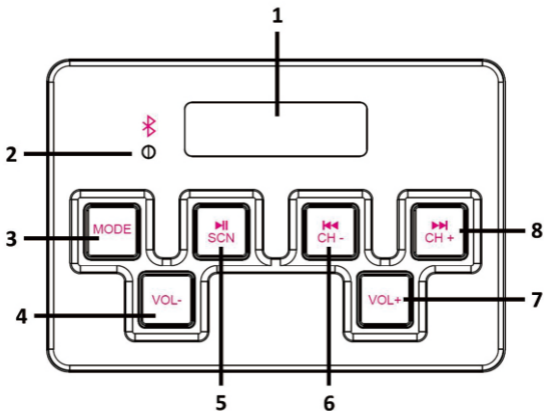


Number	Icon	Function
1	LED Screen	Displays the information of the

		Mode, Channel or Frequency.
2	LED Indicator	LED indicator to show the Bluetooth connection
3	Mode Button	Changes the mode between Bluetooth, FM Radio and Line In modes
4	VOL- Button	Decreases the volume
5	Play Pause / SCN	Play and Pause the music in Bluetooth and Line in mode, Hold to automatically scan for all FM stations in Radio mode.
6	Previous Track/Channel Button	Skips to the previous track in Bluetooth mode, Skips to the previous pre-set channel in FM radio mode
7	Vol + Button	Increases the volume




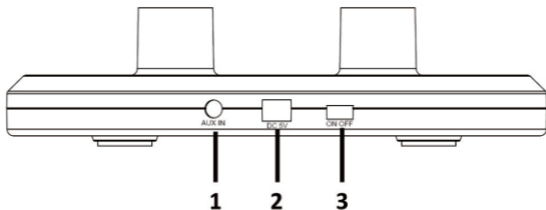 

8	Next Track/Channel Button	Skips to the next track in Bluetooth mode, Skips to the next pre-set channel in FM radio mode
---	---------------------------------	---





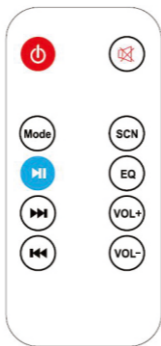 





Number	Icon	Function
1	AUX In	External audio input (Line in)
2	DC 5V	DC Input, use the power adaptor supplied to power the

		device
3	ON OFF	Turns the speaker On or Off



Icon	Button	Function
	Power Button	Turns the speaker On and Off
	Mute Button	Mutes the music On and Off

	<p>Mode Button</p>	<p>Changes the mode between Bluetooth, FM Radio and Line In modes</p>
	<p>Scan Button</p>	<p>Scans FM Radio stations when you hold the button only works in FM radio mode</p>
	<p>Play/Pause Button</p>	<p>Play and Pause the Song</p>
	<p>EQ Button</p>	<p>Allows you to change Equaliser Settings (EQ) from Bass, Pop, Rock, Jazz, Classical, Country, and Normal. Only works in Bluetooth Mode.</p>
	<p>Next track Button</p>	<p>Skips to the next track in Bluetooth mode, Skips to the next pre-set channel in FM</p>

		radio mode
	Volume + Button	Increases the volume
	Previous track Button	Skips to the previous track in Bluetooth and mode, Skips to the previous pre-set channel in FM radio mode
	Volume - Button	Decreases the volume

## BASIC OPERATION

### CONNECTING POWER ADAPTOR

Connect the power adaptor plug to the DC 5V socket in the back of the unit and the other end into the standard AC outlet.

1. Do not plug or unplug the power cable while you have wet hands.

 
2. When planning not to use this unit for a long time, disconnect the power cable from the wall outlet.
3. When disconnecting the power cord from the wall outlet, do not pull on the cord.

## REMOTE CONTROL

First time use the battery has been included (1 x CR2025) please pull out and discard the insulation film in the battery compartment. Once this has been done the remote control will now work. Please note that the IR sensor on the speaker is on the front of the base.

To replace the batteries:

1. Press the tab and slide the battery tray as per below
2. Replace the battery with a new CR2025 button cell battery, ensure the polarity markings match
3. Close the battery tray; please ensure the tray clicks and locks into position.

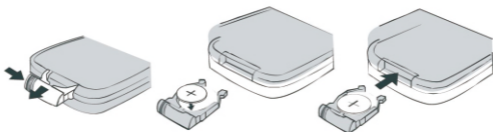

## BLUETOOTH PLAYBACK

1. Ensure the speaker is turned on at the back of the unit, and press the “Power” button on the remote.
2. Press the “Mode” button to switch to Bluetooth mode bBLUE will be displayed on the LED display.
3. Once in bBLUE mode, the LED indicator light will flash quickly.
4. Turn on your Bluetooth function on your connecting device i.e. Smartphone, MP3 Player or Tablet.
5. Scan for new available devices on your device, once you have found “SMESB005/BMESB005” click and connect.
6. Once connected the LED indicator will be lit continuously and the Pause icon on the LED display will be shown.

7. Please use your device to choose your music and press play, the music will then start playing through the speaker. Once music is playing the LED indicator light will flash slowly and the Play icon will be displayed on the LED display.

Once you have connected your device you can use the remote control or the control panel on the top of the unit to operate the Volume, Skip to the next or previous song, Adjust the EQ setting, Mute the Song, Pause the song. Please refer to the DEVICE OVERVIEW section for details.

**NOTE:** the Bluetooth function has a connectivity range of 10meters. If you go further than 10metres away the signal might not work.

While in Bluetooth mode if the music has not been played for 10mins the speaker will enter sleep mode, wake the speaker up by pressing the “Power” button on the remote control.

## LISTENING TO THE RADIO

1. Ensure the speaker is turned on at the back of the unit, and press the “Power” button on the remote
2. Press the “Mode” button to switch to FM mode, the FM icon on the LED display will now be lit.
3. Once in FM mode press and hold the “SCN” button on the remote or unit for 3 seconds and the unit will automatically tune all the FM stations it has reception of, the screen will display CH01 when the 1st station is tuned and continue through up to 30 stations, when it has completed its scan it will return to CH01.
4. Press the “◀◀ or ▶▶” button on the remote or unit to select the desired channel.
5. You can turn the volume up or down by pressing “VOL-“or “VOL+”.



## AUX IN

The speaker has an AUX input for other audio devices to be able to play through the speakers.

1. Ensure the speaker is turned on.
2. Connect your audio device via a 3.5mm cable (included) to the back of the speaker.
3. Once the cable is connected the speaker will automatically change to “Line In” mode, LINE will be displayed on screen.
4. Press play on your device to ensure it is playing. And use the volume controls on your device and the speaker to adjust the volume.

**NOTE:** When the 3.5mm cable is removed the Speaker will return to Bluetooth mode.

## EQ SETTING

The speaker allows you to change the EQ setting or know as Equalizer setting. Press the “EQ” button on the remote control while in Bluetooth mode and the EQ setting can be change.

The LED display will show the EQ setting briefly.

<b>Icon</b>	<b>Function</b>
BAS	Bass sound setting
POP	Pop music sound setting
POC	Rock sound setting
JAZ	Jazz sound setting
CLA	Classic sound setting
CUR	Country sound setting
NOR	Normal sound setting

## FREQUENTLY ASKED QUESTIONS

<b>Problem</b>	<b>Possible cause</b>
The Speaker will not turn on	<ul style="list-style-type: none"><li>• Check that the power adaptor is plugged into the speaker and the adaptor is plugged into a power source and switched on at the wall.</li><li>• Also ensure the power switch on the back of the speaker turned on.</li><li>• Press Power button on the remote as the speaker could have entered sleep mode.</li></ul>
There is no sound	<ul style="list-style-type: none"><li>• Turn the volume up on the eternal device or on your speaker</li><li>• Check to ensure you have Bluetooth connection between your device and speaker</li></ul>

There is no FM stations	<ul style="list-style-type: none"><li>• Disconnect and reconnect the power and redo the station scanning process.</li><li>• This could be due to the location of the unit, please remove to another area of the house or outside and try again</li></ul>
Bluetooth Cannot connect	<ul style="list-style-type: none"><li>• When pairing keep your device within 1 meter to ensure maximum connectivity</li><li>• Make sure your Bluetooth enabled device supports A2DP profile</li><li>• Ensure there is no other devices in the area that could cause interference</li></ul>



## PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd  
489 - 499 Avelby Boulevard  
Central Milton Keynes  
MK9 2NW

## **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.