

- Pairing code "0000" or "1234" may need to enter.

Normal operation after pairing:

1. Power on the unit as previous procedures.
2. Press the **M** Button repeatedly until "Blue tooth ready for connection" hear from speaker. Wait a few seconds until "Bluetooth connected" hear from speaker and the Blue Indicator stop blinking.
3. Plays the music in the connected Bluetooth Device as usual.
4. If the unit is paired to a Cell Phone and a call is incoming during music listening:
 - Double press the **M** Button to block the call.
 - Press and hold the **M** Button approximate 3 seconds to pause the music then speak to the built-in microphone to answer the call. When your call is complete, double press the **M** Button to hook on and resume to music playback.

Radio:

 
1. Power on the unit as previous procedures.
2. Press the **M** Button repeatedly unit "Radio" hear from speaker.
3. Press and release the **◀▶** Button to searching and plays the previous/next available FM station. Repeat the same procedures until the desired FM station was found and play.

FM Antenna:

The FM Antenna is built in the unit. If reception is weak, relocation or redirection the unit to improve the radio reception.

USB Device playback mode:

1. In power off mode, insert the USB Device into the USB Port on the rear of unit as the figure below:

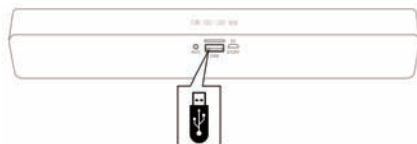


2. Power on the unit as previous procedures.
3. Press the **M** Button repeatedly until "USB" hear from speaker. The unit will start playback the music in the USB Device automatically.

4

TF (SD) Card playback mode:

 1. In power off mode, insert the TF (SD) Card into the TF (SD) Card Slot on the rear of unit as the figure follows:

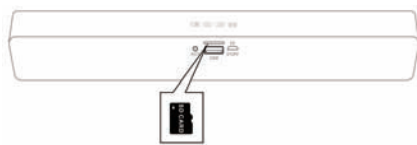

2. Power on the unit as previous procedures.
3. Press the **M** Button repeatedly until "Memory Card" hear from speaker. The unit will start playback the music in the TF (SD) Card automatically.


Notes:

- Up to 16GB USB Device or TF (SD) Card (not included) the unit support to play.
- Before replacing USB Device or TF (SD) Card, make sure the unit has been powered off.
- When inserting the storage card, make sure the direction you selected is correct. Never insert violently to avoid damaging the USB Device or SD Card or the unit. If it doesn't work, please check if the direction is correct.
- You also need to download the desired music in MP3 format into the USB Device and/or TF (SD) Card before insert into the unit.

AUX IN:

To listening from the external Music player such like MP3 Player, Discman ...etc.

 1. In power off mode, connect the 3.5mm stereo jack from the supplied Audio Connection Cable to the AUX Out/Line Out/Phone Jack on the external Audio Player.
2. Connect the other end to the AUX (in) Jack on the rear of unit as the figure below:

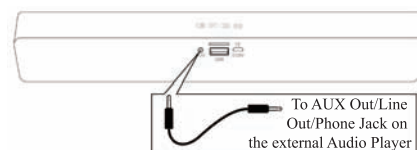

5

4. Power on the unit as previous procedures. "Bluetooth ready for connection" will hear from the speaker.
5. Press the **M** Button repeatedly until "Line in" is hear from speaker.
6. Plays the music on the connected Audio Player as usual. (Make sure the volume level of the connected Audio Player is in high level. Otherwise, sound from this unit is weak).

RESET:

If the unit is halt or abnormal operation, press the Reset Button in the AUX (in) Jack by a small screw driver (not included) to shut it off. Press and hold the **◀▶** Button approximate 0.5 second to turn it on again.

Troubleshooting:

Can't power on	Built in battery consumed	Recharge the battery
No sound or sound weak	Volume of the unit was set to minimum position	Increase the volume by press and hold the ▶▶ Button
	Volume of paired/connected device in low level	Rise the volume level or paired BT device
Sound distortion	Volume level too high	Reduce the volume level by press the ◀◀ Button
	Volume level of the connected/paired device too high	Reduce the volume level of the connected/paired device
	EQ of the connected/paired device was set to super bass	Set the EQ of the connected/paired device to others modes
BT not functioning	The external BT device too far from the unit	Place the external BT device close to the unit

General Specification:

Power Source	Built-in Li-ion rechargeable battery; Recharge by DC 5V through Micro USB port
Maximum Play time	UP to 3 Hours
BT Effective range	Up to 32 feet in open area
Audio Power	Total 3.6W; 1.8W (RMS) per channel;
Impedance of speaker	3W ; 4 Ohm x 2

Accessories:

- 1 x User's Manual
- 1 x USB Connection Cable (For charge only)
- 1 x Audio Connection Cable with 3.5mm stereo mini plugs

SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

6

LIMITED WARRANTY

Craig warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 90 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$7.00 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental, b) Damaged through misuse, negligence, or abuse, c) Modified or repaired by anyone other than an authorized Craig service center, d) Damaged because it is improperly connected to any other equipment.
Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer, b) Damage to equipment not properly connected to the product, c) Any cost incurred in shipping the product for repair, d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

To Obtain Service on your Product
email:service@craigelectronics.com

Printed in China

CMA3581-WC-E0FK1-B0US

CRAIG®

PORTABLE SPEAKER
with USB/SD and Bluetooth® Wireless Technology

Owner's Manual**FCC INFORMATION:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note:

Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged any way such as the following: the power-supply cord or plug has been damaged, liquid has been spilled in to the unit, the unit has been exposed to rain or moisture, the unit has been dropped or the unit does not operate normally.

1. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquid, such as vases, shall be placed on the apparatus.
2. Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain operable.

BATTERY DISPOSAL WARNING!

To reduce the risk of fire or burns:
Do not disassemble, crush, puncture, or short external connectors contacts.
Use only with specified charger and player.
Do not dispose of in fire or water.
Do not dispose to high temperature above 60°C (140°F).
Store between 0°C (32°F) and 60°C (140°F).
Keep away from children.
See operating instructions of this battery or product.



Li-ion battery
Must Be Disposed
Of Properly



Batteries should be recycled or disposed of as per State and Local guidelines.

1

Battery Recharge:


The unit has a built in Li-ion rechargeable battery. recharge it before use as follow:

- Connect the Micro USB plug from the supplied USB Connection Cable to the Micro USB Port on the rear of unit.
- Connect the full size USB plug to the USB port on a computer or any USB charger with DC 5V output. (During charging, the Red Indicator will light. When finished, it will turned off).

**Notes:**

 Your battery will last longer if you following these simple guidelines for charging and storing it.

- A. For charging first time, charge it at least 10 hours.
- B. Recharging and store the battery within the emperature range of 5°C~35°C (40°F~95°F).
- C. Do not over charge (longer than 24 hours). Excessive charging or discharging may shorten the battery's life.
- D. Battery life naturally shortens slowly over time.
- E. The rechargeable battery incorporated in this product is not user replaceable.
- F. Battery life will be extended if you keep the battery fully charge.

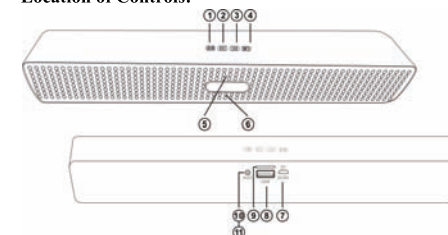Location of Controls:

1. **▶▶** Button
2. **◀◀** Button
3. **▶▶** Button
4. **M** Button

2

5. Indicators
6. Built-in Microphone
7. Micro USB Port (For charge only)
8. USB Port
9. TF (SD) Card Slot
10. AUX (in) Jack
11. Reset Button (Inside the AUX in Jack)

OPERATION:**General operation:**

1. Press and hold the **▶▶** Button approximate 0.5 second to turn it on.
2. Press the **M** Button repeatedly until the desired modes hearing from speaker as below:
 - Blue tooth ready for connection
 - Blue tooth connected
 - Radio
 - Line in (=Aux in)
 - USB
 - Memory Card
3. Press and hold the **◀◀** or **▶▶** Button to adjust volume level.
4. In BT; TF (SD) Card and USB Device playback mode:
 - Press and release the **◀◀** or **▶▶** Button repeatedly to skip tracks.
 - Press the **▶▶** Button to pause; press again to resume normal playback.
5. When finished listening, press and hold the **▶▶** Button to shut off.

BT (Bluetooth) mode

The first time you use the speaker or pair it to a new Bluetooth device, please follow these instruction:

1. Power on the unit as previous procedures.
2. Press the **M** Button repeatedly until "Blue tooth ready for connection" hear from speaker. The Blue Indicator will light and blinking.
3. Power on the external Bluetooth Device and enter searching mode. Start pairing following the on screen instructions from the external Bluetooth device. After pairing, "Bluetooth connected" will hear from speaker and the Blue Indicator will stop blinking.

Notes:

- When the external BT player searched the unit, our model number "CMA3581" will appear on the display of the external Bluetooth Device.

3