


ESOTICA

User Manual

Portable Stereo
Bluetooth Speaker

01

Thank you for choosing SC-21 Portable Stereo Sport Bluetooth Speaker. It is waterproof IPX5 (splash water resistant) product. In order to better understand its performance and use it safely, please read this user manual carefully before using.

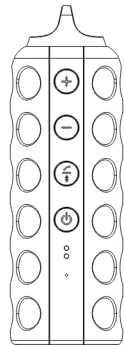

02

Safety Instruction

Please read and follow the instructions below to ensure that you can use this unit safely and in a correct method. Please keep this manual for future reference.

1. Do not let children to play this unit alone without adult supervision.
2. Do not hit or slam this product.
3. Keep the device away from liquids; put it away from temperature. Freezing area will decrease this product performance.
4. Do not block the area above the speaker mesh.
5. Do not try to repair this unit by yourself.
6. Warranty is not executed to rusty unit or occurrence of natural corrosion.

Warning

To prevent any fire or electrical hazards, do not dissemble or replace any of the unit. Please contact professional maintenance person or qualified service center if there is any damage to the unit.

03

Pairing and connecting Bluetooth devices
To pair with a Bluetooth device:

1. Turn on both of your Bluetooth device and the speaker
2. Activate your Bluetooth device. Locate and select the speaker (Model NO. SC-21) on the pairing list of your Bluetooth device.
3. If your Bluetooth device prompts you for a pass code, enter digits "0000" and press OK. Some devices also ask you to accept the connection. The speaker indicates pairing is complete when the Bluetooth indicator changes from fast flicker blue to slow flicker blue and the speaker emits a tone.

Noted

1. When did the first pair, long press the Bluetooth key until the blue light flickering.
2. If the speaker turns off after 15 minutes, it has not discovered your Bluetooth device.

Battery Charging

Recommended charging time is four hours to fully charge the battery. You can use the speaker while charging the battery.

	Blinking red	Battery charging
	Indicator light off	Charging cycle done

Noted: Battery performance varies with the content played and loudness at which it is played.

04

Product description

Control buttons / Status Indicators

	Power on – Press and hold for 3 seconds. After the tone, release the key.
	Power off – Press and hold for 3 seconds. After the tone, release the key.
	Play / Pause – Short press to play or pause the songs.
	Answer / End a call – During an incoming call, short press to answer a call, short press again to end a call and back to play music.
	Reject a call – Long press to reject a phone call.
	Redial a call – Double press to redial the last coming call.
	Volume control – Press and hold to adjust volume
	Next / Previous – Short press to skip the songs

Open the cap at the bottom for charge and line in



Supplied Accessories

1. USB cable (for charging) 1pc
2. 3.5mm Audio cable (Aux input cable) 1pc
3. User manual
4. Carabiner 1pc

05

Technical specifications

Mode: SC-21
Bluetooth Version: CSR 4.0
Related voltage: 3.7V
Battery: Lithium-ion battery, 3.7V/1,500mAh
Charge voltage: 5V
Charging time: 4 hours
Maximum output power: 3W x 2
Weight: 420g
Dimensions: D66 x H200mm
Operation Temperature: 0°- 45°C
Operation range: 10M
Channels: Stereo
Signal to noise ratio S/N: ≥80dB
Frequency range: 180Hz-20KHz
Distortion THD: ≤ 1%
Transducers: 2 x 40mm full frequency

Troubleshooting

Bluetooth Speaker can not be turned on

1. Make sure the Bluetooth speaker is fully charged and can be searched.

06

Can not pair with the Bluetooth device

1. Ensure the speaker is in connecting mode. Bluetooth status Indicator blinks blue.
2. Ensure Bluetooth is enabled on your Bluetooth device.
3. Your device may be out of range. Try moving it closer to the speaker.
4. Turn the device off and back on, and connect it to the speaker
5. If possible, turn off all other nearby Bluetooth devices or disable their Bluetooth functionality
6. Clear the speaker memory. Pair and connect the device to the speaker again.
7. Reset the speaker. Press and hold mute on the speaker for 10 seconds until all status indicators briefly illuminate and the speaker turns off. Turn the speaker on again, and connect your device.

No Sound

1. Ensure the device you want is connected to the speaker and playing audio.
2. Ensure the speaker is not muted and the speaker volume is turned up
3. Turn up the volume on your device
4. Your device may be out of range. Try moving it closer to the speaker.
5. Move your device away from any device that generates electromagnetic interference, such as another Bluetooth device, cordless phone, microwave oven, or wireless router.

website: www.esotica.com.cn

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: Modifications to this product will void the user's authority to operate this equipment.