

FOLD

GoStick

CY1735UNSES

Pairing your shutter button with your Apple or Android device is easy.

- Switch button on the side of the remote to 'ON', and a light will flash blue. Then go to your smartphone's Bluetooth® settings, ensure Bluetooth® is turned on, and select for 'AB Shutter 3' when it appears.
 - iOS/Apple: Settings > Bluetooth® > Turn Bluetooth® on. It will automatically start searching for devices.
 - Android: Menu > Settings > Wireless & Network > Bluetooth® settings > turn Bluetooth® on by checking box. Then select 'Search for Devices'.
- You're now ready to use the Selfie Stick. Use the corresponding shutter button on the remote to activate the shutter button. Compatible with Android 4.2.2 OS or newer and iOS 6.0 or newer. In the event of an incompatible version of Android OS, Cygnett recommends the Camera 360 Ultimate* app, available on Android and iOS platforms.



FCC Statement: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- o Reorient or relocate the receiving antenna.
- o Increase the separation between the equipment and receiver.
- o Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- o Consult the dealer or an experienced radio/TV technician for help.

Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law (or local consumer law). You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Cygnett warrants this product against defects in workmanship and material for a period of two (2) years from its original purchase date. You must present your receipt as proof of date of purchase for warranty validation. Please read the following information carefully and retain this warranty card for any warranty claim.

Terms and conditions:

- This product is for household use only. If the product is used in a commercial environment, the warranty period will be automatically reduced to three (3) months.
- Cygnett warrants that, with normal use or service, the product will be free from faulty parts, manufacture or workmanship.
- The warranty does not apply where damage is caused by other factors, e.g. mishandling, abuse, accident or failure to follow operating instructions.

How to make a warranty claim:

As a wholesaler, Cygnett does not process replacements or refunds directly to the customer. Please contact the retailer/store/reseller you bought the product from for a replacement or refund if the product is faulty.

Should the retailer no longer exist or be unreachable, or should the product be out of stock, please contact us at:

Cygnett Pty Ltd
Email: info@cygnett.com
Phone: (03) 9912 9121
Address: 858 Lorimer Street
Port Melbourne, Victoria, Australia 3207

Please note: Subject to Australian Consumer Law, the customer is responsible for all costs relating to all packaging, freight and insurance for transit of the product to and from Cygnett.

이 기기는 가정용으로 전자파적합등록을 한 기기로서 주거지역에서는 물론 모든 지역에서 사용할 수 있습니다. 당해 무선설비는 전파혼신 가능성이 있으므로 인명안전과 관련된 서비스는 할 수 없음.

party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



WARNING: KEEP BATTERIES OUT OF REACH OF CHILDREN.
Swallowing may lead to serious injury or as little as 2 hours or death, due to chemical burns and potential perforation of the oesophagus. If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poisons Information Centre on 13 11 26 for fast, expert advice. Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not secure. Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.

*TheCamera 360 Ultimate app is the property of PinGuo Inc. and/or its affiliates.

FOLD

FOLD

FOLD

