


User Manual

FS8010-300

What's included?

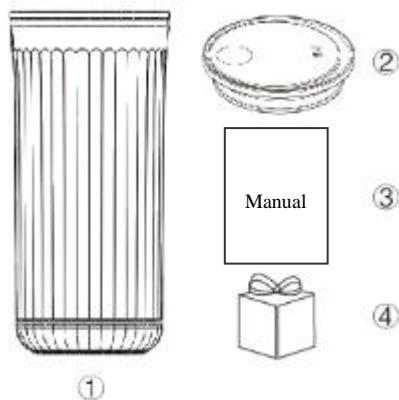


1. Cup Body 2. Lid
3. Manual 4. Sealing Ring+ Two Button Cells

Getting Started

Step 1

Insert the button cells

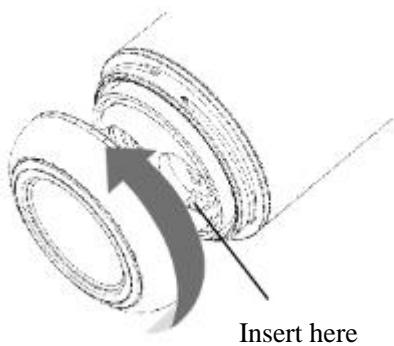

Contrarotate the bottom and insert the button cells as is shown in the figure.

Step 2

Download “Catch App”

Smart Mobile Device Requirement:

The app is capable of setting up and syncing with select mobile devices that support Bluetooth low energy (BLE4.0) technology. Please check up the list below before downloading the application.

IOS

iPhone6	iPhone5
iPhone6plus	iPhone4s
iphone5S	iPhone4
iPhone5C	itouch5

Android

Samsung galaxy S5	Nexus5
Samsung galaxy S4	Nexus4
Samsung galaxy S3	
Samsung galaxy Note 2	

The Catch App is also installed successfully in other Android mobiles when:

1. The mobile supports BLE4.0.
2. The operating system is above Android 4.3.

Please contact us if your phone still fails to match Catch App though meeting the standards above.

Log-in Page

Visit the download page.

Choose the IOS/Android version according to your mobile device.



Step 3

Start "Catch" App

Pair the phone with the cup.

After Service

In case of any problem, feel free to raise any question to the online Fuguang Store service staff in the process of using.

For "Catch" customer support, visit fuguang.tmall.com

Keep the after-sale service card properly for the one-year free service and repairs.

The service card, invoice or trade number is needed for the after-sale service.

The cup under warranty excludes:

Buy the cup through unofficial channels

Break the cup artificially or don't use it as instructed

Cause damage on account of improper maintenance

Repair the cup in unofficial service

Please attach the card below when the cup is sent back repair.

Repair Registration

Name:_____ Tel:_____

Add._____

Problem Description:_____

FAQ

Fail to match the mobile device and the cup?

Make sure the mobile is on the supported device list.

Make sure the Bluetooth is on.

Make sure the button cell is installed correctly.

When you finish steps above, touch the cup body and wait for the light on.

Contact us if the problem still remains.

Why doesn't the app remind you to drink water at once?

For a longer service life, the cup's pressure sensor is settled to trigger every 5 seconds.

Maintenance

Take off the cell and keep it dry if the cup is out of use for a long time.

Use neutral detergent to wash the cup.

Use soft sponge, dishcloth to wipe the cup.

Attention

Keep the cup away from fire.

Don't soak the cup in water for a long time.

Keep the cup bottom dry and clean.

Don't fall the cup from a high place.

Don't put the cup into the microwave oven or the dish washing machine.

Special Suggestion

It's not recommended to shake the cup violently or place it up side down, because the easy-open cup may probably cause leakage.

Highly corrosive liquid, cola and other sodas may not be contained in the cup, for it might increase the pressure inside the cup, which leads to the problem with the leakproofness or unnecessary danger.

For more accurate calculation and data loss prevention, it's advised to synchronize data once a day.

FCC Regulations:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.