

USER MANUAL



Table of Contents

1 OVERVIEW

1.1 Appearance and Keys

1.2 Basic Operation

1.2.1 Switch On

1.2.2 Unlock the screen

1.2.3 Lock the screen

1.2.4 Switch Off

1.2.5 Restart the device

1.2.6 Battery charging

1.2.7 Switch input methods

1.2.8 Use TF-Card

1.2.9 Connected to the computer

1.2.10 Browse the file in the device

1.2.11 Startup programs

1.2.12 Close programs

1.2.13 Screen operation

1.2.14 Home screen

1.2.15 Screen gestures

1.2.16 Security setting

1.2.17 Display setting

1.2.18 HDMI setting

1.2.19 Wireless And Network Settings

1.3 Technical specifications

Thanks very much for purchasing our MID product! Before using this product, please read the manual carefully. We will consider that you have read this manual when you use this product.

The functions information of this manual is subject to the product itself; we will keep developing new functions. The information in this manual is subject to change without any prior notice.

The Company will not be responsible for any loss of personal data and damage caused by incorrect operation of software/Hardware, artificial damages, replacement of batteries or any other accident. To avoid loss of your data, please backup your data to your computer at any time.

We cannot control any dispute from users' misunderstanding or incorrect operation against the manual, the Company will not take any relevant responsibility for any accidental loss potentially occurring in the process of using this manual.

Please do not repair it by yourself, otherwise, we will not provide you with after-sale service.

Preface

Dear Customers,

Thanks very much for purchasing our product! This device is built-in high performance Wifi receiver module, supporting external 3G USB-DONGLE wireless network card, turning on the broadband wireless networks, breaking through the restraint of network cable; it will bring you into the portable media player world and fulfill your entertainment needs. It also support picture browsing, E-book Reader, games, online chat and other functions, various settings will fully show your individuality.

Safety Notices

Please do not let the player fall or rub or compact with hard objects during using, or it may cause surface scratch of the player, battery loose, data lose or damages of other hardware. Never let this product expose to the humid environment or rain as the water leaked into may disable it to the extent beyond maintenance.

You are recommended not to use the headset with large volume continuously, please adjust the volume to the size of appropriate security and control the using time to avoid the damage to your hearing, as excessive volume will cause permanent hearing damage. Please do not cut off the power abruptly during software update and download, or it may cause date loss and system error.

Please don't turn on the device where the wireless equipment is forbidden or when the usage of the device will cause interference and danger. Please observe any relevant restrictions.

Please use original accessories and batteries, do not use incompatible products.

Please don't use the device in gas station or nearby the fuel and chemicals.

Please don't use this product when you are driving or walking in the street, or it may cause an accident.

Please do not scrape the TFT screen, it may be damaged and can not be display anything. Never clean the device with any chemicals and detergent, or it will damage the product surface and corrode the spray paint.


Packing List

No	Components	Quantity
1	MID Device	1
2	USB Cable	1
3	User Manual	1
4	Adapter	1

Attention: Accessories are subject to the real products and change without notice.

1.Overview

1.1 Appearance and Keys

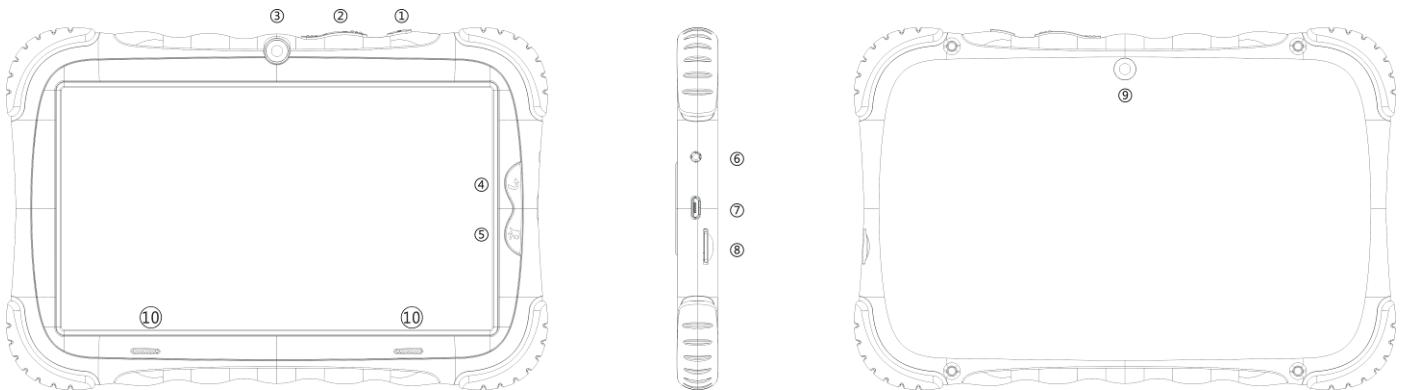

Symbol	Name	Description
1	Power	Press shortly to enter sleeping/waking up mode, press long to switch ON/OFF
2	Volume+ /Volume-	Press long the left side of the key is increase volume function Press long the right side of the key is reduce volume function
3	Front Camera	0.3 Megapixel Camera
4	Home/ESC button	Press to enter home page or return
5	camera	Press to camera
6	Earphone jack	Stereo
7	Mini USB port	Connect with PC and to avoid damaging , recommend use of the special charging equipment
8	TF Card	TF Card Slot
9	Back Camera	2.0 Megapixel Camera
10	Speaker	Built-in Speaker
11	RESET	Press shortly to reset

1.2 Operation

1.2.1 Switch On

When the device is in the OFF mode, press and hold “Power” key for 3 seconds to enter the Android startup progress bar, then you can enter to the system desktop.

1.2.2 Unlock the screen

Please press and drag the  icon to the , then the LCD will unlock automatically



1.2.3 Lock the screen

When the device is in the ON mode, press the “POWER” key shortly, the system will lock the screen and enter the save power mode. Then the screen is OFF but the system will still operational.

1.2.4 Switch Off

When the device is in the ON mode, press and hold the “POWER” key for 3 seconds, the screen will display the power off interface, choose the power off item to confirm, the system will shut automatically.

1.2.5 Restart the Device

Press "RESET" key shortly the device will reset.

1.2.6 Battery Charging

Insert the micro port of the battery adapter into 220V AC slot on the device, and connect the other side with the power socket. Then, you can charge the device.

[Note] This device is not recommended to use USB interface to charge, please must use the special power adapter for charging. You should charge the battery for at least 8-12 hours to make sure the battery is fully charged at the first time. On charge the Power indicating

lamp of the device is in high light blue color, the desktop icon of the battery  keep rolling which shows it is connected to the device.

1.2.7 Main interface



(1)Animation control switch


(2)Time/Date Setting Button

(3)Camera Button

(4)Parental Control Button

(5)Six mould: Painting, App Box, Games, Media, Notes, E-Book

1.2.8 Time Setting

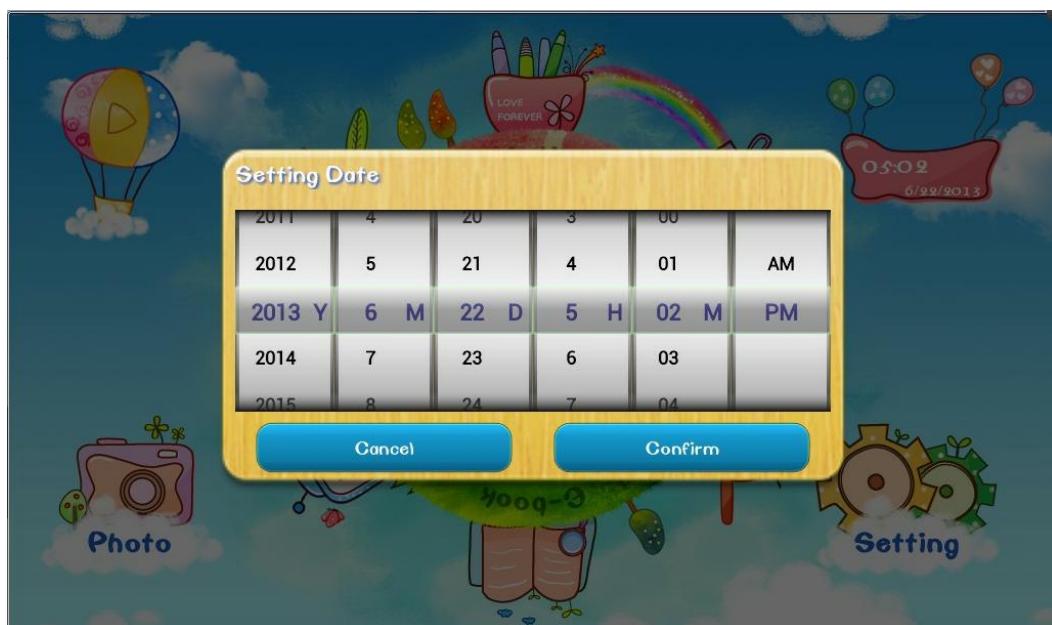

Click setting> setting Date, then you can see the interface and set the date.

1.2.9 System Setting



Click setting> system, then you can turn on/turn off the wifi, and you can adjust the volume and brightness.

1.2.10 Passwords Management



- (1) You need enter the passwords to modify to manage the parent control system
- (2) Click setting> parent> exit app to recover normal tablet PC (please notice the original password is : 1234)
- (3) If you want to return to children's interface, please click the App "children world".

1.2.11 Parent Management



- (1) modify the password
- (2) set the play time, rest time and reward times
- (3) set the prompt message

1.2.12 Application Management






click on any module ("Media ,Games, E-book,painting, Notes") to add the Apps
choose the APK which you want to share with your children

1.2.13 Browser Management



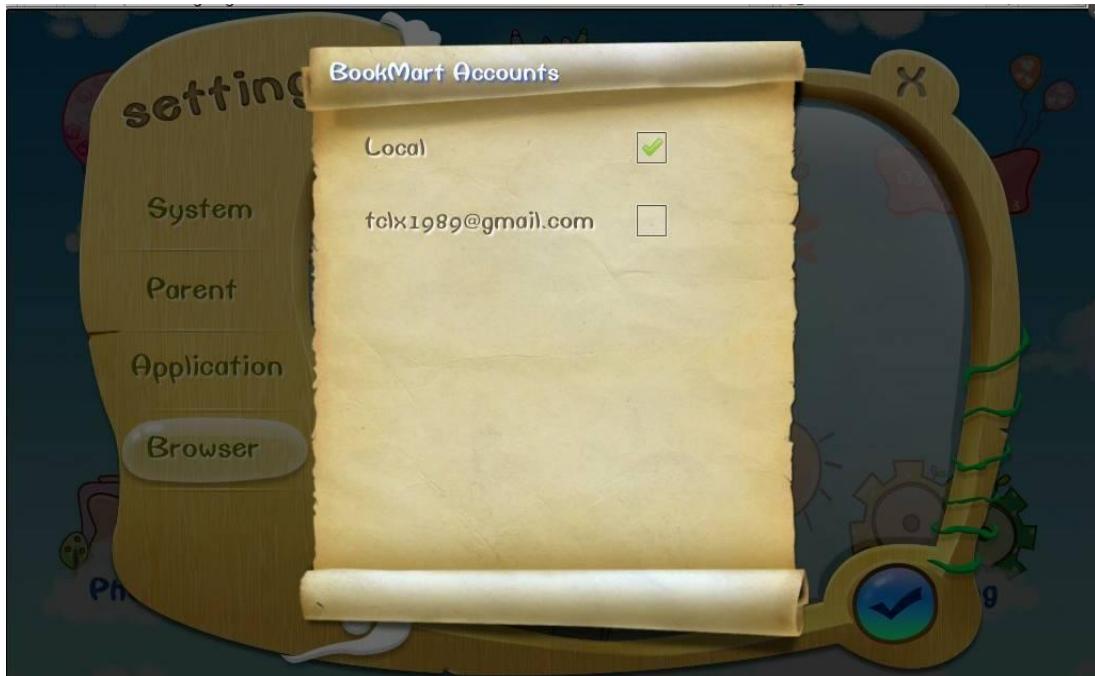


choose the “children limit mode”;

select the “Book Mart Account”;

The kids can browse the website that the parent share with them;

1.2.14 Lock screen Management

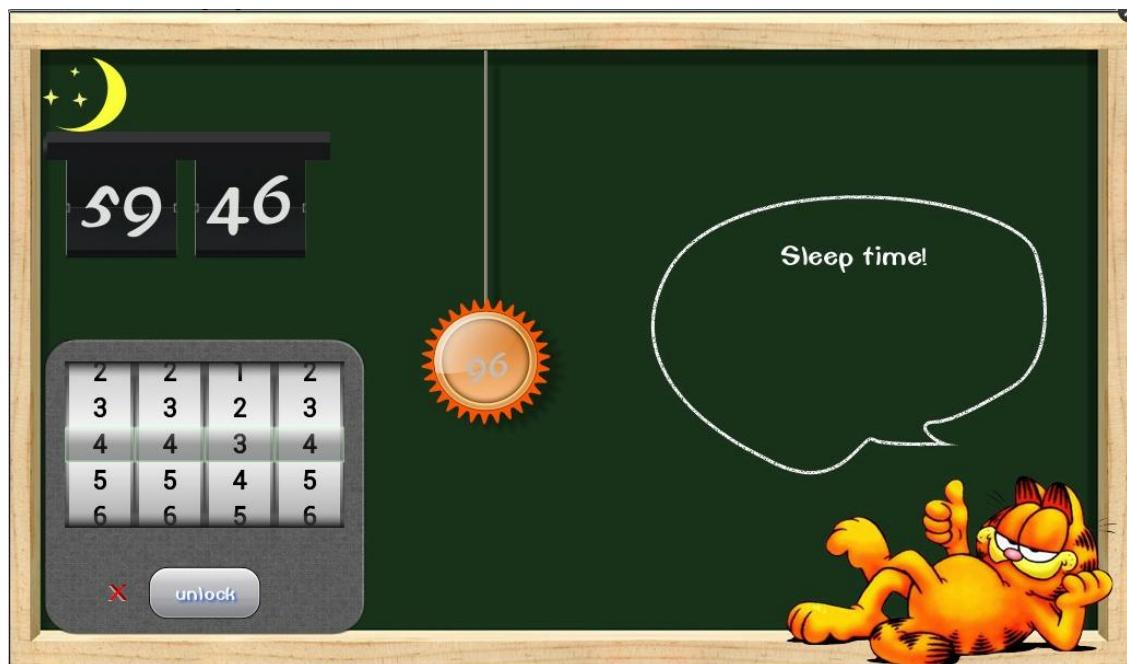

Show the Rest time countdown

show the passwords and rewards times

show the parent's prompt message for kids

1.3 Technical specifications

Size	195.5*130.5*15mm	
Weight	325g	
TN Display	7 inch Display	
PC Interface	High speed Mini USB	
OS	Android 4.4	
CPU	ARM Cortex-A9;	
GPU	Mali-400 MP GPU; Support OpenGL ES 2.0/1.1 and OpenVG 1.1	
Hard Drive Capacity	8GB	
Capacity Expansion	T-Flash kart 32GB(max)	
Music Function	Format	MP3、WMA、WMV、OGG、APE etc
		20Hz-20KHz
Video Function	Format	MKV、AVI、RM、MP4 etc.
	Max. resolutions	1920x1080
	Screen Ratio	4: 3、16: 9、full screen for optional
Photo Browse	JPG、BMP、JPEG、GIF etc.	
WIFI	Support	802.11b/g/n
	Transmission rate	Max 54Mbps
	Work Frequency	2.4GHz
Camera Function	0.3 Mp+2Mp Camera	
Working Temperature	-5-40°C	
Languages	Simplified Chinese、Traditional Chinese, English, Japanese, French, German, Spanish, etc	

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.