 


WIRELESS SPEAKER

PLEASE READ MANUAL BEFORE USE

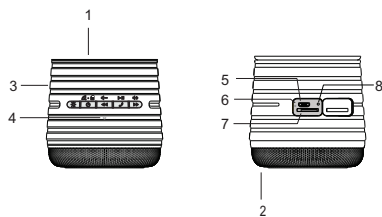

- | | |
|------------------------------|-------------------------------|
| 1. Mood Light | 8. Reset Hole |
| 2. Safety Light | 9. Light ON/OFF Button |
| 3. Bluetooth Speaker | 10. Power ON / Mode Change |
| 4. Bluetooth Indicator Light | 11. Prev. Song / Volume - |
| 5. USB Charging Port | 12. Hands Free / Play / Pause |
| 6. USB Charging Indicator | 13. Next Song / Volume + |
| 7. TF Card Slot | |

Charging your speaker

The speaker will 'beep' during playback or when the speaker is turned ON to indicate battery power is low. It is recommended to charge your speaker.

 
Insert one end of the USB cable into the 5V USB power adaptor and the other end to the Speaker USB charging port.

The red indicator light next to the USB charging port will light up showing the speaker battery is being charged. It will take approx. 4-5 hours for a full battery charge.

The USB charging light will turn GREEN once the battery is fully charged.

Make sure to disconnect the USB adaptor from the mains after charging.

Note:
Charging by PC USB port will take longer time.

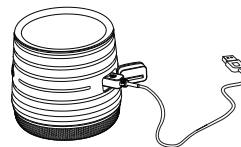

Bluetooth Pairing

- Press and hold the Power button (⏻) for 3 seconds to turn on the bluetooth speaker.

 
The Bluetooth indicator light (4) will start blinking (blue color).

- From your mobile device, go to 'Setting' icon and Select 'Bluetooth'. Turn on Bluetooth function and search for 'SUPIKA'.

- Select 'SUPIKA' for pairing. The speaker will play a sound when it is successfully connected.

- The Bluetooth Indicator light will stop blinking and remain in blue color.

- If the speaker is not paired within 10 minutes, it will go into standby mode.

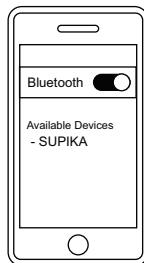

POWER ON/OFF the speaker

- Press and hold the POWER ON button (⏻) for 3 seconds to turn ON/OFF the speaker.

Playing Music (using Bluetooth)

- Press and hold the POWER ON button (⏻) for 3 seconds to turn on the speaker.

- Turn on Bluetooth function from the mobile device

- Play Music player app from mobile device.

- Press and hold the Vol + / Vol - to adjust to the desired volume level. The speaker will beep when the maximum / minimum sound level is reached.

- Press '◀▶' button once to advance to PREV / NEXT song.

- Press '⏸' to pause / resume song.

To play music using the TF card:

- Insert TF memory card into TF card slot.

- Press MODE button (⏻) and the speaker

will beep twice. The Bluetooth indicator light

will turn 'RED' from 'BLUE' color. The RED

light will start blinking and music from the

TF card will play automatically.

- The speaker support Mp3 and WAV files only.

- Press and hold the Vol + / Vol - to adjust to

the desired volume level.

- Press '◀▶' button once to advance to

PREV / NEXT song.



Incoming phone call / Hands free function

- Press '📞' to receive an incoming phone call.

- Press and hold '📞' button for 3 seconds to refuse an incoming call.

- To call back the last number you dialed, press '📞' button twice.

- Press 'Vol + / Vol -' to increase or decrease the volume respectively

- To hang up the phone call, press '📞' button once.

Safety Light & Mood Light

- Press '🌟' button once to turn on the Mood light to 'low light' mode.

The Safety Light at the bottom of the unit will also be activated.

- Press again to change the Mood light to bright light.

The Safety Light remain 'ON'.

- Press '🌟' button to change to Mood light function. The light will change to

different colors continuously over a period of time. The Safety Light remain 'ON'.

- Press '🌟' to stop at the desired mood light color. The Safety Light remain 'ON'.

- Press '🌟' to turn off the Mood light.

The Safety Light will also turn off.

Troubleshooting

- a) If the speaker and the mobile device cannot be paired, please try the following:-
- Make sure the speaker is unpaired with any other devices before pairing with the current device.
 - Make sure the connection distance between the mobile device and the speaker is less than 10 meters with clear vision and no barrier.
- b) Perform a hard reset in any of the following conditions:
- i) If the speaker button don't respond
 - ii) Battery cannot be recharged
 - iii) Music cannot be played

To perform a hard RESET, insert a paper clip or small pin into the RESET hole to reset the speaker system.

Technical Details

- Speaker Output Power : 5W / 4Ω
- Battery: 950mAh / 3.7V
- Charging voltage: 5V / 500mA
- Charging time: 2-3 hours
- Playback time: 3-4hours



FCC Compliance Statement

The device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does not cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving manual
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Model: CR328-811
FCC ID: 2AEIBCR328-811

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

JASKEY ELECTRONICS CO., LTD.