


<div data-bbox="133 68 522 491"> <h2>WIFI Fish Finder Operations Manual</h2>  </div>	<div data-bbox="599 58 1041 372"> <h3>1、PRODUCT OVERVIEW</h3> <p>Thank you for choosing Lucky WIFI Fish Finder.This WIFI Fish Finder is especially designed for amateur and professional fishermen alike,to find out the location of fish,depth and bottom contour of water.</p> <p>This WIFI fish finder can be used in ocean,river or lake and is fantastic for detecting schools of fish in any fresh water or salt water.This WIFI Fish Finder is based on Sonar technology, The WIFI transducer sends a sound wave signal ,the returned “ echoes ” are transmitted with WIFI technology to the IPHONE ,IPAD or other intelligent device,then all the underwater information is displayed on the screen,including the water depth,water temperature,bottom contour,fish location and depth.</p> </div>	<div data-bbox="1087 58 1532 282">  <div>fig-1</div> <div>fig-2</div> </div> <div data-bbox="1087 290 1532 491"> <h3>2、USING THE WIFI TRANSDUCER</h3> <p>The WIFI transducer is powered by built-in lithium battery; therefore, it is necessary to fully charge the battery through the charger. Firstly, unscrew the transducer, as shown in Figure 3: the charge port is in the middle; the red light is lit when charging, it presents the battery is charging, as shown in Figure 4; when the red light is off, it represents the battery is fully charged.Before using,press the power switch to power on the transducer, the blue light is lit, as shown in Figure 5,</p> </div>	<div data-bbox="1575 58 2017 372"> <p>it presents the transducer is on working, then sure screw the cap to prevent the water into .You can simply attach the WIFI transducer to the end of your fishing line and cast it into the water as you would a normal float or lure,then you can open you APP and you are ready to fish.</p> <p>NOTE:When casting the WIFI transducer into water,shock from abrupt contact with rocks will damage your WIFI transducer, we recommend using your WIFI transducer in water deeper than 1 foot only.</p>  <div>fig-3</div> <div>fig-4</div> <div>fig-5</div> </div> <div data-bbox="1575 370 2035 491"> <h3>3、INTELLIGENT DEVICE SETTING</h3> <p>After the WIFI transducer is guaranteed to be powered on and last 10 seconds, the device can be connected to the WIFI transducer, as shown in Figure 6; click on the setting, Wi-Fi will enter into the Wi-Fi network(WIFI Pass Word:12345678);</p> </div>	<div data-bbox="2063 58 2511 491"> <p>then select Fish Finder in the network, as shown in Figure 7; about 20 seconds later, it can be seen that the signal icon will appear on the top left corner of the device, it represents that WIFI transducer has been connected. At the moment, APP can be used. Click on the right arrow</p>  <div>fig-6</div> <div>fig-7</div> <div>fig-8</div> </div>	<div data-bbox="2551 58 3008 491"> <h3>4、APP DISPLAY VIEW</h3> <p>The format of underwater information showed by thisAPP is very simple and understandable. The display information of the whole screen is shown in Figure 9. The first button represents operation mode; the second button represents simulation and demonstration; the third button represents the parameter setting and the fourth button represents the language setting. The function of each button will be introduced in details in the following chapters.</p>  <div>fig-9</div> </div>
<div data-bbox="105 544 553 717"> <h3>5、SIMULATION MODE</h3> <p>Demo mode is to simulate the operation mode; in addition to the depth,temperature and fish information generated by the software,other functions are consistent with the practical effect in use, and can be provided for users to learn this software accordingly. In demo mode, it is feasible to close WIFI, and it is unnecessary to connect the software with the transducer. See Figure 10.</p> </div>	<div data-bbox="599 544 1041 923">  <div>fig-10</div> </div>	<div data-bbox="1087 544 1532 989"> <p>How to return to the main interface menu: In simulation demo operation mode, click on the effective area on the screen (expect for the area beyond the top status bar), then the return button can be popped up from the bottom of the status bar; click on the button, then return to the main interface</p> <h3>6、OPERATION MODE</h3> <p>Click on in the main interfaces shown in Figure 9, and enter the operation mode. If the transducer can't be connected by WIFI, then NO WIFI will be prompted. The display content of operation mode is consistent with that of the simulation demonstration; in other words, the water depth, water temperature and fish information can be constantly obtained from WIFI transducer, and constantly updated from right to left; when the underwater situation changes a lot, the underwater profile diagram will be formed as shown in Figure 11. Next, each display unit in Figure 12 will be made detailed introduction.</p> </div>	<div data-bbox="1575 544 2017 923">  <div>fig-11</div> <div>fig-12</div> </div>	<div data-bbox="2063 544 2511 959"> <p>a) Water depth: Depth detection ranges from 0.6 – 45m (2–135Ft), the precision is 0.1 m (0.3 ft). Depth is expressed as one decimal point.</p> <p>b) Water temperature: The detected temperature refers to the water surface temperature; the temperature sensor on the probe keeps in touch with the water surface. The temperature range is from minus 9.9 ℃ to 60.0 ℃, the precision is 0.1 ℃; the corresponding Fahrenheit degree should range from 14.2 ° to 140 ° .</p> <p>c) Calibrated scale: Based on this scale, the user can intuitively check the water depth and the depth of fish group, and combine with the depth range to partially enlarge for use, so as to achieve many ways for viewing, and maximally watch the interesting information of fish group within the depth range.</p> </div>	<div data-bbox="2551 544 3008 959"> <p>d) Zoom upper limit: This value represents the currently displayed upper limit value, and the value is jointly determined by the depth range and ZOOM. When the local zoom is set as OFF, the upper limit value of zoom is 0; when zoom value is set as other values, the upper limit value of zoom is equal to the difference between the lower limit value and zoom value; when the lower limit value of zoom is less than zoom value, the upper limit value of zoom is 0.</p> <p>e) Zoom lower limit: The value indicates the currently displayed lower limit value, and the value is determined by the depth range. When the depth range of the parameters is set as AUTO, then the value is not more than the current minimum value in the list of the water depth range (the value is not more than the minimum value of current water depth range among 1m–45 m); when the depth range is set as the other values, then the lower limit value of zoom is the setting value; in other words, when the lower limit value of zoom is 5 m, the content above 5m is only displayed.</p> </div>
<div data-bbox="105 1030 553 1423"> <p>f) Fish icon: When the fish is detected by the sonar, and the fish icon is on; then the big fish, medium–sized fish or small fish can be displayed respectively according to the size of fish.</p> <p>g) The depth of fish: The value indicates the depth where the fish is located.</p> <p>h) Underwater bottom contour: Underwater bottom contour represents the change of the underwater depth within the detection time. The underwater bottom contour is updated from right to left, and the refresh rate of the parameters can be set as 1~5; and the users can select the appropriate refresh rate according to their requirements.</p> <p>i) Capacity of WIFI transducer power: The icon represents the capacity of WIFI transducer power, and shown as 0–4. WIFI transducer can be used for about five hours if it is fully charged.</p> </div>	<div data-bbox="599 1030 1041 1308"> <p>j) Sensitivity: The icon represents the sensitivity value of the transducer; the user can modify the sensitivity value in the parameter settings, and can be reflected in the icon after modification.</p> <h3>7、PARAMETER SETTING</h3> <p>Click! On in the main interface shown in Figure 9, and enter the parameter setting function, as shown in Figure 13; the functions are shown from top to bottom in turn:</p> </div>	<div data-bbox="1087 1030 1532 1272">  <div>fig-13</div> <div>fig-14</div> <div>fig-15</div> </div> <div data-bbox="1087 1280 1532 1439"> <p>1) Sensitivity: Sensitivity is set as 1-5; this option is used to adjust the sensitivity of the sonar, as shown in Figure 14.</p> <p>2) Depth range: The depth range setting is used to set the displayed maximum depth; i.e. the lower limit value of the scale, as shown in Figure 15. If the depth range is set to be automatic, then the lower limit value</p> </div>	<div data-bbox="1575 1030 2017 1439"> <p>is selected automatically according to the depth value; in other words, the lower limit value is greater than the minimum value of the depth among 1m-45m). If the depth unit is set as Ft, then the values in the table are 3Ft-135 Ft.</p> <p>3) ZOOM range: ZOOM setting is used to set the local zoom value; in other words, determine the upper limit value of the calibrated scale. The upper limit value = the lower limit value of the depth - ZOOM value; if the lower limit value of the depth is less than the ZOOM value, then the upper limit value is 0. If ZOOM option is off, then the upper limit value is 0; if ZOOM value is any value among 1~45, according to the formula: the upper limit value = the lower limit value of the depth – ZOOM value, then the currently displayed area is the ZOOM value. For instance, the depth range is set as 15M, ZOOM value is set as 10M, then the lower limit value of the calibrated scale is 15M, the upper limit value is 5M, which is the difference between 15 and 10. In other words, the</p> </div>	<div data-bbox="2063 1030 2511 1358"> <p>current layout depth ranges from the underwater 5M to 15M, and the content beyond this area will not be displayed. See Figure 16.</p>  <div>fig-16</div> <div>fig-17</div> <div>fig-18</div> </div>	<div data-bbox="2551 1030 3008 1417"> <p>4) Shallow alarm: 4) Shallow water alarm setting is used to set the value of shallow water alarm, as shown in Figure 17; when the detecting depth is less than the setting value, the software will alarm, and display "depth is shallow," so as to remind the users of avoiding the ship stranding.</p> <p>5) Fish icon: Fish icon setting is used to set whether the fish icon is displayed or not; if it is on, then the fish icon and the depth of fish is displayed; if it is off, the only the seagull shape is displayed, and the depth of fish will not be displayed. See Figure 18.</p> <p>6) Fish alarm: Fish alarm setting is used to set whether the fish alarm function is on or not. If the function is on, then the software will alarm and prompt the appearance of fish. This option can be set to be:</p> </div>
<div data-bbox="105 1516 553 1943"> <p>A) off: there is no alarm when the fish appears.</p> <p>B) Big fish: the software will alarm when the big fish is detected, and will not alarm for medium-sized and small fish.</p> <p>C) Big fish + medium - sized fish: the software will alarm when the big fish and medium-sized fish are detected, and will not alarm for the small fish.</p> <p>D) Big fish + medium- sized fish + small fish: the software will alarm once the fish are detected. As shown in Figure 19.</p>  <div>fig-19</div> <div>fig-20</div> <div>fig-21</div> </div>	<div data-bbox="599 1516 1041 1963"> <p>7) Unit: Unit setting is used to set the depth unit with the metric system (M) or British system (Ft), and the temperature unit is Celsius or Fahrenheit. As shown in Figure 20.</p> <p>8) Chart speed: The chart speed setting is used to set the refresh rate from right to left, and can be set as 1to 5 in accordance with the level. As shown in Figure 21.</p> <p>9) Each-screen data: Each-screen data setting is used to set as shown in Figure 22.</p>  <div>fig-20</div> <div>fig-23</div> </div>	<div data-bbox="1087 1516 1532 1697"> <h3>8、LANGUAGE SELECTION</h3> <p>In Figure 9, click on the button in the main interface, then the language setting can be done, as shown in figure 23; Can be selected Russian, German, Dutch, Spanish, French, Japanese, Korean, Hungarian, Portuguese, polish, English, Chinese, and the setting is done successfully; click on Fish Finder button on the top left corner, and then return the main menu for other operations.</p> </div>	<div data-bbox="1575 1516 2017 1782"> <h3>9、PRODUCT SPECIFICATION:</h3> <ol style="list-style-type: none"> 1.) Sonar frequency: 125KHz 2.) Sonar coverage: 90 degrees 3.) Depth capacity: 0.6M-45M(2Feet-135Feet) 4.) Power: 3.7V rechargeable lithium battery 5.) Running time: 5 hours fully charging 6.) Charger: 5V, 1A 7.) WIFI range: 50M 8.) WIFI frequency: 2.4GHz 9.) Charging indicator: red light 10.) Working indicator: blue light </div>	<div data-bbox="2063 1495 2511 1951"> <h4>FCC Statement</h4> <p>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help. <p>To assure continued compliance, any changes or modifications not expressly approved by the party.</p> </div>	<div data-bbox="2551 1516 3008 1802"> <p>Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices). This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:</p> <ol style="list-style-type: none"> (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. <p>FCC Radiation Exposure Statement:</p> <p>The equipment complies with FCC Radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.</p> </div>