




Questions, problems, missing parts?

 
Before returning to your retailer, call our customer service at 1-800-887-6326
Monday – Friday 9:00 a.m. – 5:00 p.m. CST

PACKAGE CONTENTS

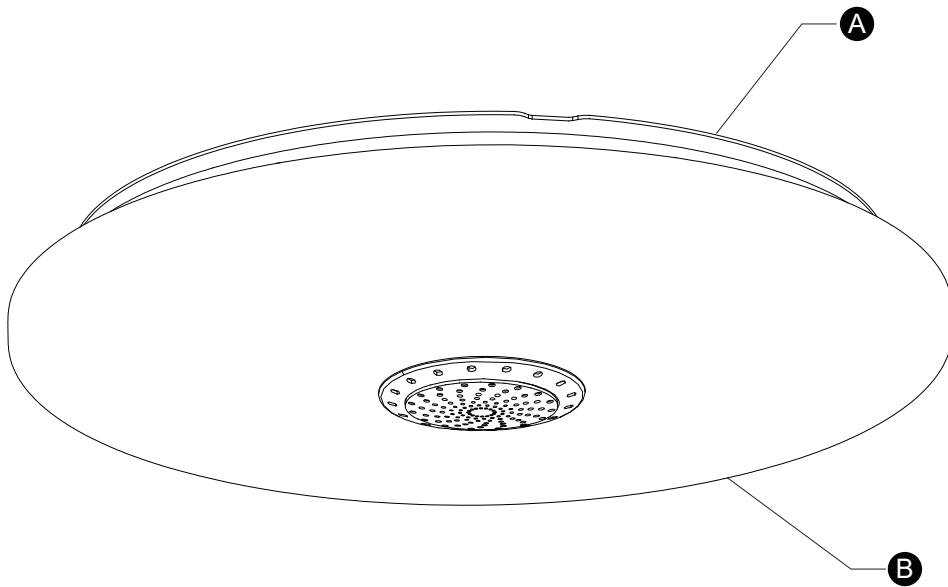


HARDWARE CONTENTS Note: Hardware not shown actual size.

AA




Mounting Strap
X1

 BB



Mounting Screw
X2

 CC



Short Screw
X2

DD



Wire Connector
X3

! SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING

- Turn off electricity at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching off circuit breaker).
- Be careful not to damage or cut the wire insulation (covering) during fixture installation. Do not permit wires to contact any surface having a sharp edge. To do so may damage or cut the wire insulation, which could cause serious injury or death from electric shock.
- LED electronics can be damaged by electro static discharge (ESD) shock. Before installation, discharge yourself by touching a grounded bare metal surface to remove this hazard. To avoid damage, do not touch the LED module.

CAUTION

- All electrical connections must be in agreement with local codes, ordinances or the national electric code (NEC). Contact your municipal building department to learn about your local codes, permits and/or inspections.
- Risk of fire – most dwellings built before 1985 have supply wire rated for 140°F/60°C. Consult a qualified electrician before installation.
- Do not connect this fixture to an electrical system that does not provide a means for equipment grounding. Never use a fixture in a two-wire system that is not grounded. If you are not sure your lighting system has a grounding means, do not attempt to install this fixture. Contact a qualified, licensed electrician for information with regards to proper grounding methods as required by the local electrical code in your area.

PREPARATION

Before beginning assembly, installation or operation of product, make sure all parts are present. Compare parts with package contents list and diagram on previous page. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.

Tools Required for Assembly (not included): Screwdriver, Phillips Screwdriver, Pliers, Electrical Tape, Wire Cutters, Safety Glasses, Ladder.


This fixture is dimmable with a forward phase electronic dimmer. Dimmers tested to be compatible with this fixture are the Lutron: TGCL-153PH, MACL-153MH, SCL-153P, DVWCL-153PH.

If you are unfamiliar with electrical installation, it is recommended to use a qualified electrician for your installation(s).


ASSEMBLY INSTRUCTIONS

Turn off the power at fuse or circuit box.


1. Attach two short screws (CC) to the holes on the mounting strap (AA). Thread them in part way: 2 to 3 turns only.

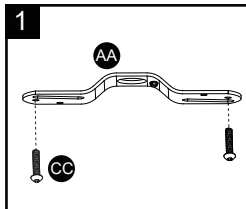


2. Attach the mounting strap (AA) to the outlet box using two mounting screws (BB).

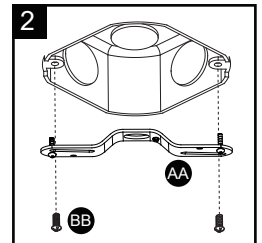

3. Connect fixture black wire to house black wire and fixture white wire to house white wire using wire connectors (DD) provided. Connect the copper wire or green/yellow wire on the light fixture to the mounting strap (AA) by securing it with the preinstalled grounding screw, then connect it to the house grounding wire with wire connectors (DD). Tuck all the wires into outlet box.

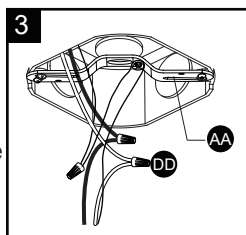


4. Remove the insulated paper before installing the fixture.

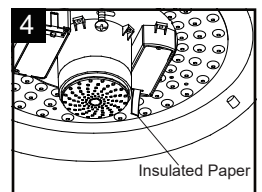


ASSEMBLY INSTRUCTIONS (continued)

5. Attach the ceiling pan(A) to the mounting strap (AA) by inserting two screw (CC) heads into the key holes and rotate the ceiling pan (A) until it is locked in place. Then secure the screws tightly.

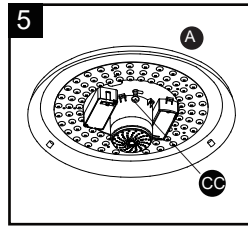


6. Attach the plastic shade (B) to the ceiling pan (A) by aligning studs and slots, then turn it clockwise until it is locked in place.

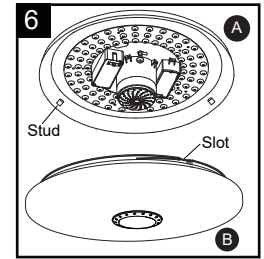

Turn on the power at fuse or circuit box.

Adjusting the color Temperature of the Light

Customizing the color temperature of LED light by moving toggle switch.

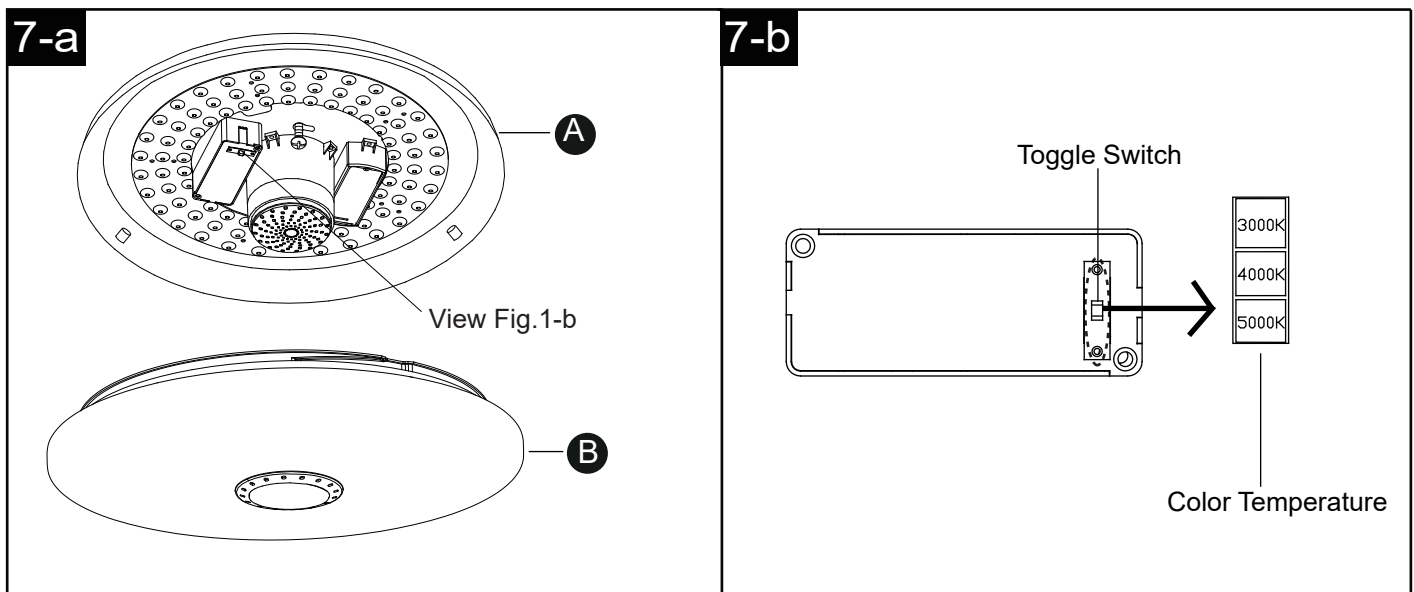


- Move the toggle switch to 3000K, the color temperature is set at 3000K.
- Move the toggle switch to 4000K, the color temperature is set at 4000K.
- Move the toggle switch to 5000K, the color temperature is set at 5000K.

Notice: Please move the toggle switch to make your selection before attaching plastic shade (B) to the ceiling pan (A).

CHANGING BATTERIES

Replacing Battery Steps:

- Remove the battery cover from the fixture with screwdriver.
- Replace the old battery with a new battery 7188BB.
- Re-attach the battery cover to the fixture with screwdriver.


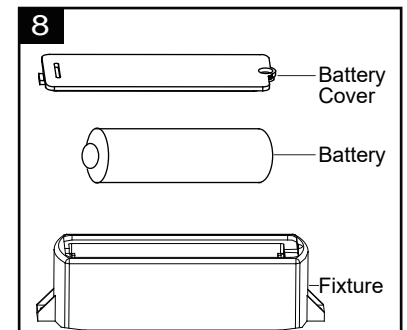


OPERATING THE DOWNLIGHT AND BLUETOOTH SPEAKERS

INSTRUCTIONS:

1. The "Red" indicator light is on when the battery is charging, and will turn off when the battery is fully charged.
2. The "Blue" indicator light shows the following status:
 - "Slow Flash" - Awaiting to connect to the device.
 - "Stays on" - Device connected.
 - "Fast Flash" - Battery Power is Low.
 - "Blue Light Off" - Battery is flat.

There's a "Reset" button on the light.
Please use a unwound paper clip to press it.
When the button is pressed, the current Bluetooth connection will be disconnected and await for new device to set up connection

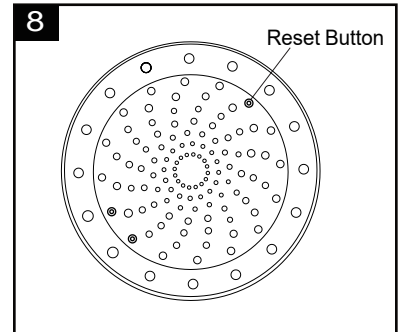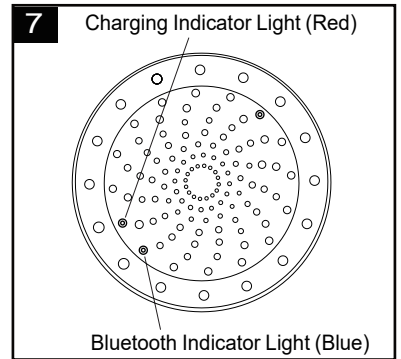


Bluetooth Connection Steps:

1. Once turn on power, the Bluetooth Speakers are enabled and ready to connect.
2. Enable Bluetooth on your smart device.
3. Wait for the smart device to detect the ceiling light and then select it to pair the device to the speakers. When successfully paired, the speaker will response "Connected".
4. Play music from your device while connected to the ceiling light to enjoy sound from the Bluetooth speakers.
5. Disconnect the ceiling light from Bluetooth on your smart device, or disable Bluetooth functionality on your smart device when sound is not wanted from the ceiling light speakers.

NOTICE:

1. Bluetooth enabled smart devices typically have a range of approximately 33 ft. (10 m). Attempting to pair your smart device to the Bluetooth speakers beyond the intended range can result in poor audio quality, drop-outs, or failure to connect.
2. Only one device can be connected to the Bluetooth speakers at a time.
3. The speaker includes a battery (18650 type 2000mAh). The speakers can continue working even turn off the light by dimmer or switch. If the speaker battery run out of power, it will blue indicator flashes quickly, please turn on the light right away and the battery will start charging automatically.

The following parts are available for reorder if damaged or missing. Call our toll free at 1-800-887-6326.

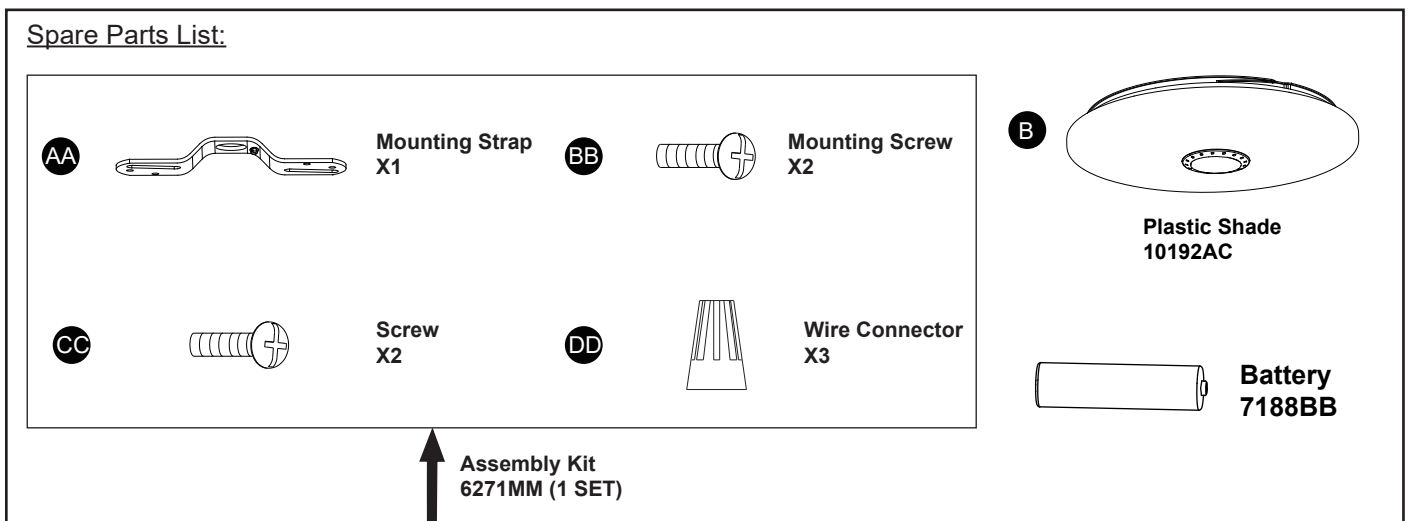

CARE AND MAINTENANCE

- To clean, turn off and wipe with a damp, non-abrasive cloth.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
The fixture will not light	The power is off.	Check to ensure the power supply is on.
	The circuit breaker is off.	Check to ensure the circuit breaker is in the on position.
	There is a bad connection.	Check to ensure proper wire connections are made. Contact a qualified electrician.
	There is a defective switch.	Contact a qualified electrician.
The Bluetooth speakers will not pair with a smart device.	The smart device is out of range of the Bluetooth speakers.	Be sure the ceiling light is within 33 ft. (10m) of the smart device.
	The smart device is not discoverable.	Turn on "Discoverable" mode on the device to allow the ceiling light and smart device to recognize each other
	Bluetooth speaker reset / interference is causing confusion with the connection.	The Speaker will be in "Reset" mode when run out of battery and press "Reset" button on the light. In this case, please remove ceiling light from the smart device paired list and rediscover it. Then pair the Bluetooth speaker with smart device again.
	Dead battery	Turn on the light right away and the battery will be charging automatically. Then pair the Bluetooth speaker with smart device again.
There is no sound or poor sound quality from the speakers	Music setting on the smart device need to be adjusted.	Turn music on from the smart device. Turn volume up from the smart device.
	The Bluetooth device is too far away from the ceiling light speakers	Move the device closer to the ceiling light and speakers.
	Interference is causing confusion with the connection	Please reset speaker first. Re-pair the device with ceiling light. When successfully paired, the speakers will indicate "Connected". Power off other Bluetooth devices within a 33 ft. proximity range. Only one device can be connected to the ceiling light and speaker at a time.

If unable to fix any of the above issues, please consult a certified electrician.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

FIVE-YEAR LIMITED WARRANTY: If, during normal use, this PATRIOT LIGHTING® lighting fixture breaks or fails due to a defect in material workmanship within five (5) years from the date of original purchase, simply bring this lighting fixture with the original sales receipt back to your nearest MENARDS® retail store. At its discretion, PATRIOT LIGHTING® agrees to have the product or any defective part(s) repaired or replaced with the same or similar PATRIOT LIGHTING® product or part free of charge, within the stated warranty period, when returned by the original purchaser with original sales receipt. This warranty; (1) excludes expendable parts including but not limited to light bulbs; (2) does not cover damage that has resulted from abuse or misuse; and (3) does not cover any losses, labor, injuries to persons/property or costs. This warranty does give you specific legal rights and you may have other rights, which vary from state to state.



Questions, problems, missing parts?

Before returning to your retailer, call our customer service at 1-800-887-6326
Monday – Friday 9:00 a.m. – 5:00 p.m. CST