


音乐镜使用说明书

Music lamp mirror

D8501M

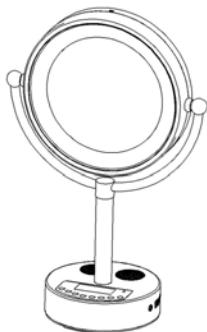

图片只作为参考，与实际机器如有误差，请以实际机器为准！

本说明书请妥善保管，如有更新恕不另行通知！

The picture is only for reference, any differences, please refer to the actual machine.

please properly keep the instructions, and if have update without prior notice

目录 Catalogue

| | |
|--------------------------------------------------------------------------------------------------|----|
| 介绍 Introduction | 2 |
| 注意事项 Precautions | 2 |
| 按键及插孔定义 The definition of buttons and jack | 4 |
| 供电模式 (两种供电模式) Power supply mode(2 ways)..... | 7 |
| 蓝牙配对模式 Bluetooth Pairing Mode | 8 |
| 注意事项 Precautions | 9 |
| 用户使用免提 Hands- free call using..... | 10 |
| 接听电话 Answer calls | 11 |
| 挂断电话 Hang up calls | 11 |
| 拒接电话 Refuse calls..... | 11 |
| 安卓系统手机设备不能支持发出电话原有铃声 It cannot be the same ring tones when using a phone with Android system. | |
| 12 | |
| 时钟模式 Clock Mode | 12 |
| AUX IN 模式 AUX IN Mode..... | 12 |
| FM (收音) 模式 FM(Radio) mode..... | 12 |
| 关机 Power off | 14 |
| <u>开</u> 机 Power on..... | 14 |
| 支持手机 Supporting phones..... | 14 |
| 产品规格 Product specifications | 15 |
| 简单故障排除指南 Guide of simple troubleshooting..... | 16 |

介绍 Introduction

此产品是一个支持蓝牙立体声音乐播放，FM收音，带灯光，U盘播放音乐，蓝牙接听电话免提扩音为一体的化妆镜子音响，采用数字信号处理技术，具有回音消除与噪声压制功能，适用于办公室、家庭等不同的环境，可以无线连接到大部分支持蓝牙功能的其它设备及手机做高质量的免提通话与播放其它设备及手机中的立体声音乐。

This product is a makeup mirror which support Bluetooth and U flash disk for stereo music player, FM radio, strip light, answering the phone and hands-free amplification , apply for the digital signal processing technology, with echo elimination and noise suppression function. It's suitable for different environments such as offices, homes, and can widely connected to other equipment and mobile phone which support bluetooth function to do high quality hands-free calling and play music from other equipment and cell phone.

注意事项 Precaution

首先对您使用本公司的数码音响产品表示感谢！

Firstly, we're appreciate for your support of this product.

在使用之前，请先阅读说明书，正确使用此产品。为了更好的服务，本用户手册的内容可能变更，因为产品的性能和功能而发生变更，将不做另行通知。

Please refer to the User's Instructions before using it properly. The contents stated herein may be modified from time to time for better service as the product properties and functions are changed and this company will not notify you otherwise.

为了维护良好的性能，请勿在太冷、太热、多尘或潮湿的地方使用，如下情况更需注意：

To maintain the functions of product, never use it in too cold, too hot, too dusty or humid places, especially:

- 1、潮湿或易有水滴、水花飞溅及水浸泡的作业环境
- 2、加热器或高温作业的环境
- 3、曝晒于阳光下的环境
- 4、容易跌落的环境
- 5、请勿擅自拆开组合音响，则会失去保修的权力
- 6、 **Moist or underwater places**
- 7、 **Near the heater or hi-temperature service**
- 8、 **Solarization**
- 9、 **Places apt to fall**
- 10、 **Never disassemble the combination audio,Otherwise, it may invalidate the warranty**

警告



1. 请注意防水，产品不应该遭受水滴或水溅，机身上不能放置诸如花瓶一类装满液体的物品，以免产生意外。



2. 为避免发生火灾或触电事故，请检查电网电压是否与本机规定的电压相同。

Warning




1. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.



2. Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

按键及插孔定义 The definition of buttons and jacks

按键共有 8 个；插孔共 3 个，定义如下：
There are totally 8 keys, 3 jacks, defined as following:

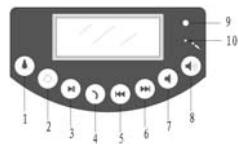

1、：短按开灯 / 短按关灯，(注：按键响应时间为 0.5S,不能连续快按)
press shortly to light on /press shortly to light off (Note: Button response time is 0.5 S, and it cannot quick pressed continuously)

2、：电源开关，短按开机、再短按功能转换，长按关机，功能转换顺序为：
开机—时钟—USB—蓝牙—FM 收音—AUX

Power supply switch: Press shortly for power on, and press shortly again for function transformation.

Press long for power off, the turn for functions transformation is
Power on---Clock—USB—Bluetooth—FM radio ---AUX

3、：在 USB 状态下，短按播放/暂停。在 FM 状态下，短按播放/暂停、长按搜索 FM 电台，搜索完毕会自动保存搜索到的电台。在蓝牙状态下，短按播放/暂停、长按 3S 时间会自动配对设备。在 AUX 状态下，短按播放/暂停 In USB state, press short to play/pause. In FM state, press shortly to play/pause, press long to search FM stations, and save

the searched stations automatically after finish to search. In Bluetooth state, press shortly to play/pause, press long for 3 S to pair devices automatically. In AUX state, press short to play /Pause.

4、：在蓝牙状态下，来电时短按接听电话/挂断电话、在来电时长按 1S 时间拒接电话、常态下长按3S 拨打上一个拨打过的号码(回拨功能)In Bluetooth state, press shortly to answer calls/ refuse calls when call's coming. ,and press long for 1 S to refuse calls. In standard state, Press long for 3S to callback functions(only for the subscriber you dialed.)

5、：在 USB 状态下，短按上一曲、长按快退;在 FM 状态，短按是上一个电台、长按向上搜索电台; 在蓝牙状态，短按上一曲。In USB state, press short to prev, press long to fast backward. In FM state, press short is prev station, and press long to search prev stations. In Bluetooth state, press short is prev song.


6、：在 USB 状态，短按下一曲，长按快进;在 FM 状态，短按是下一个电台，长按是向下搜索电台;在蓝牙状态，短按下一曲 In USB state, press short to next, press long to fast forward. In FM state, press short is next station, and press long to search next stations. In Bluetooth state, press short is next song.

7、：短按音量减小，长按快速减小音量 Decreasing the volume when press shortly, and decreasing volume rapidly when press long.

8、：短按音量加大，长按快速加大音量 Increasing the volume when press shortly, and increasing volume rapidly when press long.

9、蓝牙指示灯：蓝牙在搜索过程中，指示灯快闪，当配对好后 1S 时间闪一次 The blue LED indicator light: it will flicker quickly during the connection and pairing of Bluetooth, and then will flicker every 1 S when success.

10、：电话免提通话话筒 Microphone for hand-free call.

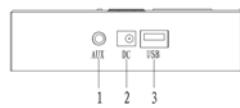

1、AUX：3.5mm 插头连接外接音源输入插孔 3.5mm plug connection to outer sound source.

2、DC：直流 5V 供电，连接外置电源适配器 DC 5V for external power adaptor supply for connection..

3、USB : 机器连接电源适配器状态下开机后, 用 USB 线连接手机, 可给手机

充电; 插 U 盘可播放音乐。Phone can be chargeable when connect to USB cable, and it can play music when insert U flash disk.

注: 在电池供电的情况下, 不可以用 USB 连接手机充电和 U 盘播放音乐两个功能。

Note: It cannot be chargeable by USB cable and play music by U flash disk when power supply by battery.

电话免提通话话筒: Phone hands-free receiver

 : 设计位于底座的顶部右侧位置 (一小孔) It is designed on the right and top side of the product.

注: 为保持正常免提通话质量, 请尽量对准对讲机对话, 用户在距离机器1米范围内通话为佳。 To maintain the high quality of hand-free call, calling in 1 metres distance away from product will be best for users.

供电模式 (两种供电模式)

1 机器如果在户外使用, 打开机器底部的电池门, 按正负极将 4 节 AA 电池装入电池箱内供电。

If you use it outdoors, please open the battery cover at the bottom of machine, and then put 4 pcs AA battery for power supply.

备注: 对于长时间使用 4 节 AA 电池致使电量耗尽, 用户可以自行更换相同规格的电池使用。并把旧电池环保回收处理。

Remarks:

If 4 pcs AA battery are running out, user can replace the same specifications of the battery, and do recycling for the useless battery.

2 底座 DC 接口, 接入随机匹配的电源适配器供电。

Access to a random matching transformer for power supply by DC5V jack.

3 电池使用寿命: 普通碱性电池若每天正常使用 15 分钟, 大致可使用 20 天。当电池的电量低于一半时 (3.3V), 音响的功能不能正常启动。但灯可以正常使用至电池的电量全部消耗。

The lifespan of battery: using 15 minutes every day by regular alkaline battery, the lifespan is about 20days. When the battery quantity is less than a half(3.3V), acoustic function cannot be start, but the light can normally use, until the battery is run out.

为了确保机器能正常工作, 请尽量使用电源适配器供电及及时更换电池。

In order to make the functions properly work, please replace the new AA battery in time or use the power adaptor.)

蓝牙配对模式 Bluetooth pairing mode

有两种状态可以进入此状态There are 2 status can be access to this mode.

1. 在搜寻模式或待机模式, 长按 “▶||” 键

1. Press “▶||”shortly in searching or standby mode.

2. 在第一次使用, 开机时2. The first time use when power on:

- 1). 将手机放在相距 3 米内的位置
1) Put mobile phones within 3 metres apart.
- 2). 长按3S时间 “▶||” 键，蓝灯开始快闪烁，这时即进入配对状态
Press “▶||” shortly, the blue indicator will be flicker quickly and then access to the pairing status.
- 3). 激活蓝牙手机的蓝牙功能，使手机开始寻找蓝牙装置（具体请参照手机使用说明）
3) Activate bluetooth function of mobile phone , and cell phone begin to search for bluetooth devices (specifications, please refer to cell phone instructions)
- 4). 从手机已搜寻到装置中选取 “Danielle Music Mirror”
4) Selecting “Danielle Music Mirror” in the searched devices from phone.

- 5). 按手机返回键退出手机菜单，确定和手机间距在 10 米内且无障碍物，此时可以通过机器播放音乐。
Press the return key of phone to exit the menu. Make sure there are without obstacles which in 10 meters away, and then can play music by the machine.

注意事项

- 1、如果配对成功设备，本机将自动进入连接模式。（如同时有多台已配对成功的设备在场，机器只会连接到最后一台已连接过的设备）
1. The machine will access to connecting mode if pair successfully. (As there are many machine have been successfully paired, devices present will only connect to finally a connected device)
- 2、如果配对设备数超过了最大容量（最大 8 个），则机器将自动清除所记忆的第一台设备。

2. If the paired devices are more than 8 pcs, the machine will be automatically remove the memory of the first equipment.

3、个别不同型号版本的手机及设备连接本机蓝牙后，会在手机及设备的屏幕的右上角显示一个电压电量的图标（此图标为手机自带，用户在使用连接本机器蓝牙播放时可以忽略它）
3.An icon of electric quantity will show at the right top of the mobile screen due to the different versions for some special phones and devices after connecting to Bluetooth of this machine. (Scheme comes with the icon for this machine, the user can ignore it when connecting with machine by bluetooth to play)

用户在蓝牙音乐播放模式下 In playing music mode by bluetooth

短按或长按“”或“”键对声音大 / 小进行调整。
Press  or  shortly or long for sound controlling.

短按“”键进行播放 / 暂停操作。短按“”或“”键可以上下选曲。
Press  shortly for play/ pause transformation.
Press  or  shortly to choose prev or next.

用户使用免提 Hands- free call using

开机后，短按  键切换蓝牙状态下，指示灯开始快闪，当与设备配对好后，指示灯慢闪，当来电时只要短按  可以接听电话，当在其它状态下（MP3、FM、LINE）来电，机器会在 3 秒内自动切换到蓝牙模式下，只要按下  可以接听电话，当挂断

电话后或拒接电话后，机器会在 3 秒内自动切换到蓝牙跳回前的模式。Press  shortly to change to bluetooth status when power on, and then the indicator light will flicker quickly. press  shortly to answer calls when the light flicker lowly when pair successfully. ,

When in the other state (MP3, FM, LINE) calls, the machine will automatically change to bluetooth mode in 3 s, simply pressing can answer the phone. When hang up the phone or refuse the phone, the machine will automatically switch to the bluetooth jump back to the former model in 3 s.

接听电话 Answer calls

在音乐播放模式当手机来电话时，机器喇叭发出电话铃声，短按“”键来接听电话。In the music playback mode when coming calls, the machine speaker is ringing, shortly press "" button to answer the phone.

挂断电话 Hang up calls

当免提在通话状态时，短按“”键挂断电话。重新回到音乐播放模式 In the hands-free phone state, shortly press "" button to hang up the phone. Back to the music playback mode

拒接电话

当手机来电话时，长按“”键1S时间拒接电话 When coming calls, long press "" button more than 1 seconds to refuse.

安卓系统手机设备不能支持发出电话原有铃声

It cannot be the same ring tones when using a phone with Android system.

安卓系统市面上的设备原系统版本不一，本机器系统无法兼容，所以只能发出单一的系统内置的音乐。

As the Android devices have many different kinds of versions in the market , and the machine system is not compatible, so only emit short of monotony which is built-in the system.

AUX IN 模式 AUX IN mode

只要使用 AUX 线接入到 AUX 插口，系统将自动切换到 AUX 状态下，进入 AUX 模式，此时用户可以短按或长按“”或“”键对声音大/小进行调整，短按 \blacktriangleright 静音，再短按解除静音

As long as you use AUX IN line to access to the AUX IN, the system will automatically suspend the bluetooth, and blue LED quench, and then enter the AUX IN mode, the user is able to get a short or long press "" or "" button to adjust sound loud/down.

当用户把 AUX 线完全从 AUX 插口拔出后，系统重新进入下一个模式

When the user pull out AUX IN line completely from AUX IN, The system back into the bluetooth search pattern, search the last time connection device

时钟 模式 (12 小时制) Clock Mode(12 hours system)

A、 时钟调节：每次开机第一次会进入时钟状态下，此时短按“”键，此左边的数字开闪，短按“”或“”键调节小时，再短按“”键，在边开如的数字开始闪，短按“”或“”键调节分，再短按“”键确定后跳到时钟下

A. clock adjustment: the first time of power on every time, will enter the clock mode, short press the "⌚" key at this time, the digital on the left side will flash, short press the "◀" or "▶" button to adjust the hour, then short press "⌚" button, the digital at the start will flash, short press the "◀" or "▶" key control points, short press the "⌚" key again to determine after jump to the clock

B、上午下午显示: 当在上午时间, 屏的右边中间 AM 图标会亮, 当在下午时, 屏的右边中间 PM 图标会亮

Morning and afternoon shows: when it's in the morning, the right of the screen the middle AM icon will light, when it's in the afternoon, the screen on the right side of the middle PM icon will light

C、其它模式下时钟显示: 在其它模式下, 只要停此操作 5S 时间后, 本机器会自动跳到时钟模式下显示时间, 当有操作时会自动切换到本操作模式下

D、Other mode the clock shows: in the other mode, just stop this operation for 5 s, the machine will automatically jump to the clock mode according to the time, when there is a switch automatically changed to the operation mode.

FM (收音) 模式 FM Mode

开机后, 短按“▶”键转到“FM”功能状态。同时屏右上方的 FM 图会亮
Press “FUNC” shortly and turn to “FM” function after power on and FM icon will be on at the same time.

A、自动搜索电台: 长按机器上的“▶▶”键可以进行自动从 87.5-108.0 搜索电台，在搜索过程中有搜到电台会发出电台播放的声音，当搜索电台完毕后会自动保存搜到的电台，同时会自动播放第一个电台
Automatically search for radio stations: Press “▶▶” long to search the stations between 87.5-108.0, it'll stop to play the current station when coming a station, and will save the searched stations and play automatically the first station.

记忆取台: Choosing the memorial stations.

在FM状态下，短按机器上的“◀◀”或“▶▶”键可提取记忆预存的电台。

In the FM status, press “◀◀” or “▶▶” shortly to choose the prestored stations.

关机 Power off

在开机的状态长按机器上的“▶”键关机，同时屏上会显示 OFF 后关机
Press “▶” long to power off when power on, “OFF” will be showed after power off. .

开机

短按机器上的“▶”键开机，第一次进入时钟模式，再短按“▶”进入其它模式
press “▶” shortly for power on, and will access to clock mode. It'll enter other mode when press shortly again.

支持手机 Support phones

理论上支持凡是带蓝牙音乐播放的设备！

In theory support all devices with bluetooth music play!

产品规格

| | |
|-----------------|------------------------|
| 1. 蓝牙规格: | 蓝牙 V2.1+EDR |
| 2. 额定输出功率: | L: 3W R: 3W |
| 3. 输出功率: | 输出等级 2, 最大连接距离 10 米 |
| 4. 工作频率范围: | 2.402GHz ~ 2.480GHz |
| 5. 支持 Profiles: | A2DP AVRCP GAVDP AVDTP |
| 6. 喇叭阻抗: | 4 Ω (欧姆) |
| 7. 产品尺寸: | 长 275×宽 150×高 405 (mm) |
| 8. 产品重量: | 大约 1420g (主机) |

1. Bluetooth: Bluetooth 2.1+EDR

2. Output rating: L: 3W R: 3W

3. Output Power : Output level: 2 ;Maximum connection distances:10 metres

4. Operating frequency range: 2.402GHz ~ 2.480GHz

5. Support Profiles: A2DP AVRCP GAVDP AVDTP

6. Speaker Impedance: 4Ω

7. product size: L 27.5 x W 150 x H 40.5CM

8: Product Weight: 1420g (main engine.)

本产品规格与设计如有更改，恕不另行通知！
The product specifications and design are subject to change without prior notice!

简单故障排除指南 Guide of simple troubleshooting

| 故障现象 Fault phenomenon | 排除方法 elimination method |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 蓝牙配对连接无法成功完成 Failure for Bluetooth connection. | 连接使用前已有手机设备连接过，此手机设备还没有离开现场，蓝牙也没有关闭，再使用连接时蓝牙机器就会自动搜索到此蓝牙设备连接。要先把已连接过的蓝牙设备蓝牙关掉，下个蓝牙设备才能搜索正常配对连接。 Connection to the existing mobile phone device to connect before, the mobile device has not left the scene, bluetooth didn't shut down, then connect to the same one automatically. Should first turn off the connected bluetooth devices of bluetooth, bluetooth device to search under normal matching connection. |
| 指示灯不亮，蓝牙也连接不上 Neither indicator light is not on, nor the Bluetooth connection. | 蓝牙机器时间太久没有工作，可能进入休眠状态，此时可长按机器上的配对播放键唤醒。 Bluetooth machine is out of work for too long time, may be enter a dormant state, at this time it can be long press machine matching play key to wake up. |

| | |
|--------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 蓝牙播放声音小 Small sound when Bluetooth playing | 1. 手机设备与蓝牙机器连接后, 蓝牙设备音量没有开大 处在默认电平输出, 把手机设备输出音量开大。 2. 蓝牙机器本身输出音量小。 1. After Mobile devices with bluetooth connection machine, bluetooth machine volume is not up in the default output level. It needs to make the mobile device's output large volume. 2. The output volume small bluetooth machine itself. |
| 蓝牙连接距离短 Bluetooth connection distance is short | 手机设备与蓝牙机器之间有障碍物,可移开障碍物。 There are obstacles between mobile devices and bluetooth machine which need to be removed . |
| 蓝牙连接正常播 放, 有时断音. Bluetooth connection is normally playing, sometimes staccato. | 1. 手机设备与蓝牙机器之间有障碍物,可移开障碍物. 2. 蓝牙机器与连接手机设备距离太远,超出连接范围. 缩短蓝牙机器与手机设备之间的距离。 1. There are obstacles between Mobile devices and bluetooth machines which needs to be removed. 2. Bluetooth machine and connect mobile devices distance too far away and beyond the connection area. Shorten the the distance between the mobile device and bluetooth machine. |
| 蓝牙连接后播放 无声 It 's silent | 蓝牙机器连接手机设备后, 蓝牙机器音频没有打开, 要 把手机输出音量打开。 |

| | |
|-------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| after the Bluetooth connection | After Bluetooth machine connected mobile devices, bluetooth audio did not open yet, which need to turn on the mobile phone output volume. |
| 蓝牙无法连接另外多个手机及设备 Unable to connect to multiple mobile phone and other bluetooth devices | 蓝牙机器已连接了当前手机设备, 如想配对连接另一个手机设备, 要先关掉上次配对的手机设备, 待下一个手机设备搜索到蓝牙配对名称再点击连接。 Bluetooth mobile device have ever connected to the machine, if you want to connect another phone paired devices, you should first turn off the last pair of mobile devices, and when next mobile device to search the bluetooth pairing name and then click connect. |
| 收音收台台位少; 收音不清晰 The Stations of radio are less and not clear. | 调整机器设备的方位及检查周围环境是否适合接收电台。 1. Adjust machine FM antenna azimuth and inspect whether the around conditions is suitable to receive stations. . |

备注: 以上方法都排除了, 机器还不能正常使用, 请找技术人员或客服处理!

Remarks: The above methods are ruled out, the machine can't still normal use, please find technical personnel or customer service to help!

FCC NOTE:

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV
INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS OR CHANGE TO
THIS EQUIPMENT. SUCH MODIFICATIONS OR CHANGE COULD VOID THE
USER'S AUTHORITY TO OPERATE THE EQUIPMENT.