



PARTY SYSTEM 1220

# Home Entertainment Bluetooth and Karaoke System Instruction Manual



Thank you for purchasing this product



**WARNING: SHOCK HAZARD - DO NOT OPEN**

**AVIS: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR**




The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### Important Safety Instructions

- 1) Read these instructions.
  - 2) Keep these instructions.
  - 3) Heed all warnings.
  - 4) Follow all instructions.
  - 5) Do not use this apparatus near water.
  - 6) Clean only with dry cloth.
  - 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
  - 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
  - 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
  - 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
  - 11) Only use attachments/accessories specified by the manufacturer.
  - 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
  - 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

### CAUTION

To prevent electric shock hazard, do not connect to mains power supply while grille is removed. minimum distances 10cm around the apparatus for sufficient ventilation; the ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.; no naked flame sources, such as lighted candles, should be placed on the apparatus; attention should be drawn to the environmental aspects of battery disposal; the use of apparatus in moderate climates. the apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus. Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable. Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

"To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture"

Caution Marking and rating plate was located at rear enclosure of the apparatus.

### CAUTION

Danger of explosion if battery is incorrectly replaced.  
Replace only with the same or equivalent type.

Thank you for purchasing our products, which displays your superior knowledge of audio equipment. You have made an excellent product choice.

Please read all safety and operating instructions in this manual carefully before trying to operate the unit.

## INSTALLATION & SAFETY PRECAUTIONS

- \*Always connect the power plug to the voltage range specified to the unit AC 120V~,60Hz in order to avoid fire or electric shock.
- \*Never plug or unplug the unit with wet hands. Never unplug the unit by pulling the power cord .Always hold the plug firmly when unplugging.
- \*Never block or cover any slots or openings in the unit as this will give poor ventilation that may cause overheating.
- \*Always turn off or unplug the unit before making or changing any connections.
- \*Never remove any fixed cover,as this may expose dangerous voltage that may cause electrical shock.
- \*Never allow electrical/electronic parts to be exposed to dripping or splashing of liquids and never place an object filled with liquids such as a vase on top or beside the unit.
- \*Do not put any small metal objects into the unit opening that might cause short-circuit or electrical shock.
- \*Always unplug the unit if will not be used for a long period of time.
- \*Never use the unit during a thunderstorm. Immediately unplug the unit.
- \*Never try to repair or modify this unit. Always send the unit to a qualified service centre for repair.

### WARNING



 
**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.


# 1.Controls

## FRONT PANEL

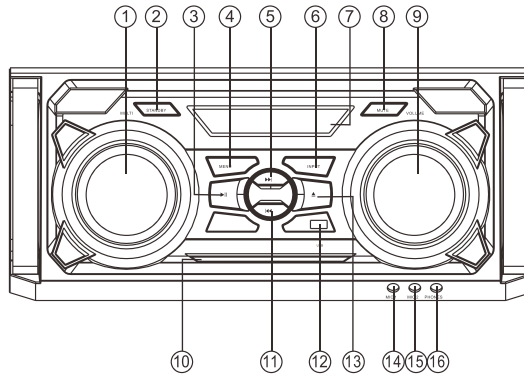


- |                         |                      |
|-------------------------|----------------------|
| 1. MULTIFUNCTION BUTTON | 10. COMPARTMENT DOOR |
| 2. STANDBY              | 11. PREVIOUS         |
| 3. PLAY/PAUSE           | 12. USB JACK         |
| 4. MENU                 | 13. OPEN/CLOSE       |
| 5. NEXT                 | 14. MICROPHONE1 JACK |
| 6. INPUT                | 15. MICROPHONE2 JACK |
| 7. LED DISPLAY          | 16. PHONES           |
| 8. MUTE                 |                      |
| 9. VOLUME               |                      |

## REAR PANEL

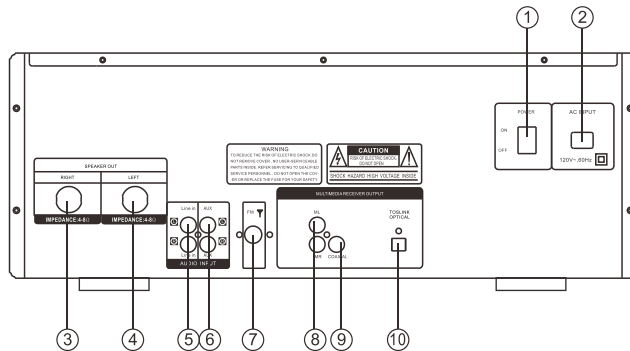 


1. POWER SWITCH
2. AC INPUT(120V~,60Hz)
- 3.(RIGHT) SPEAKER OUTPUT JACK
- 4.(LEFT) SPEAKER OUTPUT JACK
5. LINE IN AUDIO INPUT
6. AUX AUDIO INPUT
7. FM ANTENNA JACK
8. AUDIO OUTPUT JACK
9. DIGITAL SIGNAL COAXIAL OUTPUT
10. DIGITAL SIGNAL OPTICAL OUTPUT

# Remote Control

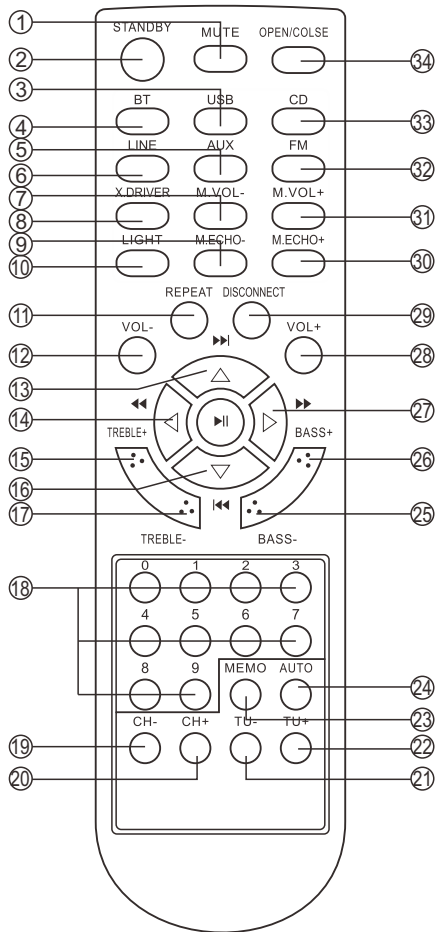 

 - 1.MUTE
- 2.STANDBY
- 3.USB
- 4.BT
- 5.AUX
- 6.LINE
- 7.MIC VOLUME-
- 8.X DRIVE
- 9.MIC ECHO-
- 10.LIGHT
- 11.REPEAT
- 12.VOLUME-
- 13.NEXT
14. B.WARD
- 15.TREBLE+
- 16.PREVIOUS
- 17.TREBLE-
- 18.NUMBER BUTTON
- 19.CHANNEL-
- 20.CHANNEL+
- 21.TUNNER-
- 22.TUNNER+
- 23.MEMO
- 24.AUTO
- 25.BASS-
- 26.BASS+
27. F.WARD
- 28.VOLUME+
- 29.DISCONNECT
- 30.MIC ECHO+
- 31.MIC VOLUME+
- 32.FM
- 33.CD
- 34.OPEN/COLSE

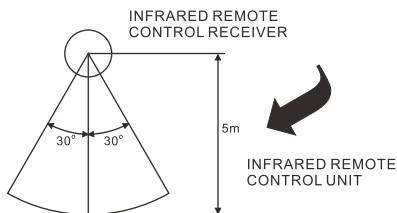


## REMOTE CONTROL OPERATION:

- If the remote control conflicts with other devices, the operation will be affected.
- Do not simultaneously press buttons on the unit and the remote control.
- Avoid using two remote controls at the same time as this will cause a malfunction.
- Use only UM-4 ``AAA`` size batteries. Do not mix old batteries with new ones.
- If the batteries leak, clean thoroughly before replacing with new ones.
- Do not short two terminals of the batteries. Dispose of old batteries in a suitable place.

CONNECTION DIAGRAM:

Note:

 - Always unplug the unit when making connections.
- Check all connections are firmly fitted.
- Check all speakers are connected to their correct designated position.

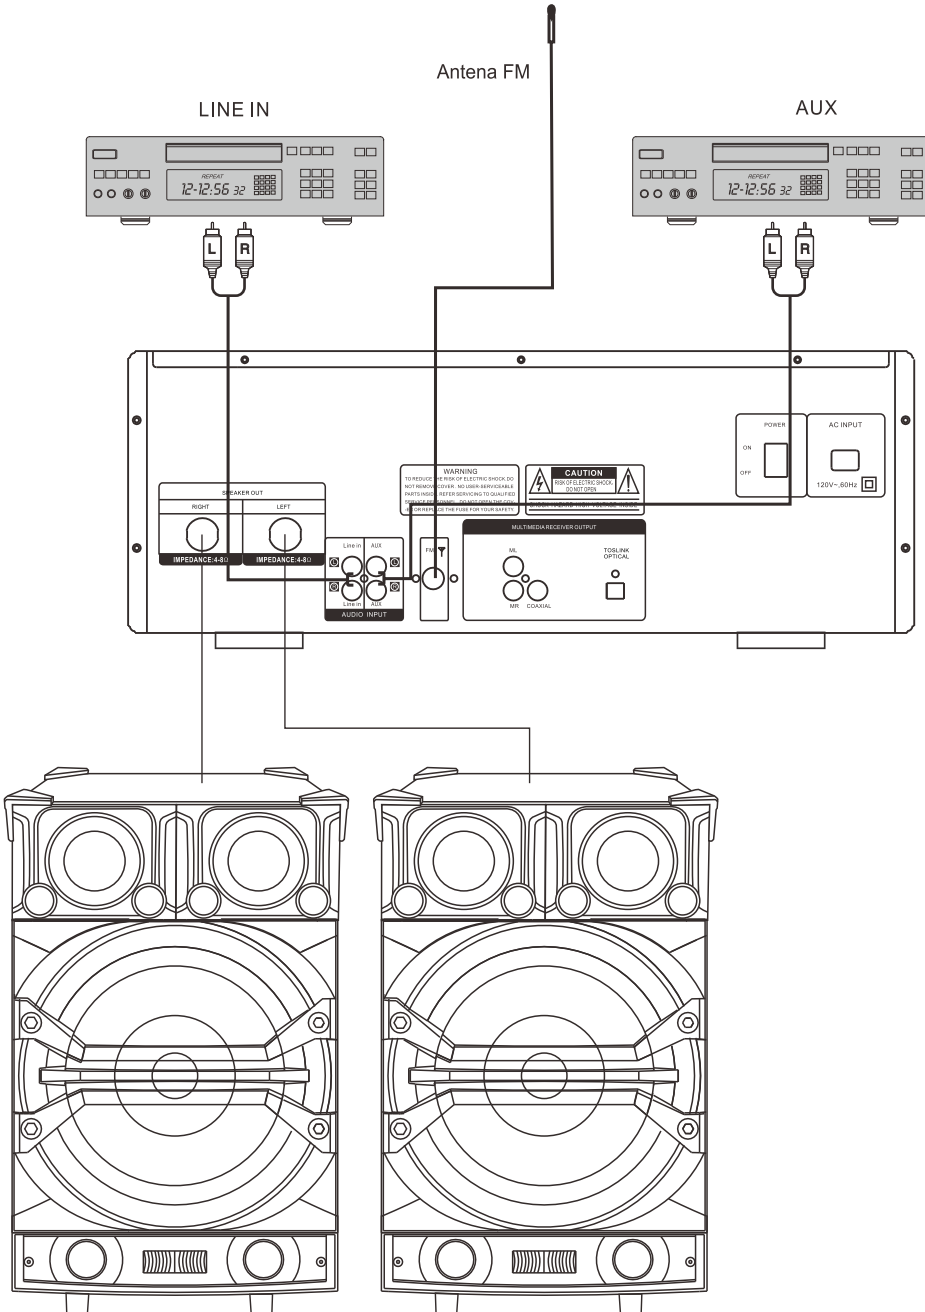

# PLAYABLE DISCS AND FILE FORMAT

## ■ Playable discs

Use Optical discs bearing the marks below.

.... Optical discs (digital audio)

.... CD-R,CD-RW digital audio discs

- CD-R or CD-RW discs bearing one of the following phrases.  
FOR CONSUMER  
FOR CONSUMER USE  
FOR MUSIC USE ONLY
- Finalized CD-R or CD-RW discs

### Note

This Optical disc player may not be able to play some CD-R/CD-RW discs or discs on which recording was not made correctly.

.... CD-TEXT discs

To play back an 8-cm (3 in) CD

Place it in the inner recessed area of the disc tray. Do not put a normal (12-cm) CD on top of an 8-cm (3in) CD.

To prevent a malfunction of this unit:

- Do not use any nonstandard shaped disc (heart, etc.) available on the market because it might damage the unit.
- Do not use a disc with tape, stickers, or paste on it. If you use such a disc, the disc may get stuck in the unit, or damage to the unit may result.



Note: Do not use any lens cleaners as they may be a cause of malfunction.

## ■ Play able MP3 and WMA files

### MP3

Format	Bitrate (kbps)	Sampling frequency (kHz)
MPEG 1 Audio Layer-3	32-320 <sup>*1</sup>	32/44.1/48
MPEG 2 Audio Layer-3, 2	8-160 <sup>*1</sup>	16/22.05/24

<sup>\*1</sup> Variable bitrate is supported

### WMA

- Version 8
- Version 9 (Standard and variable bitrates are supported. Professional and Lossless are not supported.)

Profile	Bitrate (kbps)	Sampling frequency (kHz)
High Profile	32-320 <sup>*2</sup>	32/44.1/48
Mid Profile	16-32	22.05

<sup>\*2</sup> Both constant and variable bitrates are supported.

### Notes

 
- Playback for Data Disc starts in alphanumeric order of files.
- Playback for USB starts in order by date and time of creation.
- Copyright-protected WMA (DRM) files cannot be played back by this unit.
- The disc must be ISO 9660 compatible.
- The maximum file and folder numbers are as follows.

	Data Disc	USB
Maximum total number of file and folder <sup>*3</sup>	512	9,999
Maximum folder number <sup>*3</sup>	255	999
Maximum file number per folder	511	255

<sup>\*3</sup> The root is counted as one of the folders.


# HANDLING OPTICAL DISCS

- Always handle with care so that the playing surface is not scratched. Do not bend discs.



- To keep the playing surface clean, wipe with a clean, dry cloth. Do not use any type of disc cleaner, spray, or any other chemical-based liquid.
- Do not expose discs to direct sunlight, high temperature or high humidity for a long time.

 - Do not wipe with a circular motion; wipe straight outward from the center.

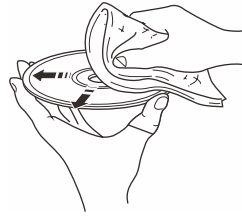

- Use a soft-tipped pen when writing on the label side of a disc.



## Operating the Amplifier

### Normal function

1. Be sure to switch off the power and to connect the outputs to corresponding input jacks.
2. Turn on the power and wait 3-4 seconds until the speaker functions are connected.
3. Select an audio source by pressing the INPUT key on the front panel or on the remote control to display DISC,AUX,LINE,USB,BT,FM,.
4. Adjust the VOLUME knob on the front panel or the VOL+/- key on the remote control to adjust the setting of the main volume.
5. Press the MENU key on the front panel control to BASS,TREBLE, MIC VOLUME, MIC ECHO SPEAKER LIGHT then adjust the MULTI knob
6. Press the MUTE key on the remote control or the front panel to mute, press it again to reset. Press X Drive on the remote to turn on/off X-Bass effect.
7. Press the LIGHT button on remote control to change the OFF,R,G,B,RG,RB,GB,RGB,AUTO, DEMO light mode.

### Light color control function

To control the light modes coming from the speaker panels by "Speaker" menu or "light model" button on remote control

- R = red lights flash
- G = green lights flash
- B = blue lights flash
- RG = red and green lights flash
- RB = red and blue lights flash
- GB = green and blue lights flash
- RGB = red, green, and blue lights flash
- Auto = the various color combinations cycle through and flash.
- Demo = lights flash and change color as if they were responding to the beat of the music.

### Tuner applications

1. Before using the radio functions, you must attach the supplied antenna. Adjust the antenna to obtain optimum reception.  
Press the INPUT key on the front panel(amplifier)or on the remote control,to select "FM" function.
2. Press the CH+/CH- key on the remote control to find radio bands that you have previously listened to.
3. Press the TU+/TU- key on the remote control to adjust the radio frequency manually.
4. Press the AUTO key on the remote control, the machine will scan radio channels from low-frequency to high-frequency by itself and memorize the channels one by one.
5. Press the MEMO key on the remote control and it will memorize the current radio frequency on the band.

### KARAOKE function

1. The machine can auto detect whether MIC is inserted.  
Please turn off the microphone volume and adjust the volume gradually after inserting the microphone.
2. Press M.VOL+/- on the remote to change the microphone VOLUME.

Note: Do not touch the top of the microphone when singing in order to avoid howling effect.  
Adjust the microphone volume gradually to avoid howling effect.

## USB application

1. Press the INPUT key on the front panel or press the input key on the remote control to select USB mode.
2. Press ◀◀ or ▶▶ key on front panel or press ◀◀ or ▶▶ on remote to select forward/previous songs, Press ▶|| to play or pause.

Note: Supported music files: MP3, WMA.

Max USB size: 32G

## Bluetooth Pair & Connection

- ~ Turn off any Bluetooth devices previously paired (linked) with this unit.
- ~ Turn on the Bluetooth features on your phone or music player.
- ~ Turn on and set this unit in the Bluetooth mode. The flashing BT light indicates pairing mode.
- ~ Set your phone or music players to search for Bluetooth devices.
- ~ Select Party System 1220 from search results on your phone or music player.
- ~ Select OK or Yes to pair this unit with your phone or music player.
- ~ If protected, enter 0000 for passkey. Steady BT light indicates successful connection.

## SPECIFICATION

Power Consumption-----	150W
Frequency Response-----	38Hz~20KHz
Max. Input Capability-----	500mV
Distortion-----	<0.1%
S/N-----	75dB

## GENERAL REQUIREMENT

Power source----- AC 120V~, 60Hz

### Accessory

Operation manual	1PC
Remote Control	1PC
FM Antenna	1PC

- The specification presents only as a reference. Weight and size values are approximate.
- Our product specifications are subject to change without prior notice.
- The content of this manual has been collated carefully. If there are any mistakes caused by printing or other reasons, please contact us, and we will endeavour to assist you where possible.

## CAUTION

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Minimum distances 10 cm around the apparatus for sufficient ventilation.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- When the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.  
To be completely disconnected the power input, the mains plug of apparatus shall be disconnected from the mains completely.
- The main plug of apparatus should not be obstructed or should be easily accessed during intended use.
- The use of apparatus in tropical climates.
- Attention should be drawn to the environmental aspects of battery disposal.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Excessive sound pressure from earphones and headphones can cause hearing loss.



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



This unit contains no user serviceable parts inside. Do not attempt to repair the unit yourself. Please refer servicing to a qualified service personnel.



#### Limited Warranty

This Limited Product Warranty is provided by BriteLite Enterprises. BriteLite warrants to Customer that the product is free from defects in materials and workmanship under normal use during the Warranty Period of 90 days for parts and 1-year labor. If the product fails to conform to the warranty then BriteLite or its authorized service will either repair or replace any nonconforming product, provided that Customer gives notice of noncompliance within the Warranty Period to BriteLite by emailing [service@britelite.net](mailto:service@britelite.net) or calling 310-363-7110 (Mexico customers can call 01554624 0251). Please retain the original dated receipt as evidence of proof of purchase.



## **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### **FCC Radiation Exposure Statement:**

The equipment complies with FCC Radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.