

# BULLET CAMERA Quick Manual for Android and iOS

Packing list

accessories as blow:

After open packing list box .please check product body an


Power adapter×1 Ethernet cable×1 WiFi antenna×1

Accessories kit ×1 Positioning paper×1 Waterproof cap×1

Hangzhou Xiongmai Technology Co.,Ltd

1 Download APP Tips one: Scan QR code.

Operation

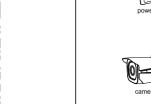

Tips two :Search "XM-CSee" in the App store or Googleplay



Power on

XM-CSee



Router

**★**User login Connect the camera to the power outlet . Connection diagram

01. Account login

 Click "sign up" to register an account, then log in (If you have a XM Store account, you can log in directly);

User Name Joer Name

Password Password

Rem Password

\_ n \_ \_ \_ \_ \_ \_ \_ \_ \_ \_ \_



02.Add device

## 03.Device configuration

· Enter "Set Password" interface and "Pick a name" interface

The camera will be shown online, which indicates that the

wireless network configuration of camera is complete.

and select the one way "Add My Camera" (Figure 2); please input new password and new camera name. Input WiFi router password (picture 3). Then confirm: After click "Save", you can go back to the device list interface

operations and settings.

 Please click "No" (Figure 4), so you can go back to the device · Click to enter the view interface, and you can do related list interface. The camera will be shown online, which indicates that the wired network configuration of camera is complete Click to enter the view interface, and you can do related

operations and settings.

2. Wired network configuration:



After login successfully, click "+" in the upper right corne

and select the third way "Add device in the same WLAN"

Enter into "Device Searching" interface, click

## 3. The Special configuration mode:

Don't need register .Add the device then check video .(The

information only kept in you mobile phone. If you change the network, if a wireless network connection is necessary, please follow mobile phone, must restart download the app and add device following instructions for wireless network configuration: .This login mode don't support alarm push).

★Temporary user

Open App "iCSee", choose temporary visit.

• — • • • `

 Open Device Setting Interface (Figure 8). Click "Advanced Setting - Wireless Settings -network connection-Configure WiFi" (Figure 9). Input wireless router password, that is,

complete the camera wireless network configuration.



Settings", you can return the camera to the factory default

Settings (the process, please do not cut off the power of the

Q:How to restore the factory default?

Q: The camera is offline, how to do?

Restart power on and restart the camera.

Check the home broadband network

A: Check the power and WiFi.

Reconfigure the camera.

Q: How to store a video camera? While using this product, please modify the user password. A: Currently, the camera Built-in 16GB TF card . When the TF to avoid the delinquents misappropriation Card is full, it will delete earlier video automatically and loop

Do not install the equipment in damp, dusty, children eas access to the venue.

Please allow within the scope of use and storage of A: Open the camera Settings interface, in the "Settings temperature and humidity, do not disassemble it at will. general - about equipment" interface, click the "restore factory

## ✓!\Notice

⚠ Direction: App and device firmware will have new update

irregularly, you could upgrade it online at app setting, instructions are for reference only.

B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or i television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to

computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

- (2) This device must accept any interference received, including interference
- that may cause undesired operation.

## FCC Radiation Exposure Statement

The equipment complies with FCC Radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Name This equipment has been tested and found to comply with the limits for a Class

Warranty Card

Warranty period: one year. This warranty card is only for our company's products.

Wireless connection diagram:



Wired network connection diagram:

1.Wireless network configuration:



3. Camera configuration



After login successfully, click "+" in the upper right corner.







