






SMART VIDEO DOORBELL

User Manual

Hangzhou Xiongmai Technology Co.,Ltd



Packing list

After opening it, please check whether the product is in good condition or not; confirm whether the accessories are complete as below.

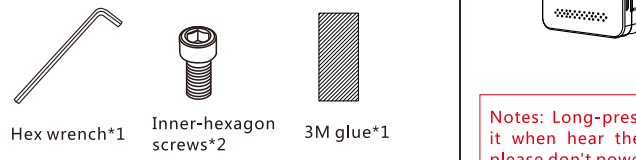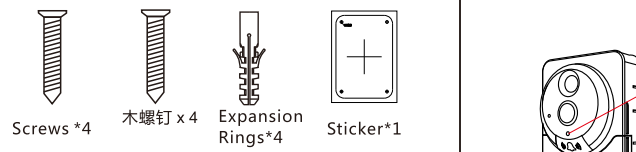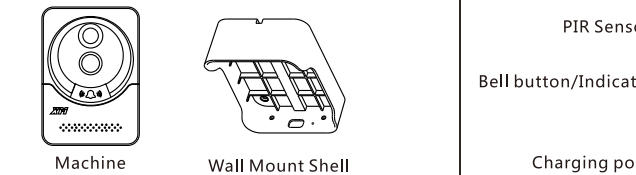

Appearance introduction

Before use, please be familiar with the interface and button of the doorbell.

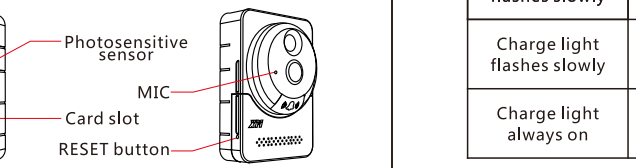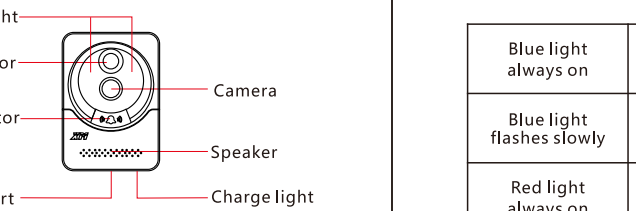

Notes: Long-press the RESET button for 5 seconds, loosen it when hear the voice prompt "restore factory settings, please don't power off". Then it can be restored to the factory default configuration.

Indicator Introduction

Blue light always on	Startup
Blue light flashes slowly	User Telnet
Red light always on	TF card is not
Red light flashes slowly	Low battery
Charge light flashes slowly	Charging
Charge light always on	Full of electricity


Operation manual

1.Device ready

First step: Install a rain-proof cover where you need to install the doorbell. (Expansion screws need to be used on cement and stone walls; wood screws or 3M glue can be used on wooden walls.)

Second step: Install the doorbell body into the rain-proof cover.

Third step: At the bottom of the doorbell, install the doorbell body and the rain-proof cover together via the hexagon screws.

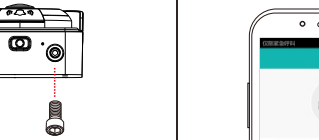

2.Download APP



iCSee

Tips one: Scan QR code to download;

Tips two: Search "iCSee" in mobile store and download;


3.Device network configuration

★ User mode


The way to register a user: after the user registered an account, the device information added by the user will always be associated with the account number, not restricted by the mobile phone.

01. User login

- Open "iCSee", select "sign up", then log in (Figure 1)
- can choose Wechat Quick Login mode, login via Wechat account (Figure 2)

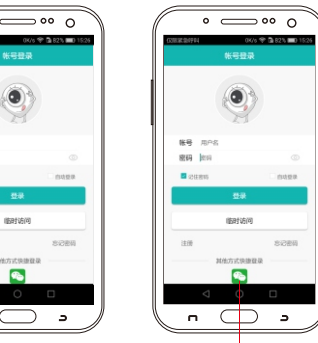


Click "sign up" and input the corresponding information. (Figure 1)

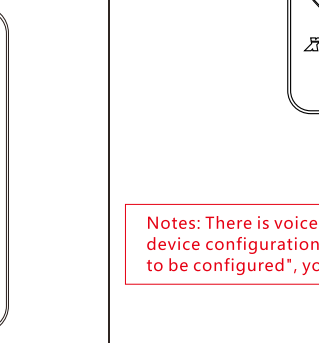

choose Wechat Quick Login (Figure 2)

02.Device preparation


After the doorbell is installed, short-press the bell button to wake the doorbell.

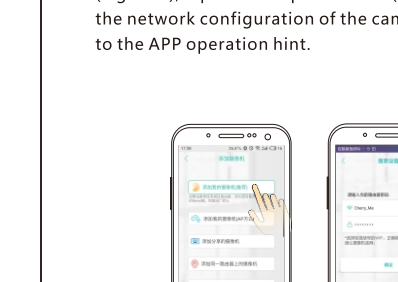

Notes: There is voice instruction throughout the process of device configuration. After hearing the voice prompt "wait to be configured", you can start configuring the device.

03.Add device

- After login successfully, click "Add My Camera" (Figure 3), input "WiFi password" (Figure 4). Finish the network configuration of the camera according to the APP operation hint.

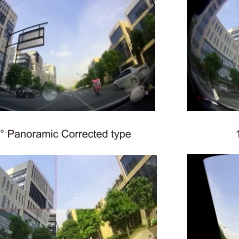

(Figure 3)




(Figure 4)

Click to check if the WiFi password is right

04.Remote view

When you first click on the device option, it is to wake the doorbell; and click again to enter the doorbell viewing interface.

 
360° VR panoramic picture, slide the finger to magnify and move the image, just like using a magnifier to search for treasure. It can roam to any position in the image, the details of local image are clear, and experience a different immersion interaction.




180° Panoramic Corrected type



 180° Panoramic type



Four grids type

 


Cylindrical type



Three grids type

05.Bell rang to check

When the visitor presses the bell button of the device, APP will push the call reminder, and click the answer to start the call.

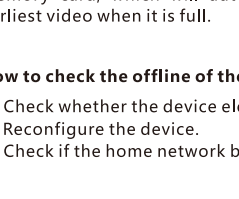


06.Bell Device Configuration

If you buy a Bell Device, you can associate the Bell Device with the Video Doorbell, and the bell device will also ring when you press the bell button.

First step: Long-press the volume button of the Bell Device until the indicator of the bell is no longer flashing.

Second step: Short-press the bell button of the Video Doorbell; if the bell is ringing at the same time, the configuration is successful.

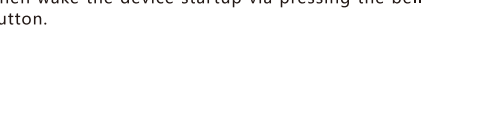

FAQ

Q: How does the device store video?

A: The Video Doorbell maximum supports 32G external memory card, which will automatically cover the earliest video when it is full.

Q: How to check the offline of the device?

- Check whether the device electricity is exhausted.
- Reconfigure the device.
- Check if the home network broadband is normal.

Q: How to switch the network environment?

A: When used in a new network environment, please long-press the RESET button for 3~5 seconds, loosen it when hear the voice prompt "restore factory settings, please don't power off". After reset successfully, configure the network again.

Q: Why does the device do not respond when press the RESET button after startup?

A: It needs to wait 8 seconds to press the RESET button, when wake the device startup via pressing the bell button.

Experience Version APP

● "iCSee experience version" APP is suitable for enthusiasts and fans to experience and test our products ahead of time, and can participate in our product's improvement and renewal plan. When the product adds new features and has significant updates, you can give priority to download the experience version.



● In order to thank the fans for their love, anyone who is actively participating in the "iCSee experience version" can have the chance to get the test prototype for free, and have the opportunity to participate in various kinds of lottery draw. For those who make great contributions will receive additional special awards from our company.

Warranty Card

Product Name		Model	
Purchase Date		Purchase Store	
Cause			
Process			
Customer Name		Customer Gender	
Customer Phone		ZIP	
Address			

Warranty period: one year.
This warranty card is only for our company's products.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

The equipment complies with FCC Radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.