

**SILVER C**

**User Guide**

**Contents**

I. CAUTIONS ON MOBILE PHONE USE ..... 4

1.1 INTERFERENCE ..... 4

1.2 REASONABLE USE ..... 4

1.3 QUALIFIED MAINTENANCE SERVICE ..... 4

1.4 WATER-RESISTANCE ..... 4

1.5 EMERGENCY CALLS ..... 4

2 PRECAUTIONS FOR USE OF BATTERY ..... 4

3 CAUTIONS FOR CHILDREN ..... 5

II. KEYS AND PARTS ..... 6

III. START TO USE ..... 8

3.1 TO INSERT SIM CARD(S) ..... 8

3.2 CHARGE THE BATTERY ..... 9

IV. BASIC FUNCTIONS ..... 10

1. LOCK AND UNLOCK THE SCREEN ..... 10

2. MAKE IT YOURS ..... 11

3. SWITCH TO RECENTLY USED APPLICATION ..... 18

4. MAKE A CALL ..... 18

5. CALL LOG ..... 20

6. ANSWERING PHONE CALLS AND REJECTION .....	21
7. ADD A CONTACT.....	22
8. SEND AND RECEIVE MESSAGE(S) .....	23
9. BROWSER THE WEB.....	25
10. ENJOY MUSIC .....	25
11. DOWNLOAD APPLICATIONS FROM PLAY STORE.....	26
12. MANAGE APPLICATIONS .....	27
13. APPLICATIONS & UTILITIES.....	28
14. SETTINGS.....	28
V. TECHNICAL INFORMATION.....	32

## **I. Cautions on mobile phone use**

### **1.1 Interference**

All phones may be interfered, which affect phone calls.

### **1.2 Reasonable use**

Use only in the normal position. Do not touch the antenna area unnecessarily.

### **1.3 Qualified maintenance service**

Only qualified personnel may install or repair this product.

### **1.4 Water-resistance**

Your device is non water-resistant. Keep it dry.

### **1.5 Emergency calls**

Ensure the phone is switched on and in service. Enter the emergency number and press the Dialer icon.

## **2 Precautions for use of battery**

 
 
**2.1** Do not dispose of batteries near or in a fire to avoid dangers.

**2.2** Do not dispose of batteries in the garbage. Dispose of batteries to assigned battery recycling center.

**3 Cautions for children**

Keep your device out the reach of children in case of accidental injury caused by incorrect use of the device as toys.

**II. Keys and parts**

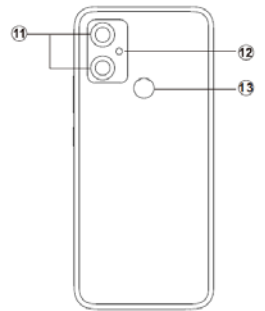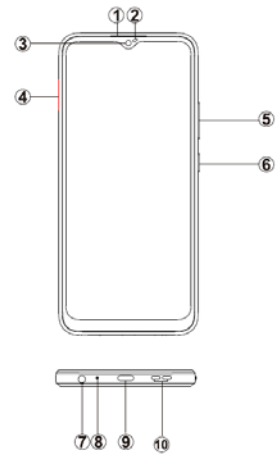

- > 1. Receiver
- > 2. Light sensor / Proximity sensor
- > 3. Front Camera
- > 4. SIM Card tray
- > 5. Volume key
- > 6. Power key
- > 7. Audio Jack
- > 8. Mic
- > 9. USB connector
- > 10. Speaker
- > 11. Rear camera
- > 12. Flash light
- > 13. Fingerprint

### III. Start to use

 
#### 3.1 To insert SIM card(S):

Insert the SIM card correctly in the card slot(s) (See figure below), suggest switch off the phone when you insert SIM card.

Insert the Micro SD card into the slot with the correct direction (See figure below), suggest switch off the phone when you insert Micro SD.

Note: Use only compatible memory cards with this device. Incompatible memory cards may damage the card or the device and corrupt the data stored in the card.



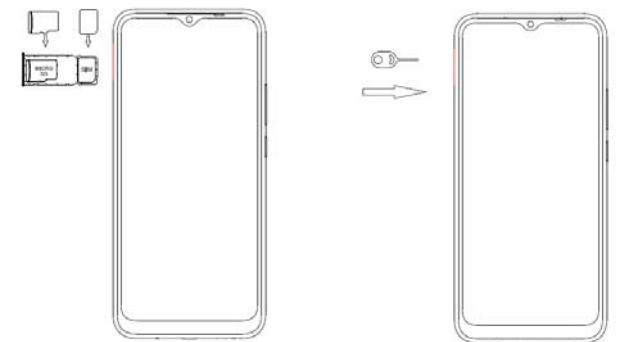

**3.2 Charge the battery**

During charging, the battery indicator on the phone is a thunder icon. If the device is switched off during charging, there will still be a charging indication on the screen that shows the phone is being charged. If the device is overused when the battery is low, the charging icon might take

some time to appear.

When the battery indicator on the screen display 'Battery is full', thunder icon will disappear, which means the completion of charging. If the phone is switched off during charging, the screen will display ' Battery is full '. It generally takes 4 hours to charge the battery. During charging, the battery, the device and the charger will get hot. This is normal.

Unplug the charger from the AC electrical outlet and disconnect the wiring between the phone and the charger after charging. .

**Cautions:** Charge the phone in a well ventilated place in which the temperature is between -10°C to +55°C. Use the charger provided by the manufacturer only. The use of unconfirmed charger may lead to dangers and violate the manufacturer's warranty clause. If the temperature is too high or too low during charging, the device will automatically send a warning and stop charging to avoid damage to the battery or any danger.

#### **IV. Basic functions**

##### **1. Lock and unlock the screen**

Press power button to enter Sleep mode and meanwhile the screen will be locked; press power button again to wake up and then swipe up for unlock.



## **2. Make it yours**

 
2.1 Home screen: It is your starting point to access all the features on your phone. It displays application icons, widgets, shortcuts, and other features. Long press home screen and Modify Wallpaper.




2.2 Long press Home screen, and then you can Modify Wallpaper; or enter Launcher and long press and hold an application till the screen vibrates, and then loosen your hold finger.



Long press the icon, and after the phone vibrates, choose to delete or uninstall

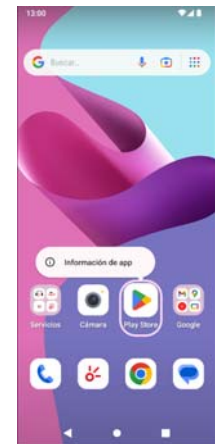


Swipe up and enter to application list.

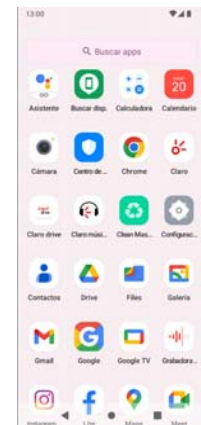 

2.3 Notification Bar: At the top of the screen, the Status Bar displays the time, status, and

 
notifications. If there is a new message, missed call or something in the notification bar, you can drag it down to open notification panel and click the desired one to have a view. When you finished, you can close it by dragging the panel up or pressing "Back".

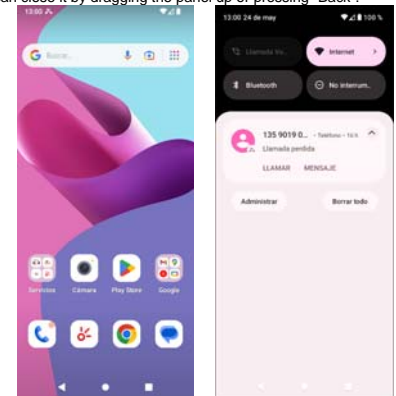

2.4 Android™ and computer connection



 If you connect your phone to PC via USB, you can find the USB options, choose This Device file Transfer option, you can see your phone memory in PC, this is same function like USB storage.

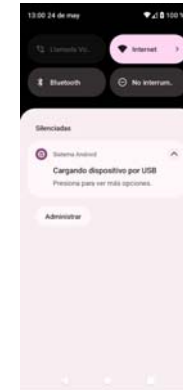


### 3. Switch to Recently Used Application

Press the menu button to select translate (connect to the network), listen (connect to the network), take screenshots, and swipe left to clear background tasks with click



### 4. Make a call

Click  and enter a complete phone number to make a call. Your phone supports smart

search.



Swipe to right to view Call history and Contacts.

### 5. Call log



Press the number if you want to see the details , send message or call back, there are three options for you.


Press the number, you can view the contact details, send a message or call back.


**6. Answering phone calls and rejection**

When there is an incoming call, you can drag the icon up or down to answer or hang up it directly.



### 7. Add a contact


Touch  to enter contact

Touch  to add a new contact



Click here to add new contact and in this page press menu key to enter menu view, setting, etc.

### 8. Send and Receive message(s)

Touch  enter to messaging, touch "Start chat".




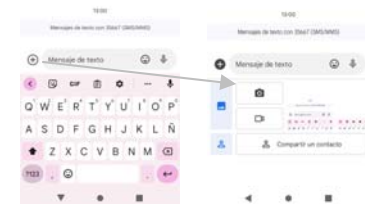 
Tap this icon to select desired contact from phone

Touch to switch the digital input and symbols

Press space or a punctuation mark to enter the highlighted suggestion

When you are composing a new text message, you can select text for cutting or copying. The selected text is highlighted in blue

Tap  to add "Attach" including Pictures, Videos, Audios, etc to send MMS.SMS



When a new message comes, you can read by dragging notification panel and click the message, or entering Message to read it directly.  
Long press one of the all message threads, you can delete it".



### 9. Browser the Web

#### 9.1 Set up Internet/Data connection

Enter Settings > More..., scroll down to find out Mobile network, and then enter "Access Points Names, choose the desired WAP account.

#### 9.2 Switch on Data connection or Wi-Fi

To browse the web, you need to switch on Data connection. If there is Wi-Fi around, you can switch on Wi-Fi to use it browse the web.

### 10. Enjoy music

 
When you copy music to your SD card, the Music player searches the card for music files and builds a catalog of your music, based on information about each file that is stored in the file itself.



## 11. Download applications from Play Store


### 11.1 Add Google™ account

### 11.2 Enter play store and download apps

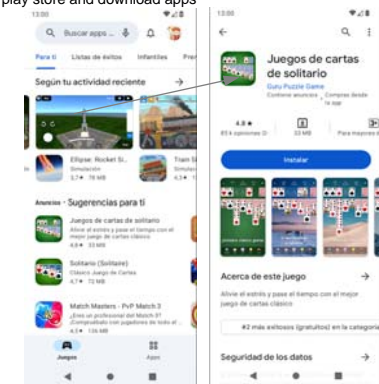

## 12. Manage Applications

 Enter Setting > Apps.  
You can see app info.

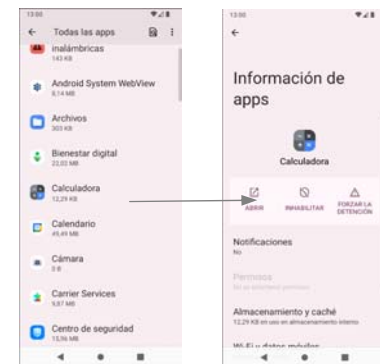

### 13. APPLICATIONS & UTILITIES

For your entertainment purpose, applications and utilities, such as Gmail, Email, Play Store. Before accessing the applications, please turn on the data connection or connect to wifi

#### 14. Settings

 
##### 14.1 Wi-Fi

Open Wi-Fi, search nearby Wi-Fi and connect it, then you can use Internet or download apps for free.



#### 14.2 Bluetooth


Open Bluetooth, connect to other phone, you can share something like music, photos, movies etc to other people.

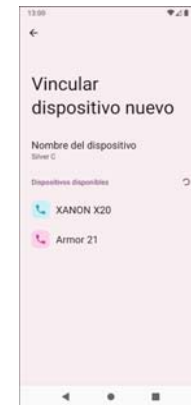

### 14.3 Security

Click Settings –Security -Screen lock.

 There are four screen lock ways for you to choose :Swipe, Pattern, PIN, Password.

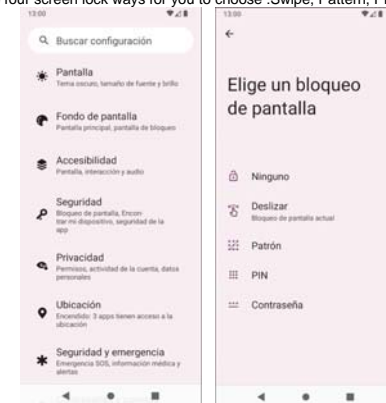

#### 14.5 Fingerprint

Click Settings –Security - fingerprint, follow the prompts ,after completing the fingerprint recording, you can use the fingerprint unlock function.



#### **V. Technical Information**

Google, Android, Google Play, Google Duo and other marks are trademarks of Google LLC.



**Emergency call**

If any emergency arises, dial 112/911 (or other emergency call number) for emergency help.

Due to the nature of cellular networking, the success of emergency call is not guaranteed.

**FCC Warning:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types SILVER C (FCC ID: 2AEPISILVERC) has also been tested against this SAR limit. The highest reported SAR values for head, body-worn accessory, and product specific (Hotspot) are 0.505 W/kg, 0.648 W/kg, and 0.664W/kg respectively. The Max simultaneous SAR is 1.047 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

5G

For 5150-5250 and 5725-5850 frequency band,

Operations in the 5150-5250 and 5725-5850 band are restricted to indoor usage only.