User Manual

FCC ID: 2AEPISILVERMAX

Smartphone

Silver Max

Kalley

COLOMBIANA DE COMERCIO S.A.

Co	n	te	n	ts
----	---	----	---	----

I.CAUTIONS ON MOBILE PHONE USE 4
1.1 INTERFERENCE
1.2 REASONABLE USE
1.3 QUALIFIED MAINTENANCE SERVICE
1.4 WATER-RESISTANCE
1.5 EMERGENCY CALL
2 PRECAUTIONS FOR USE OF BATTERY
3 CAUTIONS FOR CHILDREN
II. KEYS AND PARTS
III. START TO USE
1 TO INSERT SIM CARD(S):
2 CHARGE THE BATTERY
IV. BASIC FUNCTIONS
1 LOCK AND UNLOCK THE SCREEN
2 MAKE IT YOURS
4 MAKE A CALL
5 CALL LOG
6 Answering Phone Calls and Rejection 17

7. ADD A CONTACT	. 18
8. SEND AND RECEIVE MESSAGE(S)	. 19
9. Browser the Web	. 21
10. Enjoy music	. 21
11. DOWNLOAD APPLICATIONS FROM PLAY STORE	. 22
12. MANAGE APPLICATIONS	. 23
13. APPLICATIONS & UTILITIES	. 24
V. TECHNICAL INFORMATION	. 27
VI. FCC WARNING	. 28
VI. Fcc WARNING	

I.Cautions on mobile phone use

1.1 Interference

All phones may be interfered, which affect phone calls.

1.2 Reasonable use

Use only in the normal position. Do not touch the antenna area unnecessarily.

1.3 Qualified maintenance service

Only qualified personnel may install or repair this product.

1.4 Water-resistance

Your device is not water resistant. Keep it dry.

1.5 Emergency call

If any emergency arises, dial 112/911 (or other emergency call number) for emergency help. Due to the nature of cellular networking, the success of emergency call is not guaranteed.

2 Precautions for use of battery

- 2.1 Do not dispose of batteries near or in a fire to avoid dangers.
- 2.2 Do not dispose of batteries in the garbage. Dispose of batteries to assigned battery recycling center.

3 Cautions for children

Keep your device out the reach of children in case of accidental injury caused by incorrect use of the device as toys.

II. Keys and parts



- 1. Audio iack
- > 2. P-sensor
- > 3. Receiver
- 4. Front Camera
- 5. Light sensor
- 6. SIM Card Tray
 - 7. I CD
- 8. Mic
- 9. USB port
- 10. Speaker
- 11. Volume key
- 12. Power Kev
- 13.Rear camera
- 14.Rear sub camera
- > 15.Flash light
- 8 16.Fingerprint

III. Start to use

1 To insert SIM card(S):

Insert the SIM card correctly in the card slot(s), suggest switch off the phone when you insert SIM card.

Insert the Micro SD card into the slot with the correct direction (See figure below), suggest switch off the phone when you insert SIM card.

Note: Use only compatible memory cards with this device. Incompatible memory cards may damage the card or the device and corrupt the data stored in the card.



2 Charge the battery

During charging, the battery indicator on the phone is a thunder icon. If the device is switched off during charging, there will still be a charging indication on the screen that shows the phone is being charged. If the device is overused when the battery is low, the charging icon might take some time to appear.

When the battery indicator on the screen says 'Battery is full', thunder icon will disappear, which means the completion of charging. If the phone is switched off during charging, the screen will display 'Battery is full '. It generally takes 4 hours to charge the battery. During charging, the battery, the device and the charger will get hot. This is normal.

Unplug the charger from the AC electrical outlet and disconnect the wiring between the phone and the charger after charging.

Cautions: Charge the phone in a well ventilated place in which the temperature is between -10°C

to +55°C. Use the charger provided by the manufacturer only. The use of unconfirmed charger may lead to dangers and violate the manufacturer's warranty clause. If the temperature is too high or too low during charging, the device will automatically send a warning and stop charging to avoid damage to the battery or any danger.

IV. Basic functions

1 Lock and unlock the screen

Press power button to enter Sleep mode and meanwhile the screen will be locked; press power button again to wake up and then drag to up direction for unlock.



2 Make it yours

1. Home screen: It is your starting point to access all the features on your phone. It displays application icons, widgets, shortcuts, and other features. Long press home screen and Modify Wallpaper



2. Long press Home screen, and then you can Modify Wallpaper; or enter Launcher and long press and hold an application till the screen vibrates, and then release your finger hold.



Long press and hold the widget or icon you want to move. Once the phone vibrates, don't release your hold on the icon. Drag the widget or icon to a new location on the screen Press and hold on an icon till the phone vibrates, and drag the widgets or icon to the trash to remove!



Swipe up and enter to applaction list



3. Notification Bar: At the top of the screen, the Status Bar displays the time, status, and notifications. If there is a new message, missed call or something in the notification bar, you can drag it down to open notification panel and click the desired one to have a view. When you finished, you can close it by dragging the panel up or pressing "Back"





4. If you connect your phone to PC via USB, you can find the USB options, choose Media device (MTP) option you can see your phone memory in PC, this is same function like USB storage,

01.00	0x.00
nt ⊕ ≴ di ∰ X	C Preferencias de USB Q
P Interna Antonia +	Will controlado per
Cargando dispositiva mediante (818 Presiera para ver rela opciones.	O Dispositivo conectado
Administrat notificaciones	Eate dispositivo
	teritizar 1998 para la arguiterar
and the second	 Transferencia de archivos
Contraction of the second	O Conexión mediante USB
	O PTP
🎲 🗝 G 💽	Sin transferencia de dation
0 - 90	
4 0 0	4 0 0

3 Switch to Recently Used Application

Press menu key.



4 Make a call

 $\operatorname{Click} \bigcup$ and enter a complete phone number to make a call. Your phone supports smart search.



Swipe to right to view Favorite, Call history and Contacts.

5 Call log

09:00 🖼	.d****		09:00 🖬	
Todas las Barnadas 😁	399		< Detailes de la ll	amada 💠
No. Desultan, Guergitung	likees 🛈		075	00 1 8070 8666
		Press the number	3 de anaro 22.05 N	Automoto convectado O Segundos
		which you want see	2 de ersen 22.03 %	Asian, to convertado O llegandos
		the details or call	0755 8670 8666	0 0
		back, there is option for this.	Nuevo contacto	
			Guardar en existente	
			Afladido a la lista ne	PR
ili &	1 Tanada			
4 O	D		d	0 0


press the number, you can call back, view contact details etc.

6 Answering phone calls and rejection

Although there is a call, you can choose to answer or hang up directly.



Drag the icon, select the icon to select the answer or hang up.

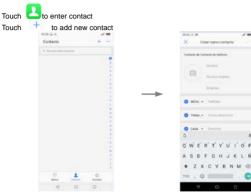


7. Add a contact

Click here to add new contact and in this page press menu key to enter menu view, setting, etc.

8. Send and Receive message(s)

Touch enter messaging, touch compose new message.

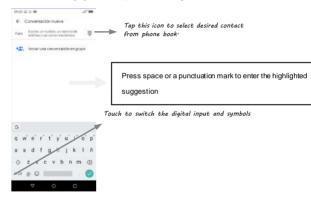

When you are composing a new text message, you can select text for cutting or copying. The selected text is highlighted in green.

0100.0.0	-1°-	01:00	udios, etc to sen
*	G 1	*	S 1
Para (1010)	-21	Para (1011)	4 <u>2</u> .
10.00		(*)	N
Conservations and a	494	Correspondence (Correspondence)	
Meneagie die bewite	N II	Disronage dis beach	
G			
Q'WE'R'T	U'I'O'P'		
ASDFGH	JKLN	Clariana .	
	120500000000000000		
* Z X C V B	N M 🖸		

When a new message comes, you can read by dragging notification panel and click the message, or entering Message to read it directly.

Long press one of the all message threads, you can delete thread".

9. Browser the Web

1. Set up Internet/Data connection

Enter Settings > More..., scroll down to find out Mobile network, and then enter "Access Points Names, choose the desired WAP account.

2. Switch on Data connection or Wi-Fi

To browse the web, you need to switch on Data connection. If there is Wi-Fi around, you can switch on Wi-Fi to use it browse the web.

10. Enjoy music

When you copy music to your SD card, the Music player searches the card for music files and builds a catalog of your music, based on information about each file that is stored in the file itself.



11. Download applications from Play Store

- 1. Add Google™ account
- 2. Enter play store and download apps





12. Manage Applications

Enter Setting > App. You can see app info.

00:00		141° 000	09:00 G W		
< A	pps y notificaciones	Q	< Info. de la aplicación O		
1005 H	diertus exclantariente		Google Play Música		
۲	Google Play Música Inici Familia		evitaliste		
0	Mensajes hair J Hersten		INHABILITAR FORZAR LA BETENCIÓN		
2	Contactori hare i minutar		Notificaciones		
0	Telefono		Permisos Paracito de presidente.		
			Espacio de almacenamiento 113 kil alado en atracionamiente prome-		
*	Fotos hace 10 minutes		Uso de datos		
Ver fai	s 29 apps		Bateria Inter-se la bateria de sin la citeria i espectempleria		
	paciones a jun totación appr		Abrir de forma predet. Configuerones configueronation ematecidad		
	prodeterminadas Frintisco, Minispro		Montoria Terubici un promoto de 200 KB de memoria en las		
	sos de aplicaciones e manatolación manthese seman	a - 5	Avantada		
Acces	io especial a apps		Mostrar sobre otras apps		
	4 O	0	4 0 0		

13. APPLICATIONS & UTILITIES

For your entertainment purpose, your device is provided with several interesting games, applications and utilities, such as Gmail, Email, Play store. Please ensure that you have GPRS setting in your device to access the applications. Contact your operator for GPRS settings. **Tips:** With connection to Wi-Fi network, this application can run normally, too.

14.Settings

14.1Wi-Fi

Open Wi-Fi, search nearly Wi-Fi and connect it, then you can use internet or download apps for free.

10	m-11	Q
	Unar MILES	-
٠	17.4 with	
+	17.0 with	
+	18.0 with	
*	A0051,245	
٠	A9651,30	
÷	HK, PH212	
+	Rouber	1
•	Koolee,17HR	
	printe	
*	19622-AP	
	PROFILESTAP	
•	4 0	0

14.2 Bluetooth

Open Bluetooth, connect to other phone, you can share something like music, photos, movies etc to other people





14.3 Security

Screen lock There are four screen lock you can choose Slide, Pattern, PIN, Password.



V. Technical Information

Model: Silver Max

Size Length: 155.3*74*8.5mm

Battery: 3300mAh (Rated)

Networks: 2G: 850/900/1800/1900MHz

3G: B2/B5

4G: B4/B7

Weight: 160g

Nominal voltage: 3.85V

Max. Voltage: 4.35V Google, Google Play and other marks are trademarks of Google LLC

VI. FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

 -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue.

Device types Silver Max (FCC ID: 2AEPISILVERMAX) has also been tested against this SAR limit. The highest reported SAR values for head, body-worn accessory, and product specific (Hotspot) are 1.12 W/kg, 1.06W/kg, and 1.06W/kg respectively. The Max simultaneous SAR is 1.38W/kg. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

5G

For 5150-5250 and 5725-5850 frequency band,

Operations in the 5150-5250 and 5725-5850 band are restricted to indoor usage only.

5G:

Any emission is maintained within the band of operation under all conditions of normal operation. The max. frequency stability is less than 20ppm.